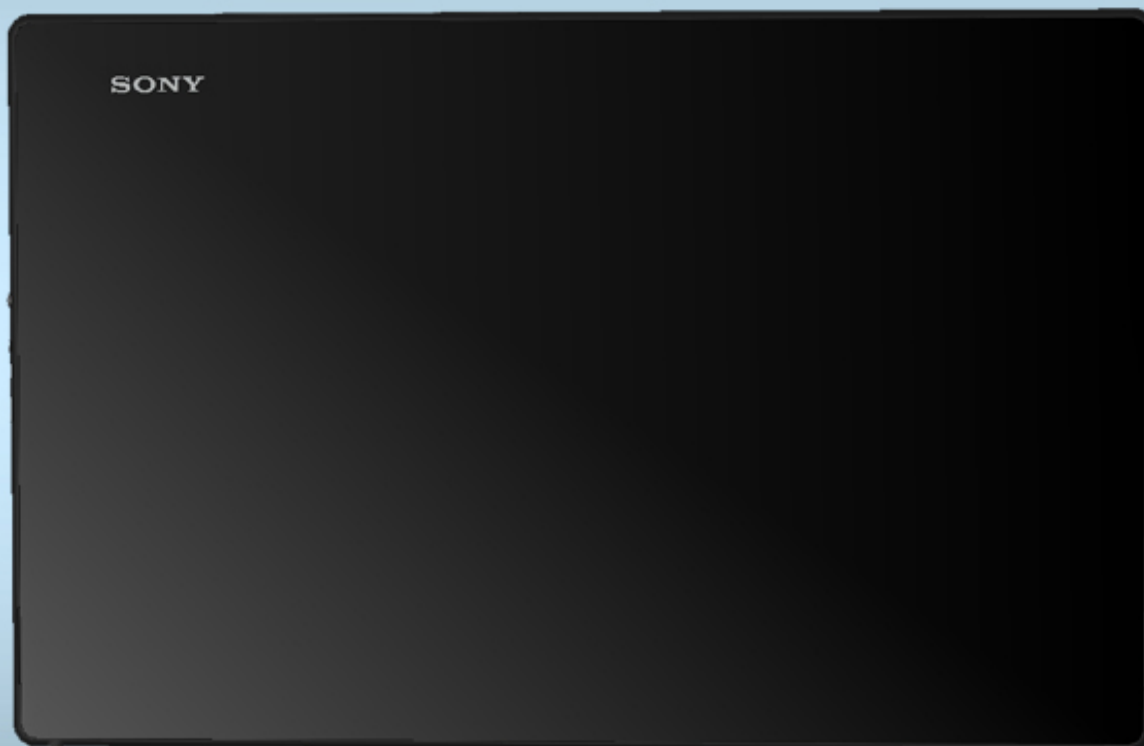 


Part List - mechanical -



Xperia™ Z4 Tablet
SGP712, SGP771

CONTENTS

| | | |
|---|------------------------|----|
| 1 | Part List | 3 |
| 2 | Revision History | 13 |

1 Part List

The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

RLC, Reversed Logistic Classification column for replaced part handling, See the Spare part handling chapter in Mechanical/Generic Repair Manual (1220-1333).

| Designation | Part No. | RLC | Part | Location |
|-------------------------|-----------|-----|--|---|
| Adhesive Battery | 1291-4701 | C |  |  |
| Adhesive FPC Key | 1291-4682 | C |  |  |
| Adhesive Hall Sensor | 1291-4685 | C |  |  |
| Adhesive Holder Key Top | 1291-4726 | C |  |  |
| Adhesive SPK | 1291-4308 | C |  |  |
| Adhesive SPK back | 1294-6809 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|---|------------------------|-----|--|---|
| Adhesive Vibrator | 1279-4780 | C |  |  |
| Adhesive Vol | 1291-4684 | C |  |  |
| Adhesive WR LCD | 1291-4764 | C |  |  |
| Antenna Main Antenna Main (SGP771) Antenna Main (W) (SGP712) | 1291-2231 1291-2260 | C |  |  |
| Antenna NFC | 1291-4643 | C |  |  |
| Antenna Sub Antenna Sub (SGP771) Antenna Sub (W) (SGP712) | 1291-2233 1291-2270 | C |  |  |
| Antenna WLAN Main | 1291-2241 | C |  |  |
| Antenna WLAN Sub | 1291-2246 | C |  |  |

 
 
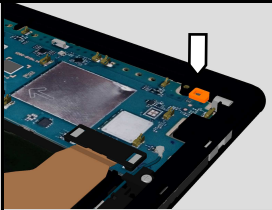 
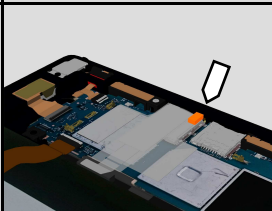 

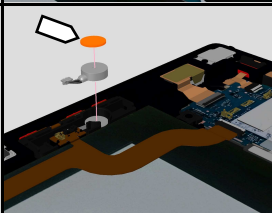 
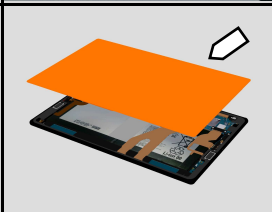 
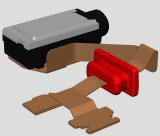 
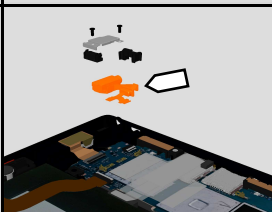 


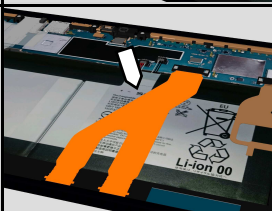 
SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|---|-------------------------|-----|---|---|
| Battery 6000.0 mAh | 1291-0052 | B |  |  |
| Cable RF Coax (only for SGP771) | 1291-6734 | C |  |  |
| Camera Chat 5 MPixel | 1290-9963 | B |  |  |
| Camera Main 8 MPixel | 1291-3378 | B |  |  |
| Cap Assembly Cap Assembly/Black Cap Assembly/White | 1291-4766 1291-4781. | C |  |  |
| Cap SP Assembly | 1278-2878 | C |  |  |
| Cushion Back Volume Bottom | 1291-4746 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|---|------------------------|-----|--|---|
| Cushion Back Volume Top | 1291-4744. | C |  |  |
| Cushion LED | 1295-1484 | C |  |  |
| Cushion Side Guide | 1292-6788 | C |  |  |
| Cushion Vibrator | 1292-2206 | C |  |  |
| Display Assembly Display Assembly/Black Display Assembly/White | 1294-9987 1294-9988 | A |  |  |
| FPC Assembly Audio Jack | 1291-2722 | C |  |  |
| FPC Assembly Relay Key | 1291-2678 | C |  |  |
| FPC Assembly Relay LCD | 1291-2676 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|--|------------------------|-----|--|---|
| FPC Assembly Relay USB | 1291-2665 | C |  |  |
| FPC Assembly Sensor | 1291-2657 | C |  |  |
| Frame DTV | 1291-4413 | C |  |  |
| Frame Main Assembly Frame Main Assembly/Black (G,W) Frame Main Assembly/White (G,W) | 1294-9970 1294-9975 | B |  |  |
| Frame SIM (only for SGP712) | 1291-4442 | C |  |  |
| Frame Sub Camera | 1291-4687 | C |  |  |
| Holder Audio Jack | 1291-4696 | C |  |  |
| Holder Audio Jack Grommet | 1291-4699 | C |  |  |

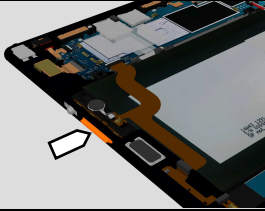 

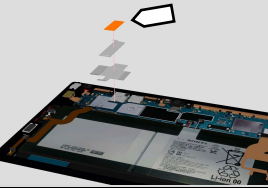 
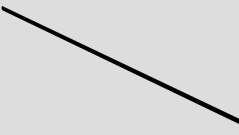 
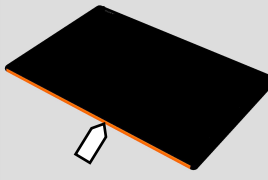 

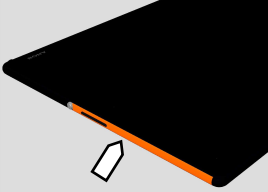 


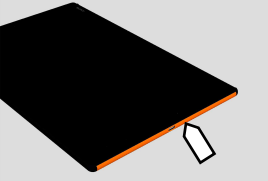 

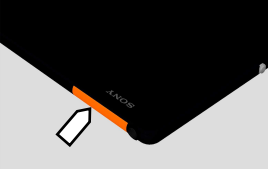 
 
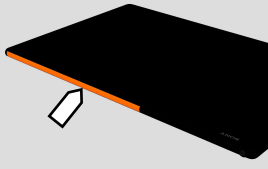 
SONY

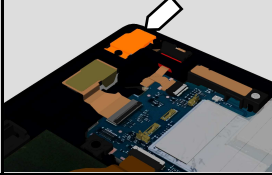 
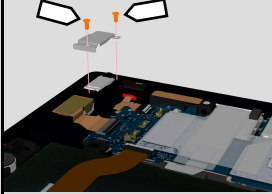 


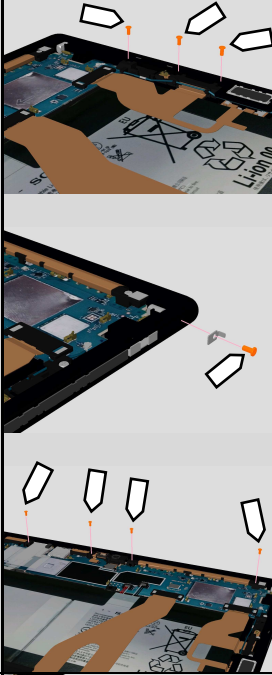 

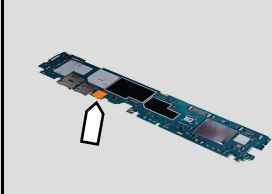 
Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|-------------------------|-----------|-----|---|---|
| Holder Co Axial | 1291-4706 | C |  |  |
| Holder FPC Key | 1291-4717 | C |  |  |
| Holder Key Sub Assembly | 1291-4720 | C |  |  |
| Holder LCD Relay BtB | 1278-2914 | C |  |  |
| Holder PBA | 1291-4466 | C |  |  |
| Holder USB Bottom | 1291-4703 | C |  |  |
| Holder USB Top | 1291-4702 | C |  |  |
| Key Gasket | 1270-2058 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|--|------------------------|-----|--|---|
| Key Volume Key Volume Black Key Volume White | 1291-4738 1291-4733 | C |  |  |
| Label Core Unit | 1291-4829 | C |  |  |
| Panel Bottom Panel Bottom/Black Panel Bottom/White | 1291-4795 1291-4813 | C |  |  |
| Panel Left Bottom Panel Left Bottom/Black Panel Left Bottom/White | 1291-4742 1291-4743 | C |  |  |
| Panel Left Top Panel Left Top/Black Panel Left Top/white | 1291-4799 1291-4821 | C |  |  |
| Panel Right Panel Right/Black Panel Right/White | 1291-4804 1291-4823 | C |  |  |
| Panel Top L Panel Top L/Black Panel Top L/White | 1291-4789 1291-4807 | C |  |  |
| Panel Top R Panel Top R/Black Panel Top R/White | 1291-4792 1291-4808 | C |  |  |

| Designation | Part No. | RLC | Part | Location |
|------------------|-----------|-----|---|---|
| Plate Audio Jack | 1291-4691 | C |  |  |
| Screw 1.4 x 3.0 | 1292-3390 | C |  |  |
| Screw M1.4 x 1.8 | 1292-3389 | C |  |  |
| Screw M1.4 x 3.0 | 1292-3387 | C |  |  |
| Sheet Chat CAM | 1284-5724 | C |  |  |
| Sheet CU PBA | 1295-1487 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|--|-----------|-----|--|---|
| Sheet Graphite PBA (only for SGP771) | 1291-4460 | C |  |  |
| Sheet Graphite PBA (only for SGP712) | 1292-3379 | C |  |  |
| Sheet Label | 1291-4463 | C |  |  |
| Sheet Label Guide | 1291-4465 | C |  |  |
| Sheet Spacer Graphite (only for SGP771) | 1296-1999 | C |  |  |
| Sheet Spacer Graphite (W) (only for SGP712) | 1296-2011 | C |  |  |
| Sheet Spacer PBA (W) (only for SGP712) | 1296-2012 | C |  |  |
| SIM Tray (only for SGP771) | 1291-3029 | C |  |  |

SONY

Part List (mech)

| Designation | Part No. | RLC | Part | Location |
|---------------------------|-----------|-----|---|---|
| Sub PBA (only for SGP771) | 1290-9466 | C |  |  |
| Terminal DTV | 1291-4419 | C |  |  |
| Top Speaker | 1277-7135 | C |  |  |
| Vibrator | 1264-2341 | C |  |  |
| Washer DTV Terminal | 1291-4411 | C |  |  |
| Water Indicator | 1255-4136 | C |  |  |

2 Revision History

| Rev. | Date | Changes / Comments |
|------|-------------|--------------------|
| 1 | 2015-May-08 | Initial release |