


Repair Movies

- mechanical -

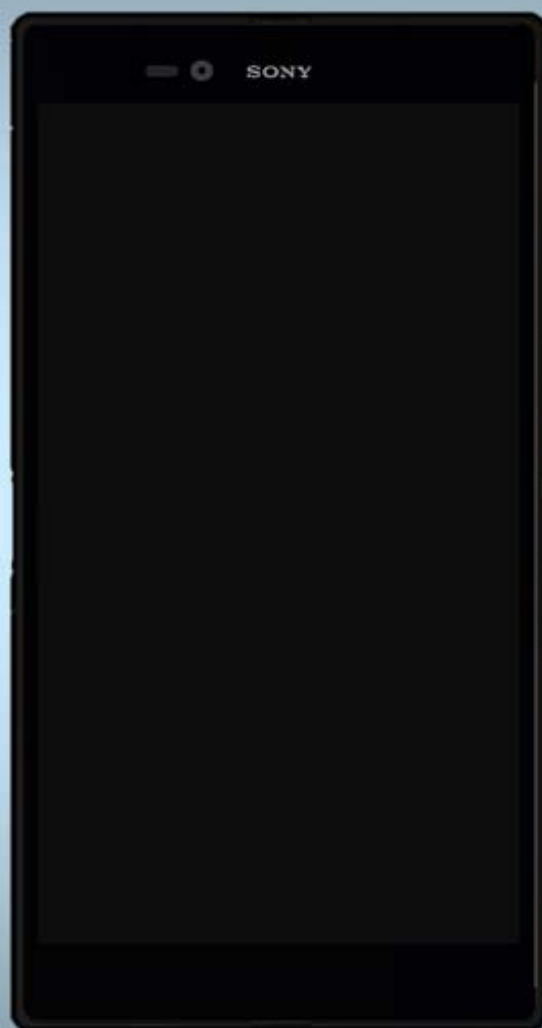

Xperia™ Z Ultra

C6802, C6806, C6833, C6843, XL39h

CONTENTS

1 Movies 3
 1.1 Disassembly 3
 1.2 Reassembly 3
2 Revision History 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.


If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies


1.1 Disassembly

- SIM Tray
- Back Panel Assy
- Antenna NFC Assy
- Battery 3000.0 mAh
- Camera 2 MPixel CMOS(a) & Plate Key Side(b)
- Carrier holder Mic Upper Sub Assy(a) & Shield Can Lid Bottom(b) & Carrier Holder LCD FPC(c)
- Antenna Main Assy
- Main PBA Assy(a) & Cover Front Assy(b)

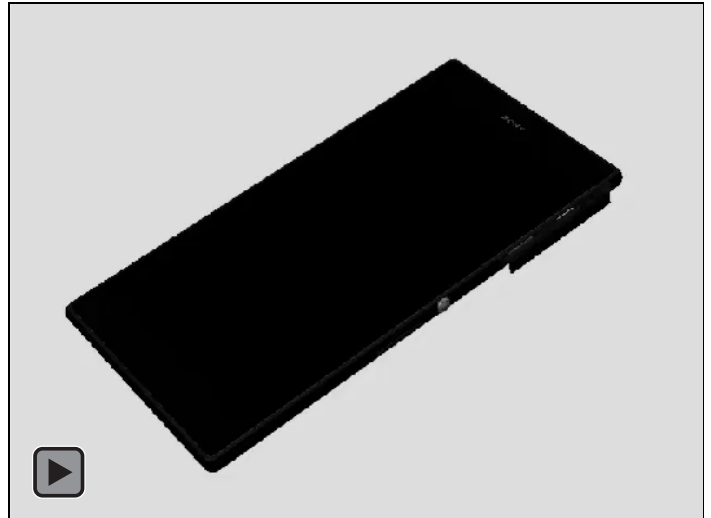

1.2 Reassembly

- Main PBA Assy(a) & Cover Front Assy(b)
- Antenna Main Assy
- Carrier Holder LCD FPC (a) & Shield Can Lid Bottom(b) & Carrier holder Mic Upper Sub Assy (c)
- Plate Key Side (a) & Camera 2 MPixel CMOS (b)
- Battery 3000.0 mAh
- Antenna NFC Assy
- Back Panel Assy
- SIM Tray

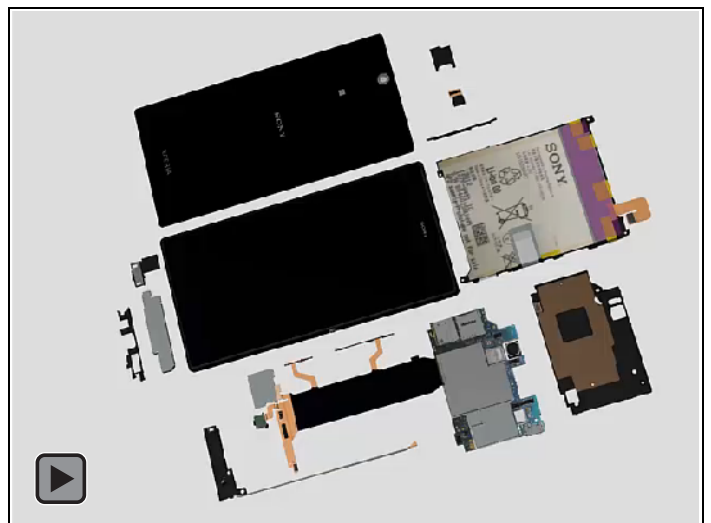

2 Revision History

Rev.	Date	Changes / Comments
1	2013-July-26	Initial release
2	2013-Aug-02	Update the Header and Footer
3	2013-Aug-30	Update the cover page
4	2013-Sep-12	Update the cover page
5	2013-Oct-17	Update the cover page