



Sony Ericsson

# Repair Movies

- mechanical -



*Sony Ericsson txt*  
*CK13i*

## CONTENTS

|          |                               |          |
|----------|-------------------------------|----------|
| <b>1</b> | <b>Movies .....</b>           | <b>3</b> |
| 1.1      | Disassembly .....             | 3        |
| 1.2      | Reassembly .....              | 3        |
| <b>2</b> | <b>Revision History .....</b> | <b>4</b> |

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.  
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.  
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***

# 1 Movies

## 1.1 Disassembly

- Battery Cover Assy
- Battery
- Front Cover Assy
- QWERTY Keypad
- Rear Cover Assy
- Display (a) and Main PBA (b)



## 1.2 Reassembly

- Main PBA (a) and Display (b)
- Rear Cover Assy
- QWERTY Keypad
- Front Cover Assy
- Battery
- Battery Cover Assy





## 2 Revision History

| Rev. | Date         | Changes / Comments |
|------|--------------|--------------------|
| 1    | 2011-Sept-09 | Initial release    |