

Repair Movies

- mechanical -



*Xperia™ T3, Xperia™ Style
D5102, D5103, D5106, M50w*

CONTENTS

1 Movies..... 3

1.1 Disassembly 3

1.2 Reassembly 3

2 Revision History..... 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select “Save Target As” to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies

1.1 Disassembly

D51 & M50w

The Disassembly is done to the following modules:

1. Battery Cover
2. Screw FPH(T5)M1.2 x 2.4 & Antenna GPS & Kapton Connector
3. Main PBA
4. Antenna Main RF
5. Battery 2300 mAh
6. Thermal Pad 2 & Front Cover Assy




1.2 Reassembly

D51 & M50w

The Re-assembly is done to the following modules:

1. Thermal Pad 2 & Front Cover Assy.
2. Battery 2300 mAh
3. Antenna Main RF
4. Main PBA
5. Screw FPH(T5)M1.2 x 2.4 & Antenna GPS & Kapton Connector
6. Battery Cover

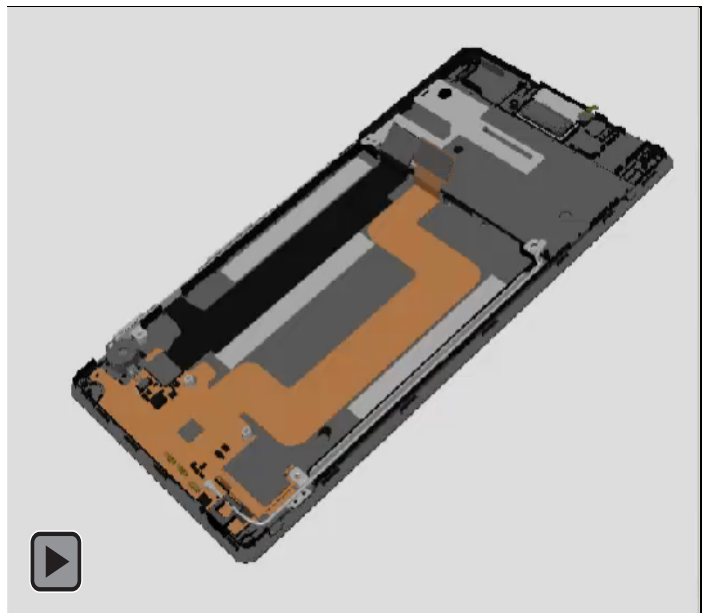

2 Revision History

| Rev. | Date | Changes / Comments |
|------|-------------|--------------------|
| 1 | 2014-Jun-25 | Released |