

Repair Movies

- mechanical -



Xperia™ C4 & C4 Dual

E5303, E5333, E5353, E5343, E5306, E5363

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.

In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies


1.1 Disassembly

1. Battery Cover
2. Battery Mylar
3. Screws
4. Rear Cover Ass'y
5. Main PBA
6. CU Label Tray
7. Link FPC
8. Coaxial Cable
9. SUB PBA
10. Battery 2600mAh & Front Cover Ass'y



1.2 Reassembly

1. Front Ass'y & Battery 2600mAh
2. SUB PBA
3. Coaxial Cable
4. Link FPC
5. CU Label Tray
6. Main PBA
7. Rear Cover Ass'y
8. Screws
9. Battery Conn Mylar
10. Battery Cover

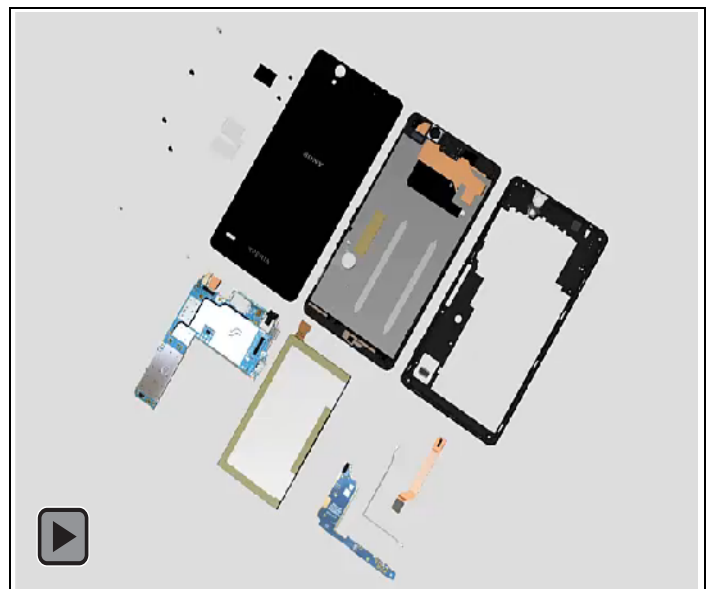

2 Revision History

Rev.	Date	Changes / Comments
1	2015-May-18	Released