

Repair Movies

- mechanical -



Xperia C5 Ultra
E5506, E5533, E5553, E5563

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.


In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies


1.1 Disassembly

1. Battery Cover Assy
2. Rear Cover Assy
3. Keys Side Panel Assy
4. Main Camera
5. Main PBA
6. Front Cover Assy

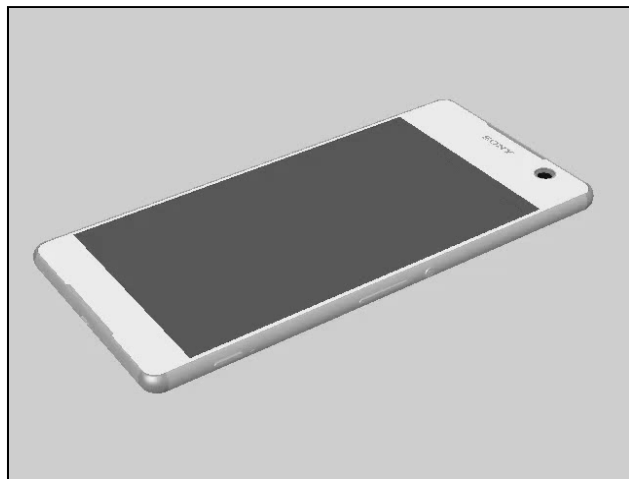

1.2 Reassembly

1. Front Cover Assy
2. Main PBA
3. Main Camera
4. Keys Side Panel Assy
5. Rear Cover Assy
6. Battery Cover Assy

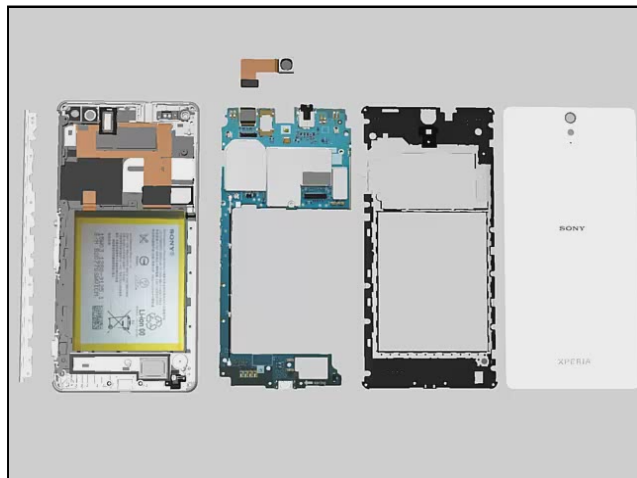

2 Revision History

Rev.	Date	Changes / Comments
1	2015-07-22	Initial release