

Part List

- mechanical -



Xperia™ XZ1
G8341, G8342 (Dual SIM), G8343



Part List (mech)

CONTENTS

1 Part List 3

2 Revision History 14

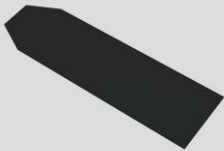 
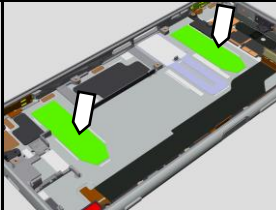 

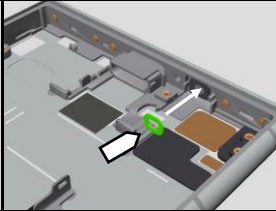 

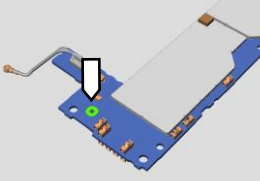 


 
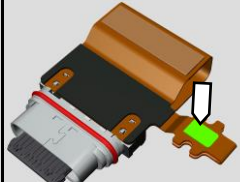 


1 Part List

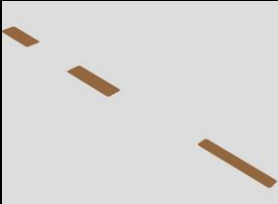 
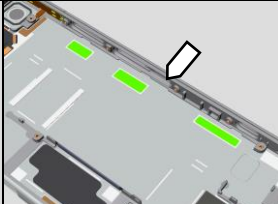 


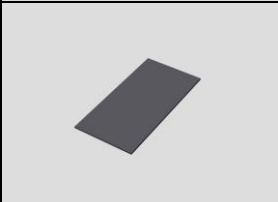 
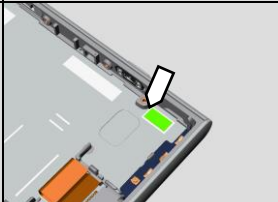 
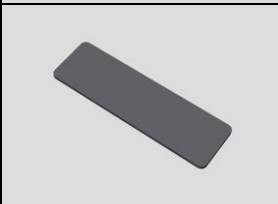 
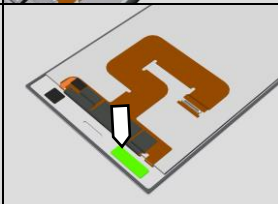 

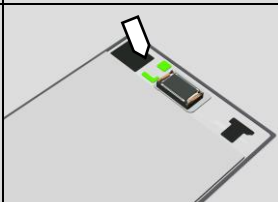 


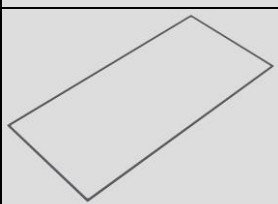 
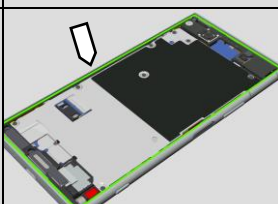 
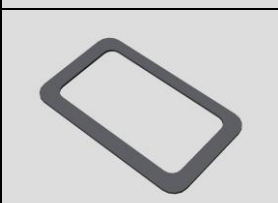 
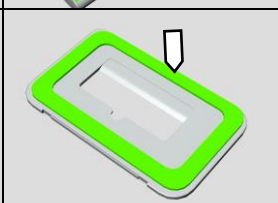 
The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.



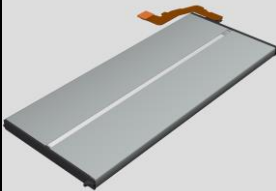 
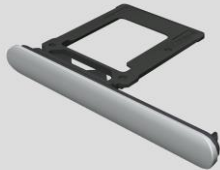 
RLC (Reversed Logistic Classification) column for replaced part handling, refer to the 3.4 Valid Spare Parts chapter in the Warranty Claim Instruction RE4249 about disposition of the parts.

Designation	Part No.	RLC	Part	Location
Adhesive Battery	1307-2470	C		
Adhesive Mic 1 Initially included in Cover Main.	1307-2459	C		
Adhesive Mic 1 PBA	1307-5556	C		
Adhesive Mic 2 Initially included in Cover Main.	1307-2464	C		
Adhesive RF Conductive FPC USB Sub Initially included in FPC USB.	1307-2812	C		
Adhesive RF Conductive GND USB	1311-5723	C		

Designation	Part No.	RLC	Part	Location
Adhesive RF Conductive Key FPC Initially included in Cover Main.	1307-2797	C		
Adhesive Sub PBA	1307-2455	C		
Adhesive Vib	1308-4612	C		
Adhesive Window Display Bottom	1307-2554	C		
Adhesive Window Display Top	1307-2551	C		
Adhesive WP Audio Jack	1294-6794	C		
Adhesive WR Display	1307-2549	C		
Adhesive WR Holder Speaker Top Initially included in Display.	1307-2564	C		

SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Adhesive WR Speaker Bottom Initially included in Display.	1302-1690	C		
Adhesive WR Speaker Box	1307-2468	C		
Adhesive WR Test	1307-2427	C		
Antenna NFC Initially included in Cover Main.	1307-3314	C		
Battery	1307-0625	C		
Cap Tray For G8341 and G8343 Cap Tray Assy Black Cap Tray Assy Silver Cap Tray Assy Rose Cap Tray Assy Blue For G8342 Cap Tray Assy DS Black Cap Tray Assy DS Silver Cap Tray Assy DS Rose Cap Tray Assy DS Blue	1309-6691 1309-6692 1309-6693 1309-6694 1309-6695 1309-6696 1309-6698 1309-6699	C		
Cover Main For India market Cover Main India Black For the other markets Cover Main RoW Black Cover Main RoW Silver Cover Main RoW Rose Cover Main RoW Blue	1309-6702 1310-1047 1310-1048 1310-1049 1310-1050	B		n/a

SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Cushion BtoB Cam	1311-6937	C		
Cushion Camera Initially included in Cover Main.	1307-2325	C		
Cushion Mic 2 PBA	1307-2465	C		
Cushion Shade Proximity Sensor	1309-4702	C		
Cushion Speaker Initially included in Display.	1302-1811	C		
Cushion Speaker Box	1308-6526	C		
<u>Display</u> Display Assy Black Display Assy Silver Display Assy Rose Display Assy Blue	1309-6778 1309-6835 1309-6836 1309-6838	B		
<u>Main Camera</u> FICTIVE Main Camera	1301-9332	B		

Designation	Part No.	RLC	Part	Location
Front Camera FICTIVE Sub Camera	1305-6527	B		
FP Sensor For Black FP Sensor Assy Black For Sliver, Pink, Blue FP Sensor Assy Silver	1309-6700 1309-6701	B		
FPC JK	1306-9131	C		
FPC Key	1306-9134	C		
FPC USB	1306-9136	C		
Gasket RF Conductive Audio Jack	1307-2539	C		
Gasket RF Conductive Front Camera	1307-2542	C		
Gasket RF Conductive USB FPC Initially included in FPC USB.	1310-7332	C		

SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Gasket WR Key Camera	1307-2435	C		
Gasket WR Key Volume	1307-2434	C		
Holder Ant Main For G8341 Holder Ant Main A For G8343 Holder Ant Main B For G8342 Holder Ant Main DS	1307-3580 1309-6274 1310-8001	C		
Holder Ant Sub	1307-3583	C		
Holder Front Camera	1299-7884	C		
Holder LCD BtoB	1307-2559	C		
Holder Main Camera	1299-7883	C		
Holder Mic 1 Initially included in Cover Main.	1307-2456	C		


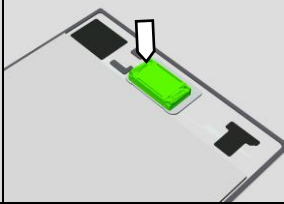 

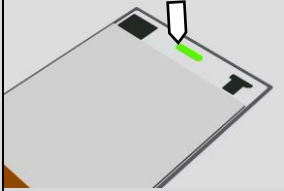 
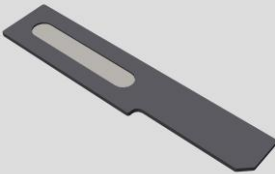 
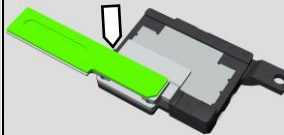 

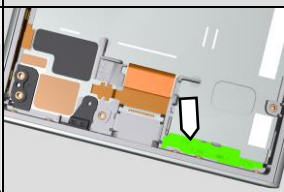 
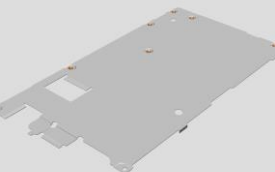 
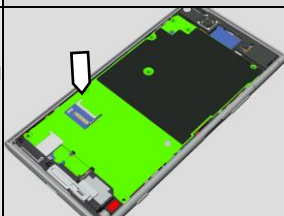 

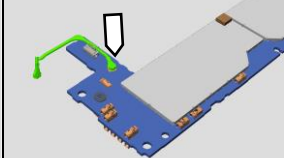 

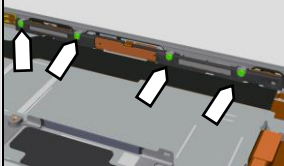 

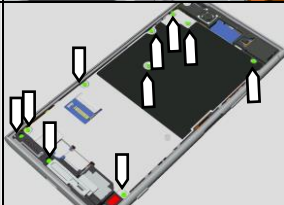 
SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Holder Mic 2 Initially included in Cover Main.	1307-2461	C		
Holder Sensor	1307-2451	C		
Holder Speaker Bottom	1307-2467	C		
Holder Speaker Top Initially included in Display.	1307-2563	C		
<u>Key Camera</u> Key Camera Black Key Camera Silver Key Camera Rose Key Camera Blue	1307-2433 1307-2633 1307-2688 1307-2702	C		
<u>Key Volume</u> Key Volume Black Key Volume Silver Key Volume Rose Key Volume Blue	1307-2432 1307-2632 1307-2687 1307-2701	C		
Label MoP	1307-2578	C		
Liquid indicator Initially included in Plate Display.	1275-3307	C		

SONY

Part List (mech)



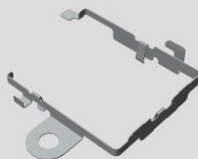 
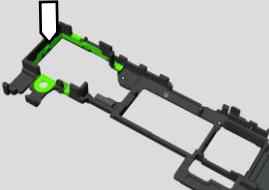 
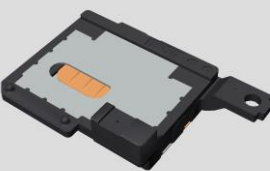 
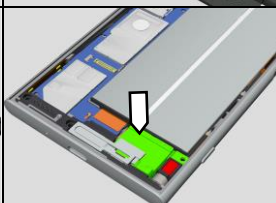 




Designation	Part No.	RLC	Part	Location
Loudspeaker Initially included in Display.	1287-2024	C		
Net Speaker Top Net Speaker Top Black Net Speaker Top Silver Net Speaker Top Rose Net Speaker Top Blue Initially included in Display.	1307-2550 1307-2637 1307-2690 1307-2706	C		
Net WR Speaker Bottom Net WR Speaker Bottom Black Net WR Speaker Bottom Silver Net WR Speaker Bottom Rose Net WR Speaker Bottom Blue	1307-2469 1307-2635 1307-2689 1307-2704	C		
PBA Sub For G8341 PBA Sub A For G8343 PBA Sub B For G8342 PBA Sub DS	1311-3998 1311-4002 1311-4001	C		
Plate Display	1307-2471	C		
RF Cable	1307-3871	C		
Screw M1.2x2.1	1309-7125	C		
Screw M1.4x3.8	1307-3473	C		

SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Sheet Battery Side Initially included in Cover Main.	1308-4871	C		
Sheet FPC USB	1311-9381	C		
Sheet Graphite Main Camera	1307-2476	C		
Sheet Graphite Plate Display	1307-2475	C		
Sheet Insulative Speaker Box	1307-3472	C		
Sheet Lightguide 3LED	1307-2454	C		
Sheet RF Conductive Front Camera	1307-2453	C		

Designation	Part No.	RLC	Part	Location
Sheet RF Conductive GND Camera	1311-0638	C		 
Sheet RF Conductive NFC Initially included in Cover Main.	1308-7774	C		
<u>Sheet Slider Label MoP</u> For G8341 Sheet Slider Label MoP A For G8343 Sheet Slider Label MoP B For G8342 Sheet Slider Label MoP DS	1310-7824 1310-7826 1310-7825	C		
Sheet Spacer Audio Jack	1311-2567	C		
Sheet Spacer Main Camera BtoB	1307-2452	C		
Sheet WR Mic Initially included in Cover Main.	1307-2425	C		 

Designation	Part No.	RLC	Part	Location
Sheet WR Test	1307-2426	C		
Shield Main Camera	1307-2547	C		
Speaker Box	1307-4037	C		
Thermal Gap Filler Syringe	For order: 1299-2102 For claim: 1302-7194	C		n/a
Thermal Gap Filler Tube Note! This part has an expiration date. Make sure to consume before expiration date.	For order: 1299-2101 For claim: 1302-7193	C		n/a
Tray Nano SIM	1307-2513	C		

2 Revision History

Rev.	Date	Changes / Comments
1	2017-08-25	Initial release
2	2017-09-01	Update cover image. Add marketing name.