



Sony Ericsson

Repair Movies

- mechanical -



R800i, R800a, R800x, R800at, Z1



CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

**For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.**

**If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.**

**For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical**



1 Movies


1.1 Disassembly

- Battery Cover
- Battery
- D-Cover
- Key Power
- PBA Audio Jack FPC
- PBA
- C-Cover
- B-Cover
- Cap Screw Cover
- Label Touch Circuit
- A-Cover
- LCD Shim
- Display



1.2 Reassembly

- Display
- LCD Shim
- A-Cover
- Label Touch Circuit
- Cap Screw Cover
- B-Cover
- C-Cover
- PBA
- PBA Audio Jack FPC
- Key Power
- D-Cover
- Battery
- Battery Cover

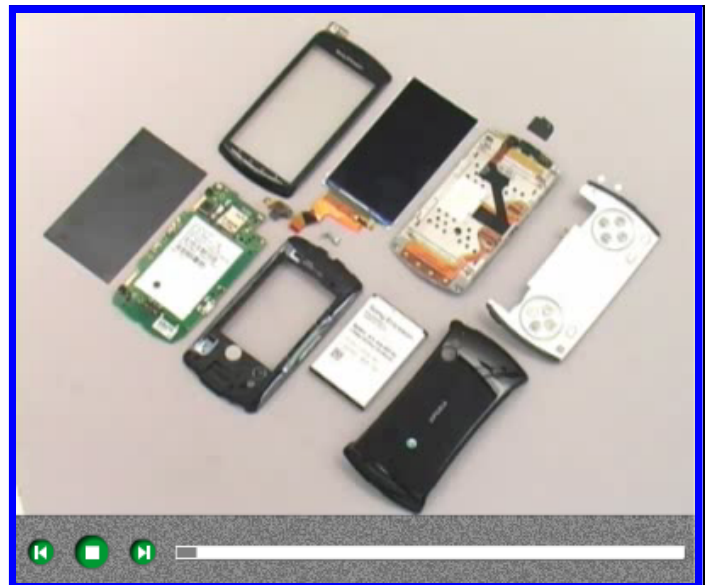



2 Revision History

Rev.	Date	Changes / Comments
1	2011-Mar-18	Initial release
2	2011-May-06	Tools update: tightening the Screw Torx Len:3.4 Diam:3.0 M1.6 X 0.35 with T6.
3	2011-May-09	No update of document