



Sony Ericsson

Repair Movies

- mechanical -



Yari
U100a, U100i

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.

In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Movies


1.1 Disassembly

1. Battery Cover
2. Battery
3. Keyboard Main
4. Rear Cover
5. Inner Frame and Main PBA
6. Inner Frame
7. Deco Plate
8. Front Cover
9. Display



1.2 Reassembly

1. Display
2. Front Cover
3. Deco Plate
4. Inner Frame
5. Inner Frame and Main PBA
6. Rear Cover
7. Keyboard Main
8. Battery
9. Battery Cover

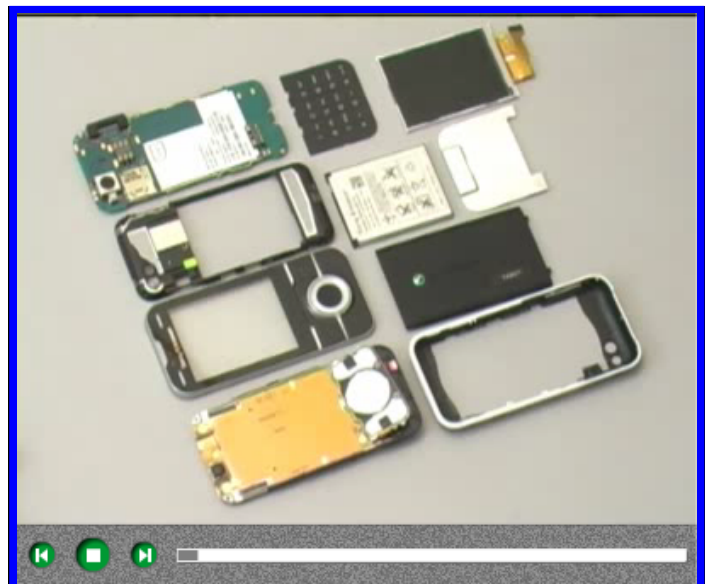



2 Revision History

Rev.	Date	Changes / Comments
1	2009-Sept-25	Initial release
2	2009-Oct-5	Commercial names added on front page.