



Sony Ericsson

Repair Movies

- mechanical -



Satio



CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies

1.1 Disassembly

1. Battery Cover
2. Battery
3. Rear Panel Sub Assy
4. Main Antenna
5. Front Cover Sub Assy
6. Rear Cover Sub Assy
7. Antenna (Wlan/GPS)
8. Xenon Flash Module
9. PCB (a) & Frame PWB Sub Assembly with Display (b)
10. Camera 12.1M MPixel



1.2 Reassembly

1. Camera 12.1M MPixel
2. PCB (a) & Frame PWB Sub Assembly with Display (b)
3. Xenon Flash Module
4. Antenna (Wlan/GPS)
5. Rear Cover Sub Assembly
6. Front Cover Sub Assembly
7. Main Antenna
8. Rear Panel Sub Assy
9. Battery
10. Battery Cover





2 Revision History

Rev.	Date	Changes / Comments
1	2009-Sep-19	Initial release