



Sony Ericsson

Repair Movies

- mechanical -



Zyl0
W20, W20i

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies

1.1 Disassembly

1. Battery Cover & Battery
2. Lower Rear Cover
3. Main antenna/Speaker box
4. Main PBA
5. Decoration Sheet
6. Core Unit Label
7. Upper Front Cover Assy
8. Sub keyboard
9. Display & Display Gasket
10. Lower Front Cover Assy & Hinge Metal Slider



1.2 Reassembly

1. Lower Front Cover Assy & Hinge Metal Slider
2. Display & Display Gasket
3. Sub keyboard
4. Upper Front Cover Assy
5. Core Unit Label
6. Decoration Sheet
7. Main PBA
8. Main antenna/Speaker box
9. Lower Rear Cover Assy
10. Battery & Battery Cover





2 Revision History

Rev.	Date	Changes / Comments
1	2010-June-28	Initial release