



## **CN SWM C**

**Document type: Reference Manual**

**Document ID: A30880-A10-A001-75-D376**

**AT Command set for Master BenQ mobile phones and modems**

**Release/Version: Master R75**

**Date: 10. February, 2006**

---

Issued by

Comneon GmbH & Co OHG
CN MUC
Rosenheimerstr. 116
81669 Munich

Copyright © Comneon 2006      All Rights Reserved.

Comneon GmbH & Co OHG

## Table of Contents

Table of Contents .....	iii
1 General information .....	1
1.2 Abbreviations and glossary .....	1
1.3 Notational Conventions .....	1
1.4 Related documentation .....	2
1.4.1 Related internal documentation .....	2
1.4.2 Related Standardisation documentation .....	2
2 Software interface .....	4
2.1 Overview of the supported AT command set .....	4
2.1.1 Alphabetical list of all 3GPP TS 27.007 commands .....	4
2.1.2 Alphabetical list of all 3GPP TS 27.005 commands .....	6
2.1.3 Alphabetical list of all V250 commands .....	7
2.1.4 Alphabetical list of all FAX commands .....	7
2.1.5 Alphabetical list of all Bluetooth-related commands .....	8
2.1.6 Alphabetical list of all BenQ-specific commands .....	8
2.1.7 Alphabetical list of developers' commands .....	10
2.2 The AT command set .....	11
2.2.1 Commands that can be executed without the PIN .....	11
2.2.2 Commands that can be interrupted .....	12
2.2.3 Generic TA control commands according to ITU-T V.250 .....	12
2.2.4 Command combinations to be avoided .....	17
2.3 AT commands and responses according to 3GPP TS 27.007 .....	18
2.3.1 General commands according to 3GPP TS 27.007 .....	18
2.3.2 Call control commands .....	21
2.3.3 Network service related commands .....	23
2.3.4 Commands related to mobile equipment control and status .....	35
2.3.5 Extensions of Hayes Standard commands for GPRS .....	54
2.3.6 Commands for GPRS .....	55
2.3.7 Commands related to mobile equipment errors .....	74
2.3.8 TIA IS-101 commands ("Voice control interim standard for asynchronous DCE") .....	74
2.4 General commands according to 3GPP TS 27.005 .....	76
2.5 Modem commands .....	86
2.6 Fax commands .....	88
2.7 Bluetooth related commands .....	101
2.8 General commands according to ITU-T Recommendation V.250 .....	104
2.9 BenQ defined commands .....	105
2.10 Developers' commands .....	149
2.12 List of all Unsolicited result codes .....	151
3 Appendix A .....	154
3.1 Factory settings made by AT&F .....	154
3.2 Features of the Telephone book memory .....	155
3.3 Writing to the FDN Phonebook / FDN Replacement .....	156
3.4 How to use special characters in certain commands ( e. g., AT+CPBW) .....	156
3.5 S Registers .....	158
3.6 Circuit assignments .....	159
4 Appendix B .....	160
4.1 Example for creating / retrieving an organizer entry .....	160
4.2 Examples and hints for using GPRS commands .....	161
4.2.1 Defining and using a Context Definition Id (CID): .....	161
4.2.2 Defining Quality of service for a CID .....	163
4.3 The GPRS dial command ATD .....	166
5 Appendix C .....	167

---

5.1	Enum E_RegistryHMIKeys .....	167
5.2	Enum E_AuMa_Purpose .....	170
5.3	typedef enum SAE_Event_definitions .....	171
5.3.1	Enums for S75, SL75, S68 .....	171
5.3.2	Enums for EL71 .....	172
6	Errors and Messages .....	174
6.1	Summary of CME ERRORS (+CME ERROR) related to 3GPP TS 27.007 .....	174
6.2	Summary of CMS ERRORS (+CMS ERROR) related to 3GPP TS 27.005 .....	175
6.3	GSM return values issued by AT+CEER .....	177
6.3.1	Return values issued by AT+CEER for Radio Resource .....	177
6.3.2	Return values issued by AT+CEER for Mobility Manager .....	177
6.3.3	Return values issued by AT+CEER for Call Control .....	178
6.4	GPRS return values issued by AT+CEER .....	179
6.4.1	Return values issued by AT+CEER for GPRS Layer 3 Mobility Management .....	179
6.4.2	GSM return values issued by AT+CEER for Session Manager .....	180
6.4.3	Internal values of Session Manager issued by AT+CEER .....	180
6.4.4	Internal values GAPI issued by AT+CEER .....	181
6.4.5	Internal values of Link Manager issued by AT+CEER .....	181
6.4.6	Internal values of IP stack issued by AT+CEER (ENIP_LOC_OWN) .....	181
6.5	List of keys implemented for AT+CKPD / AT^SKPD .....	181
6.6	Use of BenQ specific Key O/o .....	183
6.7	Use of BenQ specific Key X/x .....	183
6.8	List of Commands related to CSCS / UCS2 .....	183
6.9	Result codes .....	184
6.10	List of *# codes .....	185
7	Index .....	187

## List of Tables

Table 2-1: Supported 3GPP TS 27.007 commands [15]	6
Table 2-2: Supported 3GPP TS 27.005 commands [14]	7
Table 2-3: Supported commands according to ITU-T Recommendation V.250 [16]	7
Table 2-4: Supported commands according to ITU-T Recommendation TR29.2 [20]	7
Table 2-5: Supported Bluetooth-related commands [19]	8
Table 2-6: Supported BenQ-specific commands	9
Table 2-7: Generic TA control commands supported according to ITU-T V.25	14
Table 2-8: Conventions applying to the presentation of AT commands	18
Table 2-9: List of dummy FAX commands (Fax Class 2)	88
Table 2-10: List of unexpected messages	153
Table 3-1: Features of the telephone book memory	155
Table 3-2: Using escape characters in commands	157
Table 3-3: Using escape characters in GSM commands	158
Table 3-4: S-Registers	158
Table 6-1: CME ERRORS related to 3GPP TS 27.007	175
Table 6-2: CMS ERRORS related to 3GPP TS 27.005	176
Table 6-3: GSM return values issued by AT+CEER	177
Table 6-4: Radio Resource return values issued by AT+CEER	177
Table 6-5: Mobility Manager return values issued by AT+CEER	178
Table 6-6: Call control return values issued by AT+CEER	179
Table 6-7: GPRS return values	179
Table 6-8: Return values issued by AT+CEER for GPRS Layer 3 Mobility Management	180
Table 6-9: GMM return values issued by AT+CEER	180
Table 6-10: Internal values of Session Manager issued by AT+CEER	180
Table 6-11: GAPI values issued by AT+CEER	181
Table 6-12: LMAN return values issued by AT+CEER	181
Table 6-13: ENIP return values issued by AT+CEER	181
Table 6-14: Result codes	184
Table 6-15: List of *# codes	185



## 1 General information

This document constitutes the manual reference to the AT command set supported by <master> BenQ mobile phones.

### 1.2 Abbreviations and glossary

The following abbreviations and terms are used throughout this specification:

Abbreviation / Term	Meaning
ALS	Alternate Line Service
CSD	Circuit Switched Data
CTS	Clear to send
CUG	Closed User Group
DCE	Data Carrier Equipment
DSR	Data Set Ready
DTE	Data Terminal Equipment
DTR	Data Terminal Ready
FDN	Fixed dialling numbers
GPP	Generation Partnership Project
IMEI	International Mobile Station Equipment Identity
IMSI	International Mobile Subscriber Identity
ME	Mobile Equipment
PDU	Protocol Data Unit
PIN	Personal Identification Number
PPP	Point-to-Point Protocol
PUK	PIN Unblocking Key
RLP	Radio Link Protocol
RTS	Ready to send
SIM	Subscriber Identity Module
SNDCP	Subnetwork Dependency Convergence Protocol
SWIM	Smart card that has both SIM and WIM applications
TA	Terminal Adapter
TE	Terminal Equipment
UDI	Unrestricted Digital Information
WIM	Wireless Identification Module

### 1.3 Notational Conventions

The following notational conventions apply throughout this manual:

Convention	Meaning
Case sensitivity	Although the names of commands are not case-sensitive, cases should not be mixed. Either “AT” or “at” should be specified, but neither “aT” nor “At”. Throughout this manual, “AT” is used
007	Leading zeroes in strings can be omitted
Letters and digits	Letters and digits in the Courier New font indicate parameter names and values
<u>abc</u>	<u>Underlined</u> parameter values indicate the recommended default setting of this parameter.

Document No.: A30880-A10-A001-75-D376  
Revision: Master R75  
Revision Date: 10.February, 2006

	In <i>parameter type</i> commands, this value should be used in factory settings which are configured by V.250 command &F0. In <i>action type</i> commands, this value should be used when parameter is not given
" ... "	Double quotes (") are used to indicate text strings
@	Symbols (e. g. @) inside quotes are interpreted as text strings
Comma (,)	Commas are used as delimiters for strings which are not included in double quotes
Spaces	Spaces inside strings are ignored unless they are included in double quotes
<CR>	Carriage return character as specified with the S3 command
<LF>	Linefeed character as specified with the S4 command
<..>	Angle brackets are used to denote a syntactical element. Angle brackets do not appear in the command line
[ ... ]	Square brackets are used to indicate that a parameter of a command or part of TA information response is optional. Square brackets do not appear in the command line.  If a parameter is omitted in a command that has parameters, the parameter retains its present value. In action type commands, action should be done on the basis of the recommended default setting of the parameter  If an optional parameter ([<value>]) is omitted in V.250 commands, its assumed value is 0

## 1.4 Related documentation

All documents listed in this section are related to the current document.

### 1.4.1 Related internal documentation

The following internal documents are related to the current document:

- [1] Design Specification K1-Sat
- [2] "(Unsolicited) result codes issued by Remote Control-related calls"

### 1.4.2 Related Standardisation documentation

The following standardisation documents are related to the current document:

- [3] GSM 02.22: "Digital cellular telecommunication system (Phase 2+); Personalisation of GSM Mobile Equipment (ME) Mobile functionality specification".
- [4] GSM 02.30: "Digital cellular telecommunication system (Phase 2+); Man-Machine Interface (MMI) of the Mobile Station (MS)".
- [5] GSM 03.38: "Digital cellular telecommunication system (Phase 2+); Alphabet and language specific information".
- [6] GSM 03.40: Digital cellular telecommunications system (Phase 2+); Technical realization of the Short Message Service (SMS) Point-to-Point (PP)
- [7] GSM 03.41: "Digital cellular telecommunications system (Phase 2+); Technical realization of Short Message Service Cell Broadcast (SMSCB)".
- [8] GSM 04.08: "Digital cellular telecommunication system (Phase 2+); Mobile radio interface layer 3 specification".



- [9] GSM 04.11: "Digital cellular telecommunication system (Phase 2+); Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".
- [10] GSM 05.08: "Digital cellular telecommunication system (Phase 2+); Radio subsystem link control".
- [11] GSM 11.11: Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module - Mobile Equipment (SIM-ME)
- [12]
- [13] 3GPP TS 24.008: "3rd Generation Partnership Project; Mobile Radio Interface Layer 3 specification; Core Network Protocols-Stage 3".
- [14] 3GPP TS 27.005: "Digital cellular telecommunication system (Phase 2+); Radio transmission and reception".
- [15] 3GPP TS 27.007: "Digital cellular telecommunications system (Phase 2+); AT command set for GSM Mobile Equipment (ME)
- [16] ITU-T Draft new Recommendation V.250 "Serial asynchronous automatic dialling and control"
- [17] ITU-T Recommendation T.31: "Asynchronous facsimile DCE control, service class 1"
- [18] ITU-T Recommendation T.32: "Asynchronous facsimile DCE control, service class 2"
- [19] Hands-free Profile Adopted Version 1.0, 2003-04-29, by Bluetooth SIG Car Working Group; Doc no. CAR\_x\_SPEC/V1.0)
- [20] TR29.2: Standards Proposal No. 2388, Proposed New Standard "Asynchronous Facsimile DCE Control Standard" (if approved, to be published as EIA/TIA-592), October 1990
- [21] V29: 9600 bits per second modem standardized for use on point-to-point 4-wire leased telephone-type circuits
- [22] ITU-T Draft new Recommendation V27ter: 4800/2400 bits per second modem standardized for use in the general switched telephone network

## 2 Software interface

All supported AT commands, settings and the responses according to 3GPP TS 27.007 are explained in this chapter

### 2.1 Overview of the supported AT command set

This section provides overviews of the supported sets of AT commands, separate for each type of command set.

#### 2.1.1 Alphabetical list of all 3GPP TS 27.007 commands

Table 2-1 lists all the supported 3GPP TS 27.007 AT commands in alphabetical order, and indicates the type of command as defined in the 3GPP TS 27.007 standard:

27.007 command	Function	Type of command	Page
AT+CACM	Accumulated call meter	Mobile equipment control	35
AT+CALM	Alert sound mode	Mobile equipment control	35
AT+CAMM	Accumulated call meter maximum	Mobile equipment control	36
AT+CAOC	Advice of charge	Network service	23
AT+CBC	Battery charge	Mobile equipment control	36
AT+CBST	Select bearer service type	Modem command	86
AT+CCFC	Call forwarding number and conditions	Network service	23
AT+CCLK	Clock	Mobile equipment control	36
AT+CCWA	Call waiting	Network service	24
AT+CEER	Query the reason for disconnection of last call	Call control	21
AT+CGACT	PDP context activate or deactivate	GPRS	55
AT+CGANS	Manual response to a network request for PDP context activation	GPRS	55
AT+CGATT	GPRS attach or detach	GPRS	56
AT+CGAUTO	Auto response to a network request for PDP context activation	GPRS	56
AT+CGCLASS	GPRS mobile station class	GPRS	57
AT+CGCMOD	PDP context Modify	GPRS	57
AT+CGDATA	Enter data state	GPRS	57
AT+CGDCONT	Define PDP Context	GPRS	58
AT+CGDSCONT	Define Secondary PDP Context	GPRS	59
AT+CGEQMIN	3G Quality of Service Profile (Minimum acceptable)	UMTS	60
AT+CGEQREQ	3G Quality of Service Profile (Requested)	UMTS	62
AT+CGEREP	GPRS event reporting	GPRS	65
AT+CGMI	Issue manufacturer ID code	General	18
AT+CGMM	Issue model ID code	General	18
AT+CGMR	Output the GSM telephone version	General	19

AT+CGPADDR	Show PDP address	GPRS	69
AT+CGQMIN	Quality of Service Profile (Minimum acceptable)	GPRS	66
AT+CGQREQ	Quality of Service Profile (Requested)	GPRS	68
AT+CGREG	GPRS network registration status	GPRS	69
AT+CGSMS	Select service for MO SMS messages	GPRS	70
AT+CGSN	Output the serial number (IMEI)	General	19
AT+CGTFT	Traffic Flow Template	GPRS	71
AT+CHLD	Call hold and multiparty	Network service	25
AT+CHUP	Hangup call	Call control	21
AT+CIMI	Output of IMSI	General	19
AT+CIND	Indicator Control	Mobile equipment control	37
AT+CKPD	Keypad control	General	19
AT+CLCC	List Current Calls	Network service	25
AT+CLCK	Switch locking on and off	Network service	26
AT+CLIP	Calling Line Identification Presentation	Network service	27
AT+CLIR	Calling Line Identification Restriction	Call control	28
AT+CLVL	Loudspeaker volume level	Mobile equipment control	39
AT+CMEC	Mobile Termination control mode	Mobile equipment control	39
AT+CMEE	Expanded error messages according to 3GPP TS 27.007	Mobile equipment error	74
AT+CMER	Mobile Termination control mode	Mobile equipment control	40
AT+CMUT	Mute control	Mobile equipment control	41
AT+CNUM	Read own numbers	Mobile equipment control	29
AT+COLP	Connected Line Identification Presentation	Call control	30
AT+COPN	Read operator names	Network service	30
AT+COPS	Commands concerning selection of network operator	Network service	31
AT+CPAS	Query the telephone status	Mobile equipment control	42
AT+CPBF	Find book entries	Mobile equipment control	42
AT+CPBR	Read a telephone-book entry	Mobile equipment control	43
AT+CPBS	Select a telephone book	Mobile equipment control	44
AT+CPBW	Write a telephone-book entry	Mobile equipment control	44
AT+CPIN	Enter PIN and query lock	Mobile equipment control	45
AT+CPOL	Preferred operator list	Network service	32
AT+CPUC	Price per unit and currency table	Mobile equipment control	47
AT+CPWD	Change password to a lock	Network service	32
AT+CR	Service reporting control	General	21
AT+CRC	Cellular result codes	General	22
AT+CREG	Network registration	Network service	33
AT+CRLP	Select radio link protocol parameter for originating non-transparent data call	Modem command	86

AT+CRMP	Ring Melody Playback	Mobile equipment control	47
AT+CRSL	Ringer sound level	Mobile equipment control	48
AT+CRSM	Restricted SIM access	Mobile equipment control	48
AT+CSCS	Select TE character set	General	20
AT+CSDF	Set Date Format	Mobile equipment control	49
AT+CSGT	Get / Set Own Greetings	Mobile equipment control	49
AT+CSQ	Output signal quality	Mobile equipment control	50
AT+CSSN	Supplementary service notifications	Network service	34
AT+CSTF	Set Time Format	Mobile equipment control	50
AT+CSVM	Set voice mail number	Mobile equipment control	51
AT+CTZR	Time Zone Reporting	Mobile equipment control	51
AT+CTZU	Automatic Time Zone Update	Mobile equipment control	52
AT+CVIB	Vibrator mode	Mobile equipment control	53
AT+GSN	Output the serial number (IMEI)	General	20
AT+VTD	Set duration of a DTMF tone	TIA IS101	74
AT+VTS	Send a DTMF tone	TIA IS101	74
AT+WS46	Select wireless network	General	20

**Table 2-1: Supported 3GPP TS 27.007 commands [15]**

### 2.1.2 Alphabetical list of all 3GPP TS 27.005 commands

Table 2-2 lists all the supported 3GPP TS 27.005 AT commands in alphabetical order, and indicates the type of command as defined in the 3GPP TS 27.005 standard:

27.005 commands	Function	Type of command	Page
AT+CMGC	Send an SMS command	Message sending and writing	76
AT+CMGD	Delete an SMS in the SMS memory	Message sending and writing	76
AT+CMGF	SMS format	General configuration	77
AT+CMGL	(Short) Message List	Message receiving and reading	77
AT+CMGR	(Short) Message Read (SMS	Message receiving and reading	78
AT+CMGS	(Short) Message Send	Message sending and writing	78
AT+CMGW	(Short) Message Write (SMS to the SMS memory	Message sending and writing	79
AT+CMMS	More (Short) Message to Send	Message sending and writing	79
AT+CMSS	Send an SMS from the SMS memory	Message sending and writing	80
AT+CMUX	Multiplexing Mod		80
AT+CNMA	Acknowledgment of a short message directly output	Message receiving and reading	80
AT+CNMI	New	Message receiving and reading	81

AT+CPMS	Preferred SMS message storage	General configuration	83
AT+CSCA	Address of the SMS service centre	Message configuration	84
AT+CSCB	Select cell broadcast messages	Message configuration	84
AT+CSMS	Selection of message service	General configuration	85

**Table 2-2: Supported 3GPP TS 27.005 commands [14]**

### 2.1.3 Alphabetical list of all V250 commands

Table 2-3 lists all the supported “V250” AT commands in alphabetical order:

Command	Function	Page
AT+GCAP	Request Capabilities List	104
AT+IPR	Fixed DTE rate	104

**Table 2-3: Supported commands according to ITU-T Recommendation V.250 [16]**

### 2.1.4 Alphabetical list of all FAX commands

Table 2-3 lists all the supported AT commands for FAX services in alphabetical order:

Command	Function	Page
AT+FBADLIN	Define or read number of bad lines	89
AT+FBADMUL	Define, read or test number of bad lines	89
AT+FBOR	Query the bit order for receive mode	90
AT+FCIG	Query or set the Local polling id	90
AT+FCLASS	Select, read or test FAX service class	91
AT+FCQ	Control Copy Quality	91
AT+FCR	Capability to receive	92
AT+FDCC	Select service for MO SMS messages	92
AT+FDFFC	Data Compression Format Conversion	93
AT+FDIS	Query or set session parameters	93
AT+FDR	Begin or continue phase C data reception	95
AT+FDT	Data Transmission	95
AT+FET	End a page or document	96
AT+FK	Kill operation, orderly FAX abort	96
AT+FLID	Query or set session parameters	96
AT+FMDL	Identify Product Model	97
AT+FMFR	Request Manufacturer Identification	97
AT+FOPT	Set bit order independently	97
AT+FPHCTO	DTE Phase C Response Timeout	97
AT+FREV	Identify Product Revision	98
AT+FRH	Receive Data Using HDLC Framing	98
AT+FRM	Receive Data	98
AT+FRS	Receive Silence	99
AT+FTH	Transmit Data Using HDLC Framing	99
AT+FTM	Transmit Data	99
AT+FTS	Stop Transmission and Wait	100
AT+FVRFC	Vertical resolution format conversion	100

**Table 2-4: Supported commands according to ITU-T Recommendation TR29.2 [20]**

### 2.1.5 Alphabetical list of all Bluetooth-related commands

Table 2-5 lists all the supported Bluetooth-related AT commands in alphabetical order:

Command	Function	Page
AT+BINP	Phone number corresponding to the last voice tag recorded in the HF	101
AT+BLDN	Redial Last Number	101
AT+BRSF	Report Supported Features	101
		102
AT+BSIR	In-band Ring Tone Command	102
AT+NREC	Noise Reduction and Echo Canceling	102
AT+VGS	Gain of the Speaker Volume	103
AT^SABD	Accessory for Bluetooth Data	105
AT^SPTT	Push To Talk	139

**Table 2-5: Supported Bluetooth-related commands [19]**

### 2.1.6 Alphabetical list of all BenQ-specific commands

Command	Function	Page
AT^SABD	Accessory for Bluetooth Data	105
AT^SACD	Accessory Data	105
AT^SACM	Output ACM (accumulated call meter) and ACMmax	106
AT^SAKA	Any Key Answer	107
AT^SAOF	Auto Off	107
AT^SBAC	Backup Alarm Clock	108
AT^SBIG	Get / Set Big Letters in display	108
AT^SBLK	Clear black list	108
AT^SBMH	Bookmark Handling	109
AT^SBNR	Binary Read	110
AT^SBNW	Binary Write	112
AT^SCAM	Camera Settings	113
AT^SCCM	CC Monitor	114
AT^SCID	Output card ID	114
AT^SCKA	Display SIM card status	114
AT^SCKH	Get / Set CarKit/Headset settings	115
AT^SCKS	Display SIM unsolicited card status	115
AT^SGCLASS	GPRS mobile station class and store it to EE-Block	116
AT^SCNI	Output call number information	116
AT^SCRE	Get / Set Call Screening in display	117
AT^SDBR	Database Read	117
AT^SDLD	Delete the "last number redial" memory	118
AT^SDLY	Delay Command	118
AT^SGAUTH	Select Type of Authentication for PPP connection	118
AT^SGDCONT	Define PDP Context	119
AT^SGDI	Get Device Info	120

AT^SGDV	GPRS data volume	120
AT^SGMR	GSM telephone software info	121
AT^SGND	Get phone number associated date	121
AT^SHFR	Set Handsfree Loudspeaker on/off	122
AT^SICO	Icon control	123
AT^SIFS	Query InterFace Setting	123
AT^SILL	Get / Set Illumination	123
AT^SINT	Set Info Tones	124
AT^SJAV	Install JAVA application	124
AT^SKYT	Key Tones	125
AT^SKPD	Keypad control single key	124
AT^SLCD	Last call duration	125
AT^SLCK	Switch locks (including user-defined locks) on and off	126
AT^SLNG	Language settings	127
AT^SMDR	Melody Duration	127
AT^SMEL	Melody values	128
AT^SMGL	List SMS (without status change from <i>unread</i> to <i>read</i> )	129
AT^SMGO	SMS overflow indicator	130
AT^SMGR	Read SMS	131
AT^SMIB	Minute Beep	131
AT^SMPL	Media Player URC	132
AT^SMSO	Switch device off	132
AT^SNFS	Select NF hardware	133
AT^SNFV	Set the volume	133
AT^SOBX	Set OBEX Debug Level	134
AT^SPBA	Query active phonebook book	134
AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter	134
AT^SPBG	Read entry from the sorted telephone book via the sorted index	135
AT^SPBS	Select a telephone book (including BenQ-specific books)	135
AT^SPIC	Output PIN counter	136
AT^SPLM	Read the PLMN	137
AT^SPLR	Read an entry from the preferred-operator	137
AT^SPLW	Write an entry to the preferred-operator	137
AT^SPRF	Get / Set Active Profile	138
AT^SPST	Play Signal Tone	138
AT^SPTT	Push To Talk	139
AT^SPWD	Change password to a lock (including user-defined locks)	139
AT^SQWE	Switch Mode for External Interface	140
AT^SREM	Get / Set Reminder state	140
AT^SRMP	Ring Melody Playback	141
AT^SSAT	Set Auto Time	141
AT^SSCL	Show Clock	143
AT^SSET	Profile Settings Control (SET Melody and Picture settings in Mobile	144
AT^SSTK	SIM Toolkit	145
AT^STTP	Test Tone Play	146
AT^STWL	Get/Set T9 Worldlist	147
AT^SVIB	Vibrator mode	147
AT^SVID	Video Settings	148

Table 2-6: Supported BenQ-specific commands

---

### 2.1.7 Alphabetical list of developers' commands

Command	Function	Page
AT^SAPO	APO Data Tracer	149
AT^SCHNULLI	Bluetooth Data Tracer	149
AT^SCHOBI	Gipsy Data Tracer	150
AT^STRC	Data Tracer	150



## 2.2 The AT command set

GSM mobile telephones and modems can be operated via Remote Control using a serial interface (data cable or infrared connection). Remote control is implemented by means of AT+C commands according to the 3GPP TS 27.007 [15] and 3GPP TS 27.005 [14] specifications, as well as several manufacturer-specific AT commands. These commands are described in more detail in section 2.2.4.

A command entered at the user port generally begins with an 'AT' command prefix. The remainder of the line is interpreted as a sequence of the commands described below. The commands are not case-sensitive. More than one command may be given on a single line, with the semicolon serving as the delimiter between commands.

The "V.250" specification [16] applies to the sequence of the interface commands. According to this guideline, commands should begin with the character string "AT" and end with "<CR>" (= 0x0D). The input of a command is acknowledged by the display of "OK" or "ERROR".

### 2.2.1 Commands that can be executed without the PIN

The following commands can be executed without entering the PIN:

AT&C	AT^SQWE	AT+CMUT	AT+VTD
AT&D	AT^SRMP	AT+CPAS	AT+WS46
AT&F	AT^STRC	AT+CPIN	ATA
AT^SACD	AT+CALM	AT+CPWD	ATD
AT^SCCM	AT+CBC	AT+CREG	ATE
AT^SCKA	AT+CCLK	AT+CRMP	ATH
AT^SCKS	AT+CGMI	AT+CRSL	ATI
AT^SDLY	AT+CGMR	AT+CSCS	ATO
AT^SGAUTH	AT+CGMM	AT+CSQ	ATQ
AT^SIFS	AT+CGSN	AT+CTZR	ATS0..7
AT^SKPD	AT+CIND	AT+CVIB	ATV
AT^SLCK	AT+CKPD	AT+GCAP	ATX
AT^SMSO	AT+CLCK	AT+GMI	ATZ
AT^SOBX	AT+CLVL	AT+GMM	ATQ
AT^SPIC	AT+CMEC	AT+GMR	
AT^SPST	AT+CMEE	AT+GSN	
AT^SPWD	AT+CEER	AT+IPR	

### 2.2.2 Commands that can be interrupted

A command currently in process is interrupted by each additional character entered. This means that you should not enter the next command until you have received the acknowledgment; otherwise the current command is interrupted. The following commands can be interrupted:

AT^SBNR	AT^SPLR	AT+CMGC	AT+COPS
AT^SBNW	AT^SPLW	AT+CMGD	AT+CPBR
AT^SDBR	AT^SSTK	AT+CMGL	AT+CPBS
AT^SKPD	AT+CGACT	AT+CMGR	AT+CPBW
AT^SMGL	AT+CGATT	AT+CMGS	AT+VTS
AT^SMGR	AT+CGCMOD	AT+CMGW	ATA
AT^SPLM	AT+CHLD	AT+CMSS	ATD

### 2.2.3 Generic TA control commands according to ITU-T V.250

The generic TA control commands ("Hayes standard commands") correspond to the commands of AT Hayes compatible modems.

All commands in Table 2-7 expect a numeric argument; if this argument is omitted, the default of 0 is assumed.

Command	Function																
AT...	Prefix for all commands																
ATA	Accept call (V.250, according to [16])																
ATB[n]	This modem command is used to set the bearer service for data connections (cf. AT+CBST). can take one of the following values: <n> <table> <tr> <td>7</td><td>2400bps, asynchronous, V.22bis</td></tr> <tr> <td>11</td><td>4800bps, asynchronous, V.32</td></tr> <tr> <td>13</td><td>9600bps, asynchronous, 32</td></tr> <tr> <td>15</td><td>14400bps, asynchronous, V.34</td></tr> <tr> <td>25</td><td>2400bps, asynchronous, V.110 ISDN</td></tr> <tr> <td>27</td><td>4800bps, asynchronous, V.110 ISDN</td></tr> <tr> <td>29</td><td>9600bps, asynchronous, V.110 ISDN</td></tr> <tr> <td>31</td><td>14400bps, asynchronous, V.110 ISDN</td></tr> </table>	7	2400bps, asynchronous, V.22bis	11	4800bps, asynchronous, V.32	13	9600bps, asynchronous, 32	15	14400bps, asynchronous, V.34	25	2400bps, asynchronous, V.110 ISDN	27	4800bps, asynchronous, V.110 ISDN	29	9600bps, asynchronous, V.110 ISDN	31	14400bps, asynchronous, V.110 ISDN
7	2400bps, asynchronous, V.22bis																
11	4800bps, asynchronous, V.32																
13	9600bps, asynchronous, 32																
15	14400bps, asynchronous, V.34																
25	2400bps, asynchronous, V.110 ISDN																
27	4800bps, asynchronous, V.110 ISDN																
29	9600bps, asynchronous, V.110 ISDN																
31	14400bps, asynchronous, V.110 ISDN																
ATD <dial_string>[:]	Dial command. For more detailed information see the ATD command section on page 15																
ATE0	Deactivate command echo																
ATE1	Activate command echo																
ATH[0]	Release existing connection																
ATI[n]	Modem command according to [16]: Display product code:																

Command	Function
	0 042
	1 042
	2 OK, (check firmware checksum)
	8 Display supported operation modes (see ATB)
	9 identification of modem and mobile phone
ATL[n]	Monitor speaker loudness (modem command according to [16])
ATM[n]	Monitor speaker mode (modem command according to [16])
ATO[n]	Switch back to transparent mode after +++ interruption (modem command according to [16])
ATQ0	Display acknowledgments (responses or messages)
ATQ1	Suppress acknowledgments (responses or messages)
ATSn=x	Write value x to S register n (modem command according to [16])
ATSn?	Display value of S register n (modem command according to [16]) <b>Note:</b> This type of mobile phone does not allow the values of all S registers to be displayed with a single command
ATV0	Display acknowledgments as numbers
ATV1	Display acknowledgments as text
ATX<n>	Report link with CONNECT only ignore busy signal  <n> can take one of the following values: 1 Report link with CONNECT plus baud rate, ignore busy signal 2 same as ATX1 3 same as ATX1 but report BUSY 4 same as ATX3
ATZ	Set to default configuration
AT&C<n>	Circuit 109 (Received line signal detector / DCD) behaviour  <n> can take one of the following values: 0 DCD always ON 1 DCD ON if carrier detected
AT&D[n]	Circuit 108 (Data terminal ready / DTR) behaviour <b>Note:</b> The AT&D<n> commands described below take no effect since circuit 108 is not supported in this type of mobile phone. See section 3.6 for more information on which circuit assignments are supported.  <n> can take one of the following values: 0 DTR ignored 1 On DTR ON to OFF: go to online command mode, do not disconnect 2 On DTR ON to OFF: disconnect go to command mode. Automatic answer is disabled while DTR OFF.

Command	Function
AT&F[0]	<p>Resets all current parameters of the following AT commands to their factory profile:</p> <p>ATE, ATQ, ATV, AT\Q, AT&amp;C, AT&amp;D, AT&amp;S, AT+VTS, ATX</p> <p>AT+CAOC, AT+CBST, AT+CCWA, AT+CEER, AT+CLIP, AT+CMEC, AT+CMEE, AT+CMER, AT+CNMI, AT+COLP, AT+COPS, AT+CPOL, AT+CPMS, AT+CPBS, AT+CR,, AT+CRC, AT+CREG, AT+CRLP, AT+CSCS, AT+CSMS, AT+CSSN, AT^SACM, AT^SCKS, AT^SMGO,</p> <p>S parameters</p> <p>If GPRS is supported then also the following GPRS commands are affected:</p> <p>AT+CGAUTO, AT+CR, AT+CGEREP, AT+CGREG</p> <p>AT^SACD</p> <p>Any existing connections will be terminated. No other commands are accepted on the same command line.</p>
AT\N	<p>No action (\N2 - \N6)</p> <p>\N2</p> <p>\N3</p> <p>\N4</p> <p>\N5</p> <p>\N6</p>
AT\Q<n	<p>Local flow control selection (DTE ↔ DCE); can be customized</p> <p>&lt;n&gt; can take one of the following values:</p> <p>0 Disable flow control</p> <p>1 XON-XOFF software flow control</p> <p>2 CTS only flow control</p> <p>3 RTS/CTS flow control</p>
AT\V[n]	<p>Modem command</p> <p>0 No /REL or /RLP appendix with the CONNECT message</p> <p>1 /REL or /RLP appendix with the CONNECT message</p>
AT+GMI	request TA manufacturer identification (see AT+CGMI)
AT+GMM	request TA model identification (see AT+CGMM)
AT+GMR	request TA revision identification (see AT+CGMR)
AT+GSN	request TA serial number identification (see AT+CGSN)

Table 2-7: Generic TA control commands supported according to ITU-T V.25

## The ATD command

The ATD command is a special command in that all characters specified in the same line (or up to a semicolon) are considered part of the number to dial. The ATD command can be used to create three types of calls:

- voice calls
- CSD data call / fax calls
- GPRS data calls

## ATD for voice calls

To dial for a voice call the trailing semicolon (;) is required. The following syntax for a voice call is supported:

Command	Function												
ATD<str>;	<p>Dial the dialing string &lt;str&gt; with the voice utility</p> <p>Valid dial modifiers:</p> <table border="1"> <tr> <td>g</td><td>The next call is treated as a closed user group call</td></tr> <tr> <td>G</td><td></td></tr> <tr> <td>I</td><td>restrict AT+CLIR</td></tr> <tr> <td>i</td><td>suppress AT+CLIR for next call</td></tr> <tr> <td>T</td><td>tone dialing</td></tr> <tr> <td>P</td><td>pulse dialing is ignored</td></tr> </table> <p>The trailing character ";" indicates that the call is to be set up with the voice utility. The dial command returns OK to the user immediately after starting a voice call.</p> <p>Other behavior like *# sequences in the dial command, and also data calls remain unchanged.</p> <p>A special form of the dial command is a GPRS data call. The syntax for setting up such a GPRS data call is:  ATD*&lt;99&gt;[*[&lt;called_address&gt;] [*[&lt;L2P&gt;][*[&lt;cid&gt;]]]]#  ATD*&lt;98&gt;[*&lt;cid&gt;]#</p> <p>See also section "ATD for GPRS data call calls" on page 16.</p>	g	The next call is treated as a closed user group call	G		I	restrict AT+CLIR	i	suppress AT+CLIR for next call	T	tone dialing	P	pulse dialing is ignored
g	The next call is treated as a closed user group call												
G													
I	restrict AT+CLIR												
i	suppress AT+CLIR for next call												
T	tone dialing												
P	pulse dialing is ignored												
ATD><n>;	<p>Dial the telephone number from the current telephone book location number &lt;n&gt;</p> <p>The telephone book is selected using the AT+CPBS (or AT^SPBS) command.</p>												
ATD><mem><n>;	<p>Dial the telephone number from the telephone book &lt;mem&gt; location number &lt;n&gt;</p>												
ATDx[:]	<p>Dial phone number x</p> <table border="1"> <tr> <td>I</td><td>ISDN The phone call will be made as a UDI call. An ISDN connection to a V.110 terminal adapter will be established. The data transmission speed is the same as for an "analog" call (2400 / 4800 / 9600 / 14400 bps).</td></tr> <tr> <td>PP</td><td>Plus: same as + character</td></tr> </table>	I	ISDN The phone call will be made as a UDI call. An ISDN connection to a V.110 terminal adapter will be established. The data transmission speed is the same as for an "analog" call (2400 / 4800 / 9600 / 14400 bps).	PP	Plus: same as + character								
I	ISDN The phone call will be made as a UDI call. An ISDN connection to a V.110 terminal adapter will be established. The data transmission speed is the same as for an "analog" call (2400 / 4800 / 9600 / 14400 bps).												
PP	Plus: same as + character												
ATDL;	Dial last telephone number												

### ATD for CSD data call or FAX calls

To dial for a CSD data call or a FAX call the trailing semicolon (;) must not be used. The following syntax for a CSD data/Fax call is supported:

ATD<type><number>	Dial command for modem and fax calls
<type>	The selection if either a data or fax call is set up depends on the setting of the fax class. See the command AT+FCLASS for further details.
	T     Tone or pulse dialling. Ignored as not useful for GSM calls P
	I     ISDN The phone call will be made as a UDI (V.110) call. A connection to a V.110 terminal adapter will be established. The data transmission speed is the same as for an "analog" call (2400 / 4800 / 9600 / 14400 bps). See AT+CBST for further information. This parameter is ignored for fax calls.  Example: AT+CBST=7 ATDI1234 and AT+CBST=71 ATD1234 will result in the same call setup parameters
	PP    PLUS: same as + character
ATDL	Dial last telephone number

### ATD for GPRS data call calls

To dial for a GPRS data call the following syntax is supported:

ATD*<GPRS_SC>[*[<called_address>] [*[<L2P>][*[<cid>[,<cid>[,...]]]]]]#		
	Dial command for a GPRS data call.	
<GPRS_SC>		GPRS service code
	99	request to use the Packet Domain service
<called_address>		A IP-address (IPv4, IPv6)
<L2P>		Layer 2 protocol
	PPP	The protocol used for connect the MT to external device.
<cid>	1-3	PDP context identifier
ATD*<GPRS_SC_IP>[*<cid>[,<cid>[,...]]]]#		
	Dial command for a GPRS data call.	
<GPRS_SC_IP>		GPRS service code

		98	request to use the GPRS with IP (PDP types IP and PPP)
	<cid>	1-3	PDP context identifier

#### Notes for GPRS calls:

- 1) The ATD command for GPRS always includes an attach if the mobile is currently detached. The attach may last for some time (up to 60 seconds). During attach the command is interruptible.
- 2) If no <cid> is given in the ATD command a predefined PDP context without an Access Point Name is used for dialing. But maybe it is demanded by the network operator so the dial fails and issues an error message.
- 3) It is not possible to use a <cid> which is already active for the ATD command.

#### 2.2.4 Command combinations to be avoided

It is possible to specify more than a single command in the command line at any one time; however, not all command combinations will have the expected result. To ensure that responses to commands will be displayed in the order expected, the following command combinations should be avoided:

- General commands according to ITU-T Recommendation V.250 combined with fax commands
- General commands according to 3GPP TS 27.007 combined with BenQ defined commands
- General commands according to 3GPP TS 27.005 specified stand-alone

## 2.3 AT commands and responses according to 3GPP TS 27.007

According to 3GPP TS , it is possible to execute an AT command in any of the following forms:

Test command	AT+CXXX=?	The mobile phone or modem responds by sending the list of parameters and value ranges; these can be set using the corresponding Write command or by means of internal processes
Read command	AT+CXXX?	This command displays the current value setting of the parameter(s).
Write command	AT+CXXX=<...>	This command is used to set parameters that can be set.
Execute command	AT+CXXX	This command reads non-settable parameters which are influenced by internal processes in the mobile phone or modem

**Table 2-8: Conventions applying to the presentation of AT commands**

### 2.3.1 General commands according to 3GPP TS 27.007

This section provides the descriptions of general 3GPP TS 27.007 commands [10].

#### ATO

ATO	Return to online data state
Execute command ATO	Response: CONNECT/NO CARRIER/ERROR

#### AT+CGMI

AT+CGMI	Issue manufacturer ID code
Test command AT+CGMI=?	Response: OK
Execute command AT+CGMI	Response <manufacturer> Parameter: <manufacturer>      Name of manufacturer (BENQ)

#### AT+CGMM

AT+CGMM	Issue model ID code
Test command AT+CGMM=?	Response: OK
Execute command AT+CGMM	Response: <model> Parameter: <model>      Name of telephone (MOBILE)



### AT+CGMR

AT+CGMR	Output the GSM telephone version
Test command: AT+CGMR=?	Response: OK
Execute command: AT+CGMR	Response: <revision>
	Parameter: <revision>    Version of the telephone software

### AT+CGSN

AT+CGSN	Output the serial number (IMEI)
Test command: AT+CGSN=?	Response: OK
Execute command: AT+CGSN	Response: <sn>
	Parameter: <sn>            IMEI of the telephone

### AT+CIMI

AT+CIMI	Output of IMSI
Test command: AT+CIMI=?	Response: OK
Execute command: AT+CIMI	Response: <imsi>
	Parameter: <imsi>            International Mobile Subscriber Identity (IMSI)

### AT+CKPD

AT+CKPD	Keypad control
Test command: AT+CKPD=?	Response: OK/ERROR/+CME ERROR
Write command: AT+CKPD=<keys>[,<time>[,<pause>]]	Response: OK / ERROR / +CME ERROR
	Parameter: <keys>            string of characters representing keys (see section 6.5 for a list of implemented keys)
	<time>            0 . . . 255    time in tenths of seconds (0.1 seconds) that each key must be pressed 3                              Default: = 0.3 sec
	<pause>           0 . . . 255    length of pause in tenths of seconds (*0.1 seconds) that may elapse between two key presses
<b>Note:</b> Keypad handling has to be enabled prior to executing this command by means of the AT+CMEC=2 command.	

AT+CSCS

AT+CSCS	Select TE character set
Test command AT+CSCS=?	Response: +CSCS: (list of supported <chset>s) OK Parameter: <chset>      String; determines which TE character set is used GSM      GSM character set is used UCS2     UCS2 character set is used
Read command AT+CSCS?	Response: +CSCS: <chset> OK / ERROR / +CME ERROR Parameter: <chset>      See Test command
Write command AT+CSCS=[<chset>]	Response: OK / ERROR / +CME ERROR Parameter: <chset>      See Test command

AT+GSN

AT+GSN	Output the serial number (IMEI)
Test command AT+GSN=?	Response: OK / ERROR / +CME ERROR
Execute command AT+GSN	Response: <sn> Parameter: <sn>      IMEI of the telephone

AT+WS46

AT+WS46	Select wireless network
Test command AT+WS46=?	Response: (list of supported <n>s) OK / ERROR / +CME ERROR Parameter: <n>      Integer; WDS side stack 12      GSM digital cellular
Read command AT+WS46?	Response: <n> OK / ERROR / +CME ERROR Parameter: <n>      See Test command
Write command AT+WS46=[<n>]	Response: OK / ERROR / +CME ERROR Parameter: <n>      See Test command

### 2.3.2 Call control commands

This section provides the descriptions of commands related to call control.

#### AT+CEER

AT+CEER	Query the reason for disconnection of last call
Test command AT+CEER=?	Response: OK
Execute command AT+CEER	Response: +CEER: <report>
	Parameter <report> Reason for disconnection, reported as numbers. For detailed information see section 6.3.

#### AT+CHUP

AT+CHUP	Hangup call
Test command AT+CHUP=?	OK / ERROR / +CME ERROR
Execute command AT+CHUP	Response: OK / ERROR

For more detailed information see [2].

#### AT+CR

AT+CR	Service reporting control
Test command	Response:
AT+CR=?	+CR: (list of supported <mode>s) OK / ERROR / +CME ERROR
	Parameter: <mode> 0 disables reporting 1 enables reportingIf enabled, the intermediate result code +CR: <serv> is returned from the TA to the TE before the intermediate result code CONNECT is transmitted.
Read command AT+CR?	Response: +CR: <mode> OK / ERROR / +CME ERROR
	Parameter: <mode> See Test command
Write command AT+CR=<mode>	Response: OK / ERROR / +CME ERROR
	Parameter: <mode> See Test command
Unsolicited Result Code +CR: <serv>	
	Parameter: <serv> ASYNC For a detailed description refer to [15] SYNC REL ASYNC REL SYNC GPRS

**AT+CRC**

AT+CRC	Cellular result codes
Test command AT+CRC=?	Response: +CRC: (list of supported <mode>s) OK / ERROR / +CME ERROR Parameter <mode>      0    disables reporting 1    enables reporting When enabled, an incoming call is indicated to the TE with unsolicited result code +CRING: <type> instead of the normal ring.
Read command AT+CRC?	Response: +CRC: <mode> OK / ERROR / +CME ERROR Parameter: <mode>                      See Test command
Write command AT+CRC=<mode>	Response OK / ERROR / +CME ERROR Parameter: <mode>                      See Test command
Unsolicited Result Code +CRING: <type>	Parameter: <type>            ASYNC                      For more detailed information refer to [15] SYNC REL ASYNC REL SYNC FAX VOICE VOICE DATA ALT VOICE DATA ALT DATA VOICE ALT VOICE FAX ALT FAX VOICE

### 2.3.3 Network service related commands

This section provides the descriptions of commands related to network service.

#### AT+CAOC

AT+CAOC	Advice of charge
Test command AT+CAOC=?	Response: +CAOC: (list of supported <mode>s)  Parameter: <mode> 0 query CCM value 1 deactivate the unsolicited reporting of CCM value 2 activate the unsolicited reporting of CCM value
Read command AT+CAOC?	Response +CAOC: <mode>  Parameter: <mode> See Test command
Write command AT+CAOC=<mode>	Response: OK  Parameter: <mode> See Test command
Execute command AT+CAOC	Response: +CAOC: <ccm> OK/ERROR/+CME ERROR  Parameter: <ccm> Updated hexadecimal call meter, measured in home units; coding in analogy to ACMmax on the SIM
Unsolicited result code +CCCM:<ccm>	

#### AT+CCFC

AT+CCFC	Call forwarding number and conditions
Test command AT+CCFC=?	Response: +CCFC: (list of supported <reas>s) OK/ERROR/+CME ERROR  Parameter: <reas> 0 Always 1 If busy 2 If no answer 3 If not available 4 All reasons (0-3) 5 All conditional reasons (1-3)
Write command AT+CCFC=<reas>, <mode>[, <num>[, <type>[, <class>[, <time>]]]]	Response: If <mode>=2 and command is successful +CCFC: <status>, <class1>[, <num>, <type>[, <time>]] [<CR><LF> +CCFC: . . . .] OK/ERROR/+CME ERROR  Parameter:

<a href="#">&lt;reas&gt;</a>		See Test command
<a href="#">&lt;mode&gt;</a>	0	Deactivate
	1	Activate
	2	Query
	3	Install
	4	Delete
<a href="#">&lt;num&gt;</a>		Telephone number
<a href="#">&lt;type&gt;</a>		Type of telephone number
<a href="#">&lt;class&gt;</a>	1	Voice
	2	Data
	4	Fax
	7	Voice, Data and FAX (default)
	8	SMS
	16	data circuit sync
	32	data circuit async
	64	dedicated packet access
	128	dedicated PAD access
	X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX
<a href="#">&lt;time&gt;</a>	1-30	Time, rounded to a multiple of five seconds
<a href="#">&lt;status&gt;</a>	0	Inactive
	1	Active

### AT+CCWA

AT+CCWA	Call waiting																								
Test command AT+CCWA=?	Response: +CCWA: (list of supported <a href="#">&lt;n&gt;</a> s) OK / ERROR / +CME ERROR																								
	Parameter: <table><tr><td><a href="#">&lt;n&gt;</a></td><td>0</td><td>Disable</td></tr><tr><td></td><td>1</td><td>Enable</td></tr></table>	<a href="#">&lt;n&gt;</a>	0	Disable		1	Enable																		
<a href="#">&lt;n&gt;</a>	0	Disable																							
	1	Enable																							
Read command AT+CCWA?	Response: +CCWA: <a href="#">&lt;n&gt;</a> OK / ERROR / +CME ERROR																								
	Parameter: <a href="#">&lt;n&gt;</a> See Test command																								
Write command AT+CCWA=[ <a href="#">&lt;n&gt;</a> , [ <a href="#">&lt;mode&gt;</a> , [ <a href="#">&lt;class&gt;</a> ]]]																									
	Response: If <a href="#">&lt;mode&gt;</a> =2 and command is successful +CCWA: <a href="#">&lt;status&gt;</a> , <a href="#">&lt;class1&gt;</a> <CR><LF>+CCWA: ....] OK / ERROR / +CME ERROR																								
	Parameter: <table><tr><td><a href="#">&lt;n&gt;</a></td><td colspan="2">See Test command</td></tr><tr><td rowspan="3"><a href="#">&lt;mode&gt;</a></td><td>0</td><td>Disable</td></tr><tr><td>1</td><td>Enable</td></tr><tr><td>2</td><td>Query Status</td></tr><tr><td rowspan="5"><a href="#">&lt;class&gt;</a></td><td>1</td><td>Voice</td></tr><tr><td>2</td><td>Data</td></tr><tr><td>4</td><td>Fax</td></tr><tr><td>7</td><td>Voice, Data and Fax (default)</td></tr><tr><td>8</td><td>SMS</td></tr><tr><td></td><td>16</td><td>data circuit sync</td></tr></table>	<a href="#">&lt;n&gt;</a>	See Test command		<a href="#">&lt;mode&gt;</a>	0	Disable	1	Enable	2	Query Status	<a href="#">&lt;class&gt;</a>	1	Voice	2	Data	4	Fax	7	Voice, Data and Fax (default)	8	SMS		16	data circuit sync
<a href="#">&lt;n&gt;</a>	See Test command																								
<a href="#">&lt;mode&gt;</a>	0	Disable																							
	1	Enable																							
	2	Query Status																							
<a href="#">&lt;class&gt;</a>	1	Voice																							
	2	Data																							
	4	Fax																							
	7	Voice, Data and Fax (default)																							
	8	SMS																							
	16	data circuit sync																							

	32	data circuit async
	64	dedicated packet access
	128	dedicated PAD access
	X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX
Unsolicited result code: +CCWA: <num>,<type>,<class>,<cli validity>,<alpha>,<line>		
	Parameter:	
	<num>	Telephone number
	<type>	Type of telephone number
	<class>	See Write command
	<CLI validity>	0 CLI valid
		1 CLI has been withheld
		2 CLI is not available
	<alpha>	String type alphanumeric representation of telephone number
	<line>	1 Default line
		2 subscribed alternate line service (ALS); line 2

### AT+CHLD

AT+CHLD	Call hold and multiparty
Test command AT+CHLD=?	Response: +CHLD: (list of supported <n>s) OK / ERROR / +CME ERROR
Write command AT+CHLD=[<n>]	Response: OK / ERROR / +CME ERROR
	Parameter
	<n>
	0 Terminates all held calls or sets UDUB (User Determined User Busy) for a waiting call
	1 Terminates all active calls (if there are any) and accepts the other call (waiting call or held call)
	1<x> Terminates call number <x> (x= 1-7)
	2 Puts all active calls on hold (if there are any) and accepts the other call (waiting call or held call) as active
	2<x> Puts all active calls except call <x> (x= 1-7) on hold
	3 Connects the call put on hold to the active call multiparty
	4 Call transfer
In situations of conflict, the respective action is always applied to the waiting call.	
Terminating calls: Use the "AT+CHUP" command to terminate all calls except waiting calls	
<b>Note:</b> The scope of this command depends on the SIM clearing and/or on the network support	

### AT+CLCC

AT+CLCC	List Current Calls
Test command AT+CLCC=?	Response: OK
Execute command	Response:

AT+CLCC	<pre>[+CLCC: &lt;id1&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;,&lt;number&gt;,&lt;type&gt;,&lt;alpha&gt;[&lt;CR&gt; &lt;LF&gt; +CLCC:&lt;id2&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;,&lt;number&gt;,&lt;type&gt;,&lt;alpha&gt;[...]]]</pre> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table border="1"> <tr> <td><a href="#">&lt;id&gt;</a></td><td>Indicates the call identification number as described in subclause 4.5.5.1 of the GSM 02.30 document [4]; 0 .. this number (integer) can be used in AT+CHLD command operations</td></tr> <tr> <td><a href="#">&lt;dir&gt;</a></td><td>Specifies whether the call is mobile originated or mobile terminated 0 mobile originated (MO) call 1 mobile terminated (MT) call</td></tr> <tr> <td><a href="#">&lt;stat&gt;</a></td><td>Indicates the state of the call 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)</td></tr> <tr> <td><a href="#">&lt;mode&gt;</a></td><td>Indicates the bearer/teleservice 0 voice 1 data 2 fax 3 voice followed by data, voice mode 4 alternating voice/data, voice mode 5 alternating voice/fax, voice mode 6 voice followed by data, data mode 7 alternating voice/data, data mode 8 alternating voice/fax, fax mode 9 unknown</td></tr> <tr> <td><a href="#">&lt;mpty&gt;</a></td><td>Specifies whether or not the call is of multiparty (conference) call parties 0 No (no multiparty (conference) call) 1 Yes (multiparty (conference) call)</td></tr> <tr> <td><a href="#">&lt;number&gt;</a></td><td>string type phone number in format specified by <a href="#">&lt;type&gt;</a></td></tr> <tr> <td><a href="#">&lt;type&gt;</a></td><td>type of address octet in integer format</td></tr> <tr> <td><a href="#">&lt;alpha&gt;</a></td><td>string type alphanumeric representation of <a href="#">&lt;number&gt;</a> corresponding to the entry found in phonebook, character set according to the AT+CSCS command</td></tr> </table>	<a href="#">&lt;id&gt;</a>	Indicates the call identification number as described in subclause 4.5.5.1 of the GSM 02.30 document [4]; 0 .. this number (integer) can be used in AT+CHLD command operations	<a href="#">&lt;dir&gt;</a>	Specifies whether the call is mobile originated or mobile terminated 0 mobile originated (MO) call 1 mobile terminated (MT) call	<a href="#">&lt;stat&gt;</a>	Indicates the state of the call 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)	<a href="#">&lt;mode&gt;</a>	Indicates the bearer/teleservice 0 voice 1 data 2 fax 3 voice followed by data, voice mode 4 alternating voice/data, voice mode 5 alternating voice/fax, voice mode 6 voice followed by data, data mode 7 alternating voice/data, data mode 8 alternating voice/fax, fax mode 9 unknown	<a href="#">&lt;mpty&gt;</a>	Specifies whether or not the call is of multiparty (conference) call parties 0 No (no multiparty (conference) call) 1 Yes (multiparty (conference) call)	<a href="#">&lt;number&gt;</a>	string type phone number in format specified by <a href="#">&lt;type&gt;</a>	<a href="#">&lt;type&gt;</a>	type of address octet in integer format	<a href="#">&lt;alpha&gt;</a>	string type alphanumeric representation of <a href="#">&lt;number&gt;</a> corresponding to the entry found in phonebook, character set according to the AT+CSCS command
<a href="#">&lt;id&gt;</a>	Indicates the call identification number as described in subclause 4.5.5.1 of the GSM 02.30 document [4]; 0 .. this number (integer) can be used in AT+CHLD command operations																
<a href="#">&lt;dir&gt;</a>	Specifies whether the call is mobile originated or mobile terminated 0 mobile originated (MO) call 1 mobile terminated (MT) call																
<a href="#">&lt;stat&gt;</a>	Indicates the state of the call 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)																
<a href="#">&lt;mode&gt;</a>	Indicates the bearer/teleservice 0 voice 1 data 2 fax 3 voice followed by data, voice mode 4 alternating voice/data, voice mode 5 alternating voice/fax, voice mode 6 voice followed by data, data mode 7 alternating voice/data, data mode 8 alternating voice/fax, fax mode 9 unknown																
<a href="#">&lt;mpty&gt;</a>	Specifies whether or not the call is of multiparty (conference) call parties 0 No (no multiparty (conference) call) 1 Yes (multiparty (conference) call)																
<a href="#">&lt;number&gt;</a>	string type phone number in format specified by <a href="#">&lt;type&gt;</a>																
<a href="#">&lt;type&gt;</a>	type of address octet in integer format																
<a href="#">&lt;alpha&gt;</a>	string type alphanumeric representation of <a href="#">&lt;number&gt;</a> corresponding to the entry found in phonebook, character set according to the AT+CSCS command																

### AT+CLCK

AT+CLCK	Switch locking on and off <b>Revision to 3GPP TS 27.007 according to CR TDOC ETSI/SMG4 187/96</b>
Test command AT+CLCK=?	Response: +CLCK: (list of supported <a href="#">&lt;fac&gt;</a> s) OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;fac&gt;</a> AB All barring services



	AC	All incoming barring services																																		
	AG	All outgoing barring services																																		
	AI	BAIC (bar all incoming calls)																																		
	AO	BAOC (bar all outgoing calls)																																		
	CS	Control Surface = keylock																																		
	FD	FDN lock																																		
	IR	BIC-Roam (bar incoming calls when roaming outside the home country)																																		
	OI	BOIC (bar outgoing international calls)																																		
	OX	BOIC-exHC (bar outgoing international calls except to home country)																																		
	PC	Corporate personalization (GSM 02.22, [3])																																		
	PF	Phone locked to very first inserted SIM																																		
	PN	Network personalization (GSM 02.22, [3])																																		
	PP	Service provider personalization (GSM 02.22, [3])																																		
	PS	Phone locked to SIM (device code)																																		
	PU	Network subset personalization (GSM 02.22, [3])																																		
	SC	SIM card (PIN)																																		
Write command AT+CLCK=<fac>,<mode>[,<passwd>[,<class>]]																																				
<div>Response: If &lt;mode&gt;=2 and command is successful +CLCK: &lt;status&gt; [ , &lt;class1&gt; [ &lt;CR&gt;&lt;LF&gt; +CLCK: &lt;status&gt; , class2.... ] ] OK / ERROR / +CME ERROR</div> <div>Parameter: <table><tr><td>&lt;fac&gt;</td><td>See Test command</td></tr><tr><td>&lt;mode&gt;</td><td>0 Cancels lock</td></tr><tr><td></td><td>1 Activates lock</td></tr><tr><td></td><td>2 Queries lock status</td></tr><tr><td>&lt;passwd&gt;</td><td>Password</td></tr><tr><td>&lt;class&gt;</td><td>1 Voice</td></tr><tr><td></td><td>2 Data</td></tr><tr><td></td><td>4 Fax</td></tr><tr><td></td><td>7 Voice, Data and FAX (default)</td></tr><tr><td></td><td>8 SMS</td></tr><tr><td></td><td>16 data circuit sync</td></tr><tr><td></td><td>32 data circuit async</td></tr><tr><td></td><td>64 dedicated packet access</td></tr><tr><td></td><td>128 dedicated PAD access</td></tr><tr><td></td><td>X combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX</td></tr><tr><td>&lt;status&gt;</td><td>0 Off</td></tr><tr><td></td><td>1 On</td></tr></table></div>			<fac>	See Test command	<mode>	0 Cancels lock		1 Activates lock		2 Queries lock status	<passwd>	Password	<class>	1 Voice		2 Data		4 Fax		7 Voice, Data and FAX (default)		8 SMS		16 data circuit sync		32 data circuit async		64 dedicated packet access		128 dedicated PAD access		X combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX	<status>	0 Off		1 On
<fac>	See Test command																																			
<mode>	0 Cancels lock																																			
	1 Activates lock																																			
	2 Queries lock status																																			
<passwd>	Password																																			
<class>	1 Voice																																			
	2 Data																																			
	4 Fax																																			
	7 Voice, Data and FAX (default)																																			
	8 SMS																																			
	16 data circuit sync																																			
	32 data circuit async																																			
	64 dedicated packet access																																			
	128 dedicated PAD access																																			
	X combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX																																			
<status>	0 Off																																			
	1 On																																			
<b>Note:</b> If no device code ("PS") has previously been entered, at+clck=ps, 2 will return an error. It is possible to set a new device code or to delete it using the AT+CPWD command.																																				

## AT+CLIP

AT+CLIP	Calling Line Identification Presentation
Test command	Response:

AT+CLIP=?	+CLIP: (list of supported <n>s)		
	OK / ERROR / +CME ERROR		
	Parameter:		
	<n>	0	Suppresses Unsolicited result codes
		1	Displays Unsolicited result codes
Read command AT+CLIP?	Response:		
	+CLIP: <n> , <m>		
	OK / ERROR / +CME ERROR		
	Parameter		
	<n>	See Test command	
	<m>	0	CLIP not booked
		1	CLIP booked
		2	Unknown
Write command			
AT+CLIP=[<n>]			
	Response:		
	OK / ERROR / +CME ERROR		
	Parameter:		
	<n>	See Read command	
Unsolicited result code			
+CLIP: <num>,<type>,,,<alpha>,<CLI validity>			
	Parameter:		
	<num>	Telephone number	
	<type>	1	Voice
		2	Data
		4	Fax
		7	Voice, Data and FAX (default)
		8	SMS
		16	data circuit sync
		32	data circuit async
		64	dedicated packet access
		12	dedicated PAD access
		8	
	x	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX	
	<alpha>	String type alphanumeric representation of <num>	
	<cli validity>	0	CLI valid
		1	CLI withheld by originator
		2	CLI not available due to network

**AT+CLIR**

AT+CLIR	Calling Line Identification Restriction									
Test command AT+CLIR=?	Response: +CLIR: (list of supported <n>s) OK/ERROR/+CME ERROR									
	Parameter: <table> <tr> <td>&lt;n&gt;</td><td>0</td><td>Presentation indicator is used according to network</td></tr> <tr> <td></td><td>1</td><td>CLIR invocation (incognito)</td></tr> <tr> <td></td><td>2</td><td>CLIR suppression (not incognito)</td></tr> </table>		<n>	0	Presentation indicator is used according to network		1	CLIR invocation (incognito)		2
<n>	0	Presentation indicator is used according to network								
	1	CLIR invocation (incognito)								
	2	CLIR suppression (not incognito)								
Read command AT+CLIR?	Response: +CLIR: <n>, <m> OK/ERROR/+CME ERROR									
	Parameter:									

	< <a href="#">n</a> >	See Test command
	< <a href="#">m</a> >	0 CLIR not provisioned (not incognito)
		1 CLIR provisioned in permanent mode (incognito)
		2 Unknown
		3 CLIR mode presentation temporarily restricted (next call incognito)
		4 CLIR mode presentation temporarily allowed (next call not incognito)
Write command AT+CLIR=[< <a href="#">n</a> >]		
	Response OK/ERROR/+CME ERROR	
	Parameter: < <a href="#">n</a> > See Read command	

### AT+CNUM

AT+CNUM	Read own numbers
Test command AT+CNUM=?	Response: OK/ERROR/+CME ERROR
Execute command AT+CNUM	Response: +CNUM: [ < <a href="#">alpha</a> 1> ], < <a href="#">number</a> 1> , < <a href="#">type</a> 1> [ <CR><LF> +CNUM: [ < <a href="#">alpha</a> 2> ], < <a href="#">number</a> 2> , < <a href="#">type</a> 2> [ ... ] OK/ERROR/+CME ERROR
	Parameter: < <a href="#">alpha</a> x> optional alphanumeric string associated with < <a href="#">number</a> x>; used character set should be the one selected with AT+CSCS command.
	< <a href="#">number</a> x> string type phone number of format specified by < <a href="#">type</a> x>
	< <a href="#">type</a> x> type of address octet in integer format (see GSM 04.08 [8] subclause 10.5.4.7)

**AT+COLP**

AT+COLP	Connected Line Identification Presentation
Test command AT+COLP=?	Response: +COLP: (list of supported <n>s) OK / ERROR / +CME ERROR Parameter: <n>            0      Disable 1      Enable
Read command AT+COLP?	Response: +COLP: <n>, <m> OK / ERROR / +CME ERROR Parameter: <n>            See Test command <m>            0      COLP not provisioned (no presentation) 1      COLP provisioned 2      Unknown
Write command AT+COLP=[<n>]	Response: OK / ERROR / +CME ERROR Parameter: <n>            See Test command
Unsolicited message +COLP: <num>,<type>,...<alpha>	Parameter <num>           Telephone number <type>           Type of telephone number <alpha>          String type alphanumeric representation of <num><num><num><num><num><num><num><num>

**AT+COPN**

AT+COPN	Read operator names
Test command AT+COPN=?	Response: OK
Execute command AT+COPN	Response: +COPN: numeric <oper1>,long alphanumeric <oper1>[<CR><LF> +COPN: numeric <oper2>,long alphanumeric <oper2>][...] OK / ERROR / +CME ERROR Parameter: <operx>        Network operator in numeric and alphanumeric notation see AT^SPLM command

## AT+COPS

AT+COPS	Commands concerning selection of network operator																								
Test command AT+COPS=?	<p>Response: +COPS: [list of supported (&lt;stat&gt;,long alphanumeric &lt;oper&gt;,,numeric &lt;oper&gt;)s][,( list of supported, &lt;mode&gt;s),(list of supported &lt;format&gt;s ) ] OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;stat&gt;</td><td>0 Unknown</td></tr> <tr> <td></td><td>1 Useful network operator</td></tr> <tr> <td></td><td>2 Used network operator</td></tr> <tr> <td></td><td>3 Prohibited network operator</td></tr> <tr> <td>&lt;oper&gt;</td><td>Operator in the format according to &lt;mode&gt;</td></tr> <tr> <td>&lt;mode&gt;</td><td>0 Automatic mode</td></tr> <tr> <td></td><td>1 Manual selection of network operator</td></tr> <tr> <td></td><td>2 Deregistrate</td></tr> <tr> <td></td><td>3 Setting of format</td></tr> <tr> <td></td><td>4 Automatic, selected manually</td></tr> <tr> <td>&lt;format&gt;</td><td>0 Long alphanumeric &lt;oper&gt;</td></tr> <tr> <td></td><td>2 Numeric &lt;oper&gt;</td></tr> </table>	<stat>	0 Unknown		1 Useful network operator		2 Used network operator		3 Prohibited network operator	<oper>	Operator in the format according to <mode>	<mode>	0 Automatic mode		1 Manual selection of network operator		2 Deregistrate		3 Setting of format		4 Automatic, selected manually	<format>	0 Long alphanumeric <oper>		2 Numeric <oper>
<stat>	0 Unknown																								
	1 Useful network operator																								
	2 Used network operator																								
	3 Prohibited network operator																								
<oper>	Operator in the format according to <mode>																								
<mode>	0 Automatic mode																								
	1 Manual selection of network operator																								
	2 Deregistrate																								
	3 Setting of format																								
	4 Automatic, selected manually																								
<format>	0 Long alphanumeric <oper>																								
	2 Numeric <oper>																								
<p><b>Note:</b> Output of long alphanumeric &lt;oper&gt; is according to the settings defined using the AT+CSCS command, i. e. either in GSM or in UCS2 character set.</p>																									
Read command AT+COPS?	<p>Response: +COPS: &lt;mode&gt;[ , &lt;format&gt; , &lt;oper&gt; ] OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;mode&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;format&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;oper&gt;</td><td>Network operator</td></tr> </table>	<mode>	See Test command	<format>	See Test command	<oper>	Network operator																		
<mode>	See Test command																								
<format>	See Test command																								
<oper>	Network operator																								
<p><b>Note:</b> If &lt;format&gt; is set to long alphanumeric (0) output of &lt;oper&gt; is according to the settings defined using the AT+CSCS command, i. e. either in GSM or in UCS2 character set.</p>																									
Write command AT+COPS=<mode>[,<format>[,<oper>]]	<p>Response: OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;mode&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;format&gt;</td><td>See Test command</td></tr> <tr> <td></td><td>If &lt;mode&gt; = 1, &lt;format&gt; can only be 2</td></tr> <tr> <td>&lt;oper&gt;</td><td>In numeric form only</td></tr> </table>	<mode>	See Test command	<format>	See Test command		If <mode> = 1, <format> can only be 2	<oper>	In numeric form only																
<mode>	See Test command																								
<format>	See Test command																								
	If <mode> = 1, <format> can only be 2																								
<oper>	In numeric form only																								

AT+CPOL

AT+CPOL	Preferred operator list
Test command AT+CPOL=?	Response: +CPOL: (list of supported <index>s), (list of supported <format>s) Parameter: <index>      order number of operator in the preferred-operator list of the SIM <format>      2      Numeric
Read command AT+CPOL?	Response: +CPOL: <index1>, <format>, <oper1> [ <CR><LF> +CPOL: <index2>, <format>, <oper2> ] [...] OK / ERROR / +CME ERROR Parameter: <indexx>      See Test command <format>      See Test command
Write command AT+CPOL=[<index>][, <format>[, <oper>]]	Response: OK / ERROR / +CME ERROR Parameter: <index>      See Test command <format>      See Test command <operx>      Operator

AT+CPWD

AT+CPWD	Change password to a lock																						
Test command AT+CPWD=?	Response: +CPWD: list of supported (<fac>, <pwdlength>)s OK / ERROR / +CME ERROR Parameter: <fac> <table border="1"> <tr><td>AB</td><td>All Barring services</td></tr> <tr><td>AC</td><td>All incoming barring services</td></tr> <tr><td>AG</td><td>All outgoing barring services</td></tr> <tr><td>AI</td><td>BAIC (bar all incoming calls)</td></tr> <tr><td>AO</td><td>BAOC (bar all outgoing calls)</td></tr> <tr><td>IR</td><td>BIC-Roam (bar incoming calls when roaming outside the home country)</td></tr> <tr><td>OI</td><td>BOIC (bar outgoing international calls)</td></tr> <tr><td>OX</td><td>BOIC-exHC (bar outgoing international calls except to home country)</td></tr> <tr><td>PS</td><td>Phone locked to SIM (device code)</td></tr> <tr><td>P2</td><td>PIN2</td></tr> <tr><td>SC</td><td>SIM card (PIN)</td></tr> </table> <pwdlength>      Password length	AB	All Barring services	AC	All incoming barring services	AG	All outgoing barring services	AI	BAIC (bar all incoming calls)	AO	BAOC (bar all outgoing calls)	IR	BIC-Roam (bar incoming calls when roaming outside the home country)	OI	BOIC (bar outgoing international calls)	OX	BOIC-exHC (bar outgoing international calls except to home country)	PS	Phone locked to SIM (device code)	P2	PIN2	SC	SIM card (PIN)
AB	All Barring services																						
AC	All incoming barring services																						
AG	All outgoing barring services																						
AI	BAIC (bar all incoming calls)																						
AO	BAOC (bar all outgoing calls)																						
IR	BIC-Roam (bar incoming calls when roaming outside the home country)																						
OI	BOIC (bar outgoing international calls)																						
OX	BOIC-exHC (bar outgoing international calls except to home country)																						
PS	Phone locked to SIM (device code)																						
P2	PIN2																						
SC	SIM card (PIN)																						
Write command AT+CPWD=<fac>,<oldpwd>,<newpwd>	Response: OK / ERROR / +CME ERROR Parameter: <fac>      See Test command <oldpwd>      Existing password																						

	<newpwd>	New password
<b>Note:</b>		
PS		Phone Code (device code)
AT+CPWD="PS", , <newpwd>		if no password has yet been entered
AT+CPWD="PS", <oldpwd>		to delete password

## AT+CREG

AT+CREG	Network registration
Test command AT+CREG=?	Response: +CREG: (list of supported <n>s) OK/ERROR/+CME ERROR  Parameter <n>            0       Suppresses the unexpected network status messages 1       Displays the unexpected network status messages 2       Enables unexpected network registration and location information messages
Read command AT+CREG?	Response: +CREG: <n> , <stat> [ , <lac> , <ci> ] OK/ERROR/+CME ERROR  Parameter: <n>            See Test command <stat>        0       Not checked in, not seeking 1       Checked in 2       Not checked in, but seeking a network 3       Check-in denied by network 4       Unknown 5       Registered, roaming <lac>         Hexadecimal 2-byte string type of location area code <ci>          Hexadecimal 2-byte string type of cell ID
Write command AT+CREG=<n>	Response: OK/ERROR/+CME ERROR  Parameter <n>            See Test command
Unsolicited result code +CREG: <stat>	

**AT+CSSN**

AT+CSSN		Supplementary service notifications Revision according to 3GPP TS 27.007 Version 5.0.0		
Test command AT+CSSN=?	Response:	+CSSN: (list of supported <a href="#">&lt;n&gt;s</a> ), (list of supported <a href="#">&lt;m&gt;s</a> )		
	Parameter:			
	<a href="#">&lt;n&gt;</a>	0	Suppresses the +CSSI result code	
		1	Activates the +CSSI result code	
	<a href="#">&lt;m&gt;</a>	0	Suppresses the +CSSU result code	
		1	Activates the +CSSU messages	
	For supported +CSSI / +CSSU result codes see section 2.10 below.			
Read command AT+CSSN?	Response:	+CSSN: <a href="#">&lt;n&gt;</a> , <a href="#">&lt;m&gt;</a>		
	Parameter:			
	<a href="#">&lt;n&gt;</a>	See Test command		
	<a href="#">&lt;m&gt;</a>	See Test command		
Write command AT+CSSN=< <a href="#">n</a> >[,< <a href="#">m</a> >]				
	Parameter:			
	<a href="#">&lt;n&gt;</a>	See Test command		
	<a href="#">&lt;m&gt;</a>	See Test command		
Unsolicited result code				
+CSSI: <code1>[,<index>][,<number>]				
+CSSU: <code2>[,<index>][,<number>]				
	<a href="#">&lt;code1&gt;</a>		Intermediate result code	
		0	unconditional call forwarding is active	
		1	some of the conditional call forwardings active	
		2	a MOC has been forwarded	
		3	Waiting call is pending	
		4	outgoing CUG call (also <index> present)	
		5	outgoing calls are barred	
		6	incoming calls are barred	
		7	CLIR suppression rejected	
	<a href="#">&lt;code2&gt;</a>		Unsolicited result code	
		0	forwarded MTC	
		1	this is a CUG call (also <index> present)	
		2	call is set on hold	
		3	hold call is retrieved	
		4	call is member of multiparty	
		5	Held call was terminated	
		7	call is being connected (alerting) with the remote party in alerting state in explicit call transfer	
		8	call has been connected with the other remote party in explicit call transfer operation (also number may be present)	
	<a href="#">&lt;index&gt;</a>		Closed user group index (if available)	
	<a href="#">&lt;number&gt;</a>		ECT number (if available)	
		0	unconditional call forwarding is active	
		1	some of the conditional call forwardings active	
		2	a MOC has been forwarded	
		3	Waiting call is pending	



### 2.3.4 Commands related to mobile equipment control and status

This section provides the descriptions of commands related to network service.

#### AT+CACM

AT+CACM	Accumulated call meter
Test command AT+CACM=?	Response: OK
Read command AT+CACM?	Response: +CACM: <acm> OK / ERROR / +CME ERROR Parameter: <acm> Accumulated call meter in hexadecimal format, measured in home units; the coding is the same as ACMmax on the SIM
Write command AT+CACM=[<passwd>]	Response: OK / ERROR / +CME ERROR Parameter: <passwd> String type; usually PIN2

#### AT+CALM

AT+CALM	Alert sound mode
Test command AT+CALM=?	Response: +CALM: (list of supported <a href="#">mode</a> >s ) OK / ERROR / +CME ERROR
Read command AT+CALM?	Response: +CALM: <a href="#">mode</a> > OK / ERROR / +CME ERROR
Write command AT+CALM= <a href="#">mode</a> >	
	Response: OK / ERROR / +CME ERROR
	Parameter
<a href="#">mode</a> > 0	Normal Mode
1	Silent Mode

**AT+CMM**

AT+CMM	Accumulated call meter maximum
Test command AT+CMM=?	Response: OK / ERROR / +CME ERROR
Read command AT+CMM?	Response: +CMM: <acmmax> OK / ERROR / +CME ERROR Parameter: <acmmax> Accumulated call meter maximum in hexadecimal format, measured in home units; coding in analogy to ACMmax on the SIM
Write command AT+CMM=[<acmmax>,<passwd>]	Response: OK / ERROR / +CME ERROR Parameter: <acmmax> see Read command <passwd> String type; usually PIN2

**AT+CBC**

AT+CBC	Battery charge
Test command AT+CBC=?	Response: +CBC: (list of supported <a href="#">&lt;bcs&gt;</a> s),(list of supported <a href="#">&lt;bcl&gt;</a> s) OK/ERROR/+CME ERROR
	Parameter:
	<a href="#">&lt;bcs&gt;</a> 0            ME is supplied from battery
	1            ME has battery but is not supplied from there
	2            ME has no battery connected
	3            Error
	<a href="#">&lt;bcl&gt;</a> 0            Battery is flat, no more actions are possible
	1-100      charge in per cent
Execute command AT+CBC	Response: +CBC: <a href="#">&lt;bcs&gt;</a> , <a href="#">&lt;bcl&gt;</a>

**AT+CCLK**

AT+CCLK	Clock
Test command AT+CCLK=?	Response: OK / ERROR / +CME ERROR
Read command AT+CCLK?	Response: +CCLK: <time> OK/ERROR/+CME ERROR Parameter: <time> string type value; format is "yy/MM/dd,hh:mm:ss+zz", where characters indicate the year (last two digits), month, day, hour, minutes, seconds and time zone; e.g. "04/05/06,22:10:00+08" stands for 6th of May 2004, 22:10:00 GMT +2 hours
Write command AT+CCLK=<time>	Response: OK / ERROR / +CME ERROR Parameter: <time> see Test command

# AT+CIND

AT+CIND	Indicator Control																																																																																																
Test command AT+CIND=?	<div>Response</div> <div>+CIND: ("battchg",(0-5)), ("signal",(0-5)), ("service",(0,1)), ("message",(0,1)), ("call",(0,1)), ("roam",(0,1)), ("smsfull",(0,1)) ("call status",(10x- 20x,31x,33x,34x,51x,53x,54x)), ("GPRS coverage",(0,1)), ("callsetup",(0-3))</div> <div>OK/ERROR/+CME ERROR</div>																																																																																																
	<div>Parameter:</div> <table><tr><td>&lt;battchg&gt;</td><td>0 .. 5</td><td>battery charge level (0 = empty, 5 = full)</td></tr><tr><td>&lt;signal&gt;</td><td>0 .. 5</td><td>quality of signal (0 = not detectable , 5 = good)</td></tr><tr><td>&lt;service&gt;</td><td>0</td><td>Service not available</td></tr><tr><td></td><td>1</td><td>Service available</td></tr><tr><td>&lt;message&gt;</td><td>0</td><td>No unread message in memory storage</td></tr><tr><td></td><td>1</td><td>At least one unread message in storage</td></tr><tr><td>&lt;call&gt;</td><td>0</td><td>No call in progress or established</td></tr><tr><td></td><td>1</td><td>call in progress or established</td></tr><tr><td>&lt;roam&gt;</td><td>0</td><td>Home network, no roaming</td></tr><tr><td></td><td>1</td><td>roaming</td></tr><tr><td>&lt;smsfull&gt;</td><td>0</td><td>memory locations are available</td></tr><tr><td></td><td>1</td><td>a short message memory storage in the MT has become full</td></tr><tr><td>&lt;call status&gt;</td><td>0</td><td>There was no call since reporting was enabled</td></tr><tr><td></td><td>10x</td><td>Call number x was released</td></tr><tr><td></td><td>11x</td><td>A MOC with call number x has started dialing</td></tr><tr><td></td><td>12x</td><td>A MOC with call number x is ringing at B-party</td></tr><tr><td></td><td>13x</td><td>A MTC with call number x is ringing</td></tr><tr><td></td><td>14x</td><td>Call number x was established</td></tr><tr><td></td><td>15x</td><td>Call number x is waiting</td></tr><tr><td></td><td>16x</td><td>Call(s) was/were swapped; x is call number of the call on hold. If no call is held, x = 0.</td></tr><tr><td></td><td>170</td><td>A call is now in multiparty. No call number provided.</td></tr><tr><td></td><td>180</td><td>A call was transfered. No call number provided.</td></tr><tr><td></td><td>19x</td><td>Call number x was set on hold by B-party</td></tr><tr><td></td><td>20x</td><td>Call number x was set to active by B-party</td></tr><tr><td></td><td>21x</td><td>CCBS is available for this call</td></tr><tr><td></td><td>31x</td><td>A Data-MOC call number x has been started</td></tr><tr><td></td><td>33x</td><td>A Data-MTC with call number x is ringing</td></tr><tr><td></td><td>34x</td><td>A Data call number x was established</td></tr><tr><td></td><td>51x</td><td>A Data-MOC call number x has been started</td></tr><tr><td></td><td>53x</td><td>A Data-MTC with call number x is ringing</td></tr><tr><td></td><td>54x</td><td>A Data call number x was established</td></tr><tr><td>&lt;GPRS coverage&gt;</td><td>0</td><td>No GPRS coverage available or coverage</td></tr></table>	<battchg>	0 .. 5	battery charge level (0 = empty, 5 = full)	<signal>	0 .. 5	quality of signal (0 = not detectable , 5 = good)	<service>	0	Service not available		1	Service available	<message>	0	No unread message in memory storage		1	At least one unread message in storage	<call>	0	No call in progress or established		1	call in progress or established	<roam>	0	Home network, no roaming		1	roaming	<smsfull>	0	memory locations are available		1	a short message memory storage in the MT has become full	<call status>	0	There was no call since reporting was enabled		10x	Call number x was released		11x	A MOC with call number x has started dialing		12x	A MOC with call number x is ringing at B-party		13x	A MTC with call number x is ringing		14x	Call number x was established		15x	Call number x is waiting		16x	Call(s) was/were swapped; x is call number of the call on hold. If no call is held, x = 0.		170	A call is now in multiparty. No call number provided.		180	A call was transfered. No call number provided.		19x	Call number x was set on hold by B-party		20x	Call number x was set to active by B-party		21x	CCBS is available for this call		31x	A Data-MOC call number x has been started		33x	A Data-MTC with call number x is ringing		34x	A Data call number x was established		51x	A Data-MOC call number x has been started		53x	A Data-MTC with call number x is ringing		54x	A Data call number x was established	<GPRS coverage>	0	No GPRS coverage available or coverage
<battchg>	0 .. 5	battery charge level (0 = empty, 5 = full)																																																																																															
<signal>	0 .. 5	quality of signal (0 = not detectable , 5 = good)																																																																																															
<service>	0	Service not available																																																																																															
	1	Service available																																																																																															
<message>	0	No unread message in memory storage																																																																																															
	1	At least one unread message in storage																																																																																															
<call>	0	No call in progress or established																																																																																															
	1	call in progress or established																																																																																															
<roam>	0	Home network, no roaming																																																																																															
	1	roaming																																																																																															
<smsfull>	0	memory locations are available																																																																																															
	1	a short message memory storage in the MT has become full																																																																																															
<call status>	0	There was no call since reporting was enabled																																																																																															
	10x	Call number x was released																																																																																															
	11x	A MOC with call number x has started dialing																																																																																															
	12x	A MOC with call number x is ringing at B-party																																																																																															
	13x	A MTC with call number x is ringing																																																																																															
	14x	Call number x was established																																																																																															
	15x	Call number x is waiting																																																																																															
	16x	Call(s) was/were swapped; x is call number of the call on hold. If no call is held, x = 0.																																																																																															
	170	A call is now in multiparty. No call number provided.																																																																																															
	180	A call was transfered. No call number provided.																																																																																															
	19x	Call number x was set on hold by B-party																																																																																															
	20x	Call number x was set to active by B-party																																																																																															
	21x	CCBS is available for this call																																																																																															
	31x	A Data-MOC call number x has been started																																																																																															
	33x	A Data-MTC with call number x is ringing																																																																																															
	34x	A Data call number x was established																																																																																															
	51x	A Data-MOC call number x has been started																																																																																															
	53x	A Data-MTC with call number x is ringing																																																																																															
	54x	A Data call number x was established																																																																																															
<GPRS coverage>	0	No GPRS coverage available or coverage																																																																																															

		unknown
	1	GPRS coverage available
<callsetup>	0	No call setup in progress
	1	MTC is waiting or ringing
	2	A MOC was initiated
	3	A MOC is ringing at B-party
<b>Note:</b> The Test command returns the supported values which are issued as unsolicited result code of each indicator. It does NOT return the supported values to set an indicator. Each indicator can be switched on (1) or off (0).		
Read command AT+CIND?	Response: +CIND: <ind1>,<stat1>,... <ind10>,<stat10> OK/ERROR/+CME ERROR	
	Parameter:	
<stat1>	battery charge	
<stat2>	signal quality	
<stat3>	service	
<stat4>	message	
<stat5>	call	
<stat6>	roam	
<stat7>	smsfull	
<stat8>	call status	
	<b>Remark:</b> the last-issued/buffered call status is displayed	
<stat9>	GPRS coverage	
<stat10>	call setup	
<b>Note:</b> The Read command does NOT return the current setting of the indicator, what it does is issue the current value of the indicator. Example: +CIND: 2,3,1,0,0,0,0,0,1,0 indicates battery charge = 2, signal quality = 3, service = 1, call = 0 .....etc.		
Write command AT+CIND=[<ind>],[<ind>],[...],....	Response: OK/ERROR/+CME ERROR	
	Parameter:	
<ind>	0	the indicator is switched off
	1	the indicator is switched on
<b>Note:</b>  To have all the unsolicited result codes of the above parameters <stat1> to <stat10> displayed, you must set the <ind> parameter of the AT+CMER command to 2 (AT+CMER=x,x,x,2  To filter for relevant unsolicited result codes only (e.g. smsfull, or roam), you must set the <ind> parameter of the AT+CMER command to 1 and,also, the values of those <stat1> to <stat10> parameters to 0 that you want displayed.  <b>Example:</b>  Issuing the AT+CIND=0,1,1,..... command in combination with AT+CMER=x,x,x,1 will display only the first parameter (i.e. battery charge) as an unsolicited result code, since only the indicator for battery charge is set to 0.		

### AT+CLVL

AT+CLVL	Loudspeaker volume level
Test command AT+CLVL=?	Response: +CLVL: (list of supported <level>s) OK
Read command AT+CLVL?	Response: +CLVL: <level> OK/ERROR/+CME ERROR
Write command AT+CLVL=<level>	Response: OK/ERROR/+CME ERROR Parameter: <level> Loudspeaker Volume Level

### AT+CMEC

AT+CMEC	Mobile Termination control mode												
Test command AT+CMEC=?	<div>Response: +CMEC: (list of supported <a href="#">&lt;keyp&gt;</a>s) , (list of supported <a href="#">&lt;disp&gt;</a>s) , (list of supported <a href="#">&lt;ind&gt;</a>s) OK / ERROR / +CME ERROR</div> <div>Parameter: <table><tr><td><a href="#">&lt;keyp&gt;</a></td><td>0</td><td>MT can be operated only through its keypad (execute command of AT+CKPD cannot be used)</td></tr><tr><td></td><td>2</td><td>MT can be operated from both MT keypad and TE</td></tr><tr><td><a href="#">&lt;disp&gt;</a></td><td>0</td><td>only MT can write to its display</td></tr><tr><td><a href="#">&lt;ind&gt;</a></td><td>0</td><td>only MT can set the status of its indicators</td></tr></table></div>	<a href="#">&lt;keyp&gt;</a>	0	MT can be operated only through its keypad (execute command of AT+CKPD cannot be used)		2	MT can be operated from both MT keypad and TE	<a href="#">&lt;disp&gt;</a>	0	only MT can write to its display	<a href="#">&lt;ind&gt;</a>	0	only MT can set the status of its indicators
<a href="#">&lt;keyp&gt;</a>	0	MT can be operated only through its keypad (execute command of AT+CKPD cannot be used)											
	2	MT can be operated from both MT keypad and TE											
<a href="#">&lt;disp&gt;</a>	0	only MT can write to its display											
<a href="#">&lt;ind&gt;</a>	0	only MT can set the status of its indicators											
Read command AT+CMEC?	<div>Response: +CMEC: <a href="#">&lt;keyp&gt;</a> , 0 , 0 OK / ERROR / +CME ERROR</div> <div>Parameter: <a href="#">&lt;keyp&gt;</a> See Test command</div>												
Write command AT+CMEC=[ <a href="#">&lt;keyp&gt;</a> [,0[,0]]]	<div>Response: OK / ERROR / +CME ERROR</div> <div>Parameter: <a href="#">&lt;keyp&gt;</a> See Test command</div>												

**AT+CMER**

AT+CMER	Mobile Termination control mode																																							
Test command AT+CMER=?	<p>Response: +CMER : (list of supported <a href="#">&lt;mode&gt;</a>s) , (list of supported <a href="#">&lt;keyp&gt;</a>s) , (list of supported <a href="#">&lt;disp&gt;</a>s) , (list of supported <a href="#">&lt;ind&gt;</a>s) , (list of supported <a href="#">&lt;bfr&gt;</a>s)</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table><tr><td><a href="#">&lt;mode&gt;</a></td><td>0</td><td>buffer unsolicited result codes in the TA; if TA result code buffer is full, codes the oldest ones are discarded</td></tr><tr><td></td><td>1</td><td>discard unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</td></tr><tr><td></td><td>2</td><td>buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation; otherwise forward them directly to the TE</td></tr><tr><td></td><td>3</td><td>same as “2”. This input for the bluetooth carkit is acceptable but the behaviour is same as mode=2</td></tr><tr><td><a href="#">&lt;keyp&gt;</a></td><td>0</td><td>no keypad event reporting</td></tr><tr><td></td><td>1</td><td>keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> , where <a href="#">&lt;key&gt;</a> indicates the key (refer values defined in table for AT+CKPD) and <a href="#">&lt;press&gt;</a> whether the key is pressed (1) or released (0). Only key pressings that are not caused by AT+CKPD are indicated by the TA to the TE</td></tr><tr><td></td><td>2</td><td>keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> . All key pressings shall be directed from TA to TE</td></tr><tr><td><a href="#">&lt;disp&gt;</a></td><td>0</td><td>no display event reporting</td></tr><tr><td><a href="#">&lt;ind&gt;</a></td><td>0</td><td>no indicator event reporting</td></tr><tr><td></td><td>1</td><td>indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . <a href="#">&lt;ind&gt;</a> indicates the indicator order number (as specified for AT+CIND), while <a href="#">&lt;value&gt;</a> is the new value of that indicator. Only those indicator events that are not caused by AT+CIND are indicated by the TA to the TE</td></tr><tr><td></td><td>2</td><td>indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . All indicator events are be directed by TA to TE</td></tr><tr><td><a href="#">&lt;bfr&gt;</a></td><td>0</td><td>TA buffer of unsolicited result codes defined within this command is cleared when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered</td></tr><tr><td></td><td>1</td><td>TA buffer of unsolicited result codes defined within this command is flushed to the TE when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered (OK response shall be given before flushing the codes)</td></tr></table>	<a href="#">&lt;mode&gt;</a>	0	buffer unsolicited result codes in the TA; if TA result code buffer is full, codes the oldest ones are discarded		1	discard unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE		2	buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation; otherwise forward them directly to the TE		3	same as “2”. This input for the bluetooth carkit is acceptable but the behaviour is same as mode=2	<a href="#">&lt;keyp&gt;</a>	0	no keypad event reporting		1	keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> , where <a href="#">&lt;key&gt;</a> indicates the key (refer values defined in table for AT+CKPD) and <a href="#">&lt;press&gt;</a> whether the key is pressed (1) or released (0). Only key pressings that are not caused by AT+CKPD are indicated by the TA to the TE		2	keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> . All key pressings shall be directed from TA to TE	<a href="#">&lt;disp&gt;</a>	0	no display event reporting	<a href="#">&lt;ind&gt;</a>	0	no indicator event reporting		1	indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . <a href="#">&lt;ind&gt;</a> indicates the indicator order number (as specified for AT+CIND), while <a href="#">&lt;value&gt;</a> is the new value of that indicator. Only those indicator events that are not caused by AT+CIND are indicated by the TA to the TE		2	indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . All indicator events are be directed by TA to TE	<a href="#">&lt;bfr&gt;</a>	0	TA buffer of unsolicited result codes defined within this command is cleared when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered		1	TA buffer of unsolicited result codes defined within this command is flushed to the TE when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered (OK response shall be given before flushing the codes)
<a href="#">&lt;mode&gt;</a>	0	buffer unsolicited result codes in the TA; if TA result code buffer is full, codes the oldest ones are discarded																																						
	1	discard unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE																																						
	2	buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation; otherwise forward them directly to the TE																																						
	3	same as “2”. This input for the bluetooth carkit is acceptable but the behaviour is same as mode=2																																						
<a href="#">&lt;keyp&gt;</a>	0	no keypad event reporting																																						
	1	keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> , where <a href="#">&lt;key&gt;</a> indicates the key (refer values defined in table for AT+CKPD) and <a href="#">&lt;press&gt;</a> whether the key is pressed (1) or released (0). Only key pressings that are not caused by AT+CKPD are indicated by the TA to the TE																																						
	2	keypad event reporting using result code +CKEV : <a href="#">&lt;key&gt;</a> , <a href="#">&lt;press&gt;</a> . All key pressings shall be directed from TA to TE																																						
<a href="#">&lt;disp&gt;</a>	0	no display event reporting																																						
<a href="#">&lt;ind&gt;</a>	0	no indicator event reporting																																						
	1	indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . <a href="#">&lt;ind&gt;</a> indicates the indicator order number (as specified for AT+CIND), while <a href="#">&lt;value&gt;</a> is the new value of that indicator. Only those indicator events that are not caused by AT+CIND are indicated by the TA to the TE																																						
	2	indicator event reporting using result code +CIEV : <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;value&gt;</a> . All indicator events are be directed by TA to TE																																						
<a href="#">&lt;bfr&gt;</a>	0	TA buffer of unsolicited result codes defined within this command is cleared when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered																																						
	1	TA buffer of unsolicited result codes defined within this command is flushed to the TE when <a href="#">&lt;mode&gt;</a> 1 . . . 3 is entered (OK response shall be given before flushing the codes)																																						
Read command AT+CMER?	<p>Response: +CMER: <a href="#">&lt;mode&gt;</a> , <a href="#">&lt;keyp&gt;</a> , 0 , <a href="#">&lt;ind&gt;</a> , <a href="#">&lt;bfr&gt;</a> OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table><tr><td><a href="#">&lt;mode&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;keyp&gt;</a></td><td>See Test command</td></tr></table>	<a href="#">&lt;mode&gt;</a>	See Test command	<a href="#">&lt;keyp&gt;</a>	See Test command																																			
<a href="#">&lt;mode&gt;</a>	See Test command																																							
<a href="#">&lt;keyp&gt;</a>	See Test command																																							

	< <a href="#">ind</a> >	See Test command
	< <a href="#">bfr</a> >	See Test command
Write command AT+CMER=[ < <a href="#">mode</a> > ], [ < <a href="#">key</a> > ], [ < <a href="#">disp</a> > ], [ < <a href="#">ind</a> > ], [ < <a href="#">bfr</a> > ]		
	Response: OK/ERROR/+CME ERROR	
	Parameter:	
	< <a href="#">mode</a> >	See Test command
	< <a href="#">key</a> >	See Test command
	< <a href="#">disp</a> >	See Test command
	< <a href="#">ind</a> >	See Test command
	< <a href="#">bfr</a> >	See Test command
Unsolicited result code: +CIEV: < <a href="#">ind</a> >, < <a href="#">value</a> > +CKEV: < <a href="#">key</a> >, < <a href="#">press</a> >		
	Parameter:	
	< <a href="#">ind</a> >	The number of the indicator according to command AT+CIND=?
	< <a href="#">value</a> >	The new value of the indicator according to AT+CIND=? e.g. +CIEV: 8,101 -> call status indicator (8), new value 'call number one was released' (101).
	< <a href="#">key</a> >	Indicates the key the indication is for (refer values defined in table for AT+CKPD).
	< <a href="#">press</a> >	Status of < <a href="#">key</a> > e.g.: +CKEV: "E",0 End key was released 0     < <a href="#">key</a> > released 1     < <a href="#">key</a> > pressed

## AT+CMUT

AT+CMUT	Mute control
Test command AT+CMUT=?	Response: +CMUT: (list of supported < <a href="#">n</a> >s) OK Parameter: < <a href="#">n</a> >     0     mute off 1     mute on
Read command AT+CMUT?	Response: +CMUT: < <a href="#">n</a> > OK/ERROR/+CME ERROR Parameter: < <a href="#">n</a> >     See Test command
Write command AT+CMUT=< <a href="#">n</a> >	Response: OK/ERROR/+CME ERROR Parameter: < <a href="#">n</a> >     See Test command
<b>Note:</b> Only applicable during an active/hold call	

**AT+CPAS**

AT+CPAS	Query the telephone status
Test command AT+CPAS=?	Response: +CPAS: (list of supported <a href="#">&lt;pas&gt;</a> s) OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;pas&gt;</a> 0    Ready 3    Incoming call (phone is ringing) 4    Call is active
Execute command AT+CPAS	Response: +CPAS: <a href="#">&lt;pas&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;pas&gt;</a> see Test command

**AT+CPBF**

AT+CPBF	Find book entries
Test command AT+CPBF=?	Response: +CPBF: <a href="#">&lt;nlength&gt;</a> , <a href="#">&lt;tlength&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;nlength&gt;</a> Max. length of telephone number <a href="#">&lt;tlength&gt;</a> Max. length of text corresponding to the number
Write command AT+CPBF=< <a href="#">findtext</a> >	Response: [+CPBF: <a href="#">&lt;index1&gt;</a> , <a href="#">&lt;number&gt;</a> , <a href="#">&lt;type&gt;</a> , <a href="#">&lt;text&gt;</a> [...] +CPBF: <a href="#">&lt;index2&gt;</a> , <a href="#">&lt;number&gt;</a> , <a href="#">&lt;type&gt;</a> , <a href="#">&lt;text&gt;</a> ] OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;findtext&gt;</a> Text where to search within the current phonebook memory <a href="#">&lt;findtext&gt;</a> depends on AT+CSCS <a href="#">&lt;index&gt;</a> location numbers of phonebook memory <a href="#">&lt;number&gt;</a> phone number of format <a href="#">&lt;text&gt;</a> <a href="#">&lt;type&gt;</a> integer type; Type of address octet (see TS 24.008) <a href="#">&lt;text&gt;</a> Text corresponding to the telephone number <a href="#">&lt;text&gt;</a> depends on AT+CSCS



## AT+CPBR

AT+CPBR	Read a telephone-book entry
Test command AT+CPBR=?	Response: +CPBR: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR  Parameter: <index>            Location number <nlength>        Max. length of telephone number <tlength>        Max. length of text corresponding to the number
Write command AT+CPBR=<index1>[,<index2>]	Response: [+CPBR: <index1>, <number>, <type>, <text> [[...]<CR><LF> +CPBR: <index2>, <number>, <type>, <text>]] OK/ERROR/+CME ERROR  Parameter: <index1>        Location number where the read of the entry starts <index2>        Location number where the read of the entry ends <number>        Telephone number <type>           Type of number <text>           Text corresponding to the telephone number <text> depends on AT+CSCS.
<b>Note:</b> In the <text> field, special characters like the following may be displayed: `" ` (0x22), `@ ` (0x00), `ð ` (0x08), `Ö ` (0x5c). See also sections on AT+CPBW and Appendix A: "How to use special characters in certain commands ( e. g., AT+CPBW)". Empty entries do not produce any output.	

**AT+CPBS**

AT+CPBS	Select a telephone book														
Test command AT+CPBS=?	Response: +CPBS: (list of supported <a href="#">&lt;sto&gt;</a> s) OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;sto&gt;</a> <table> <tr><td>FD</td><td>SIM fix-dialing phonebook</td></tr> <tr><td>SM</td><td>SIM phonebook</td></tr> <tr><td>DC</td><td>ME Dialed Calls List</td></tr> <tr><td>ON</td><td>SIM (or ME) own numbers (MSISDNs) list</td></tr> <tr><td>LD</td><td>SIM last-dialing phonebook</td></tr> <tr><td>MC</td><td>ME missed (unanswered received) calls list</td></tr> <tr><td>RC</td><td>ME received calls list</td></tr> </table>	FD	SIM fix-dialing phonebook	SM	SIM phonebook	DC	ME Dialed Calls List	ON	SIM (or ME) own numbers (MSISDNs) list	LD	SIM last-dialing phonebook	MC	ME missed (unanswered received) calls list	RC	ME received calls list
FD	SIM fix-dialing phonebook														
SM	SIM phonebook														
DC	ME Dialed Calls List														
ON	SIM (or ME) own numbers (MSISDNs) list														
LD	SIM last-dialing phonebook														
MC	ME missed (unanswered received) calls list														
RC	ME received calls list														
	For a description of telephone-book features, see section 3.2.														
Read command AT+CPBS?	Response: +CPBS: <a href="#">&lt;sto&gt;</a> , <a href="#">&lt;used&gt;</a> , <a href="#">&lt;total&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;sto&gt;</a> See Test command <a href="#">&lt;used&gt;</a> integer type value indicating the number of used locations in selected memory <a href="#">&lt;total&gt;</a> integer type value indicating the total number of locations in selected memory														
Write command AT+CPBS= <a href="#">&lt;sto&gt;</a> [, <a href="#">&lt;passwd&gt;</a> ]	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;sto&gt;</a> See Test command <a href="#">&lt;passwd&gt;</a> PIN2 only for selecting the FD-phonebook														

**AT+CPBW**

AT+CPBW	Write a telephone-book entry
Test command AT+CPBW=?	Response: +CPBW: (list of supported <a href="#">&lt;index&gt;</a> s), <a href="#">&lt;nlength&gt;</a> ,(list of supported <a href="#">&lt;type&gt;</a> s), <a href="#">&lt;tlength&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;index&gt;</a> Location number <a href="#">&lt;nlength&gt;</a> Max. length of telephone number <a href="#">&lt;tlength&gt;</a> Max. length of text corresponding to the number
Write command AT+CPBW=[ <a href="#">&lt;index&gt;</a> ][, <a href="#">&lt;nummer&gt;</a> ][, <a href="#">&lt;type&gt;</a> ][, <a href="#">&lt;text&gt;</a> ]]]	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;index&gt;</a> Location number at which the entry is written <a href="#">&lt;nummer&gt;</a> Telephone number <a href="#">&lt;type&gt;</a> Type of number



	The required error message can (must) be provoked by an attempted Write command
Write command AT+CPIN=< <a href="#">pin</a> >[,< <a href="#">newpin</a> >]	
	Response: OK / ERROR / +CME ERROR
	Parameter: < <a href="#">pin</a> > Password for appropriate lock; if the lock is a PUK, a < <a href="#">newpin</a> > is necessary.
	< <a href="#">newpin</a> > New password for the lock

## AT+CPUC

AT+CPUC	Price per unit and currency table
Test command AT+CPUC=?	Response: OK
Read command AT+CPUC?	Response: +CPUC: <currency> , <ppu> OK / ERROR / +CME ERROR Parameter: <currency> three-character currency code (e.g. "EUR") see AT+CSCS command <ppu> price per unit; dot is used as a decimal separator (e.g. "1.33")
Write command AT+CPUC=<currency>,<ppu>[,<passwd>]	Response: OK / ERROR / +CME ERROR Parameter: <passwd> String type; usually PIN2

## AT+CRMP

AT+CRMP	Ring Melody Playback
Test command AT+CRMP=?	Response: +CRMP: (list of supported <call_type>s) , (list of supported <volume>s) OK
Write command +CRMP=<call_type>[,<volume>]	Response: +CRMP: <call_type>[ , <volume>] OK / ERROR / +CME ERROR Parameter: <call_type> For details see Appendix 5.3. <volume> integer type parameter with manufacturer specific range
<b>Note:</b> The Write command starts playing the ring melody.	
Execute command AT+CRMP	Response: OK / ERROR / +CME ERROR
<b>Note:</b> The Execute command stops the melody played. If an MTC is received during an active test ring, the test ring is switched off and the "normal" ring is switched on.	

AT+CRSL

AT+CRSL	Ringer sound level
Test command AT+CRSL=?	Response: +CRSL: (list of supported <a href="#">&lt;level&gt;s</a> ) OK Parameter: <a href="#">&lt;level&gt;</a> Ringer Sound Level
Read command AT+CRSL?	Response: +CRSL: <a href="#">&lt;level&gt;</a> OK / ERROR / +CME ERROR
Write command AT+CRSL= <a href="#">&lt;level&gt;</a>	Response: OK / ERROR / +CME ERROR Parameter: <a href="#">&lt;level&gt;</a> See Test command

AT+CRSM

AT+CRSM	Restricted SIM access		
Test command AT+CRSM=?	Response: OK		
Write command +CRSM=<command>[,<file_id>[,<P1>,<P2>,<P3>[,<data>[,<pathid>]]]]			
Response: +CRSM: <sw1>,<sw2>[,<response>] OK / ERROR / +CME ERROR			
Parameter:			
<command>	176	READ BINARY	
	178	READ RECORD	
	192	GET RESPONSE	
	214	UPDATE BINARY	
	220	UPDATE RECORD	
	242	STATUS	
<file_id>	integer	identifier of the data file on the SIM, mandatory for every command except STATUS (see 2)	
<P1> , <P2> , <P3>	integer	transferral parameter from ME to SIM, mandatory for every command except GET RESPONSE , STATUS (see 2)	
<data>	Hex. string	information to be written to the SIM	
<pathid>	Hex. string	string type; contains the path of an elementary file on the SIM/UICC in hexadecimal format as defined in ETSI TS 102 221 [60].	
<sw1> , <sw2>	integer	information from the SIM as to whether the command was executed at all, and if so, how	
<response>	Hex. string	return value received from the SIM; not available for UPDATE commands	

### AT+CSDF

AT+CSDF	Set Date Format															
Test command AT+CSDF=?	Response: +CSDF: (list of supported <a href="#">mode</a> s) OK Parameter: <table><tr><td><a href="#">mode</a></td><td>3</td><td>MM/DD/YYYY</td></tr><tr><td></td><td>4</td><td>DD/MM/YYYY</td></tr><tr><td></td><td>5</td><td>DD.MM.YYYY (default)</td></tr><tr><td></td><td>6</td><td>YYYY.MM.DD</td></tr><tr><td></td><td>7</td><td>YYYY-MM-DD</td></tr></table>	<a href="#">mode</a>	3	MM/DD/YYYY		4	DD/MM/YYYY		5	DD.MM.YYYY (default)		6	YYYY.MM.DD		7	YYYY-MM-DD
<a href="#">mode</a>	3	MM/DD/YYYY														
	4	DD/MM/YYYY														
	5	DD.MM.YYYY (default)														
	6	YYYY.MM.DD														
	7	YYYY-MM-DD														
Read command AT+CSDF?	Response: +CSDF: <a href="#">mode</a> OK Parameter: <a href="#">mode</a> See Test command															
Write command AT+CSDF=[ <a href="#">mode</a> ]	Response: OK / ERROR / +CME ERROR Parameter: <a href="#">mode</a> See Test command															

### AT+CSGT

AT+CSGT	Get / Set Own Greetings
Test command AT+CSGT=?	Response +CSGT: ( 0 , 1 ) , <ltext> OK / ERROR / +CME ERROR
Read command AT+CSGT?	Response +CSGT: <text> , <mode> OK / ERROR / +CME ERROR
	Parameter
	<mode>            0    Enabled
	1    Disabled
	<ltext>           Maximum text length
	<text>            String; Greeting Text
Write command AT+CSGT=<mode>[,<text>]	Response OK / ERROR / +CME ERROR

AT+CSQ

AT+CSQ	Output signal quality
Test command AT+CSQ=?	Response: +CSQ: (list of supported <rss>s), list of supported <ber>s) OK/ERROR/+CME ERROR Parameter: <rss>                      Reception level 0                      -113 dBm or less 1                      111 dBm 2 - 30               -109 to -53 dBm 31                      -51 dBm or more 99                      Unknown <ber>                      Bit error rate 0-7                      Like RXQUAL values in Table GSM 05.08 [10] in section 8.2.4 99                      Unknown
Execute command AT+CSQ	Response: +CSQ: <rss>, <ber> OK/ERROR/+CME ERROR Parameter: <rss>                      See Test command <ber>                      See Test command

AT+CSTF

AT+CSTF	Set Time Format
Test command AT+CSTF=?	Response: +CSTF: (list of supported <mode>s) OK Parameter: <mode>                      1      HH:MM (24 hour clock) (default) 2      HH:MM a.m./p.m
Read command AT+CSTF?	Response: +CSTF: <mode> OK Parameter: <mode>                      See Test command
Write command AT+CSTF=[<mode>]	Response: OK/ERROR/+CME ERROR Parameter: <mode>                      See Test command



## AT+CSVM

AT+CSVM	Set voice mail number
Test command AT+CSVM=?	Response: +CSVM: (list of supported <a href="#">&lt;mode&gt;s</a> ) , (list of supported <a href="#">&lt;type&gt;s</a> ) OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;mode&gt;</a> 0      Disable the voice mail number 1      Enable the voice mail number <a href="#">&lt;type&gt;</a> integer type; Type of address octet (refer TS 24.008) 128..255
Read command AT+CSVM?	Response: +CSVM: <a href="#">&lt;mode&gt;</a> , <a href="#">&lt;number&gt;</a> , <a href="#">&lt;type&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;mode&gt;</a> See Test command <a href="#">&lt;number&gt;</a> string type; Character string <0..9,+> <a href="#">&lt;type&gt;</a> See Test command
Write command AT+CSVM= <a href="#">&lt;mode&gt;</a> [, <a href="#">&lt;number&gt;</a> [, <a href="#">&lt;type&gt;</a> ]]	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;mode&gt;</a> See Test command <a href="#">&lt;number&gt;</a> See Read command <a href="#">&lt;type&gt;</a> See Test command

## AT+CTZR

AT+CTZR	Time Zone Reporting
Test command AT+CTZR=?	Response: +CTZR: (list of supported <a href="#">&lt;n&gt;s</a> ) OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;n&gt;</a> 0      Disable time zone change reporting 1      Enable time zone change reporting
Read command AT+CTZR?	Response: +CTZR: <a href="#">&lt;n&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;n&gt;</a> See Test command
Write command AT+CTZR= <a href="#">&lt;n&gt;</a>	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;n&gt;</a> See Test command
Unsolicited result code +CTZV: <a href="#">&lt;tz&gt;</a>	Parameter: <a href="#">&lt;tz&gt;</a> Refer to AT+CCLK (e.g."+04" for time zone with 1 hour more than UTC)

**AT+CTZU**

AT+CTZU	Automatic Time Zone Update					
Test command AT+CTZU=?	Response: +CTZU: (list of supported <u>&lt;n&gt;</u> s ) OK / ERROR / +CME ERROR					
	Parameter:					
	<table><tr><td><u>&lt;n&gt;</u></td><td>0</td><td>Disable time zone change update</td></tr><tr><td></td><td>1</td><td>Enable time zone change update</td></tr></table>	<u>&lt;n&gt;</u>	0	Disable time zone change update		1
<u>&lt;n&gt;</u>	0	Disable time zone change update				
	1	Enable time zone change update				
Read command AT+CTZU?	Response +CTZU: <u>&lt;n&gt;</u> OK / ERROR / +CME ERROR					
Write command AT+CTZU=<n>	Parameter: <u>&lt;n&gt;</u> See Test command					

**AT+CUSD**

AT+CUSD	Unstructured supplementary service data	
Test command AT+CUSD=?	Response: +CUSD: (list of supported <u>&lt;n&gt;</u> s) OK / ERROR / +CME ERROR	
	Parameter:	
	<u>&lt;n&gt;</u>	0 Disable
		1 Enable
		2 Cancel session (not applicable to Read command)
Read command AT+CUSD?	Response: +CUSD: <u>&lt;n&gt;</u> OK / ERROR / +CME ERROR	
Write command AT+CUSD=[ <u>&lt;n&gt;</u> ,[ <u>&lt;str&gt;</u> [, <u>&lt;dcs&gt;</u> ]]]		
	Parameter	
	<u>&lt;n&gt;</u>	See Test command
	<u>&lt;str&gt;</u>	String type USSD string
	<u>&lt;dcs&gt;</u>	Integer, Data Coding Scheme (default 15)
Unsolicited result code +CUSD: <m>[,<str>,<dcs>]		
	Parameter:	
	<u>&lt;m&gt;</u>	0 USSD Notify
		1 USSD Request
		2 USSD terminated by network
		4 USSD operation not supported

## AT+CVIB

AT+CVIB	Vibrator mode
Test command AT+CVIB=?	Response: +CVIB: (list of supported <a href="#">&lt;mode&gt;s</a> ) OK Parameter: <a href="#">&lt;mode&gt;</a> See Write command, but only 0 an 1
Read command AT+CVIB?	Response: +CVIB: <a href="#">&lt;mode&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;mode&gt;</a> See Test command, but only 0 and 1
Write command AT+CVIB= <a href="#">&lt;mode&gt;</a>	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;mode&gt;</a> See Test command 0 general disable vibration 1 general enable vibration 16 - 22 vibration settings for calls (STANDARD, HELICOPTER, UFO, SHOCK, MOSQUITO, TRAIN,OFF) 50 - 55 vibration settings for messages, see calls (no OFF) 56 disable general SMS vibration 57 enable general SMS vibration 58 disable general CBS vibration 59 enable general CBS vibration 100 - 106 vibration settings for instant messages values see calls 150 - 156 vibration settings for alarm clock, values see calls

### 2.3.5 Extensions of Hayes Standard commands for GPRS

This chapter describes all the extensions of the Hayes Standard commands for GPRS.

Command	Function
ATD*<GPRS_SC>[*[<called_address>][*[<L2P>]][*[<cid>]]]#	<p>Request GPRS service</p> <p>&lt;GPRS_SC&gt;                      GPRS Service Code a digit string (value 99)</p> <p>&lt;called_address&gt;                a string that identifies the called party in the address space</p> <p>&lt;L2P&gt;                            a string which indicates the layer 2 protocol</p> <p>&lt;cid&gt;                             a digit string which specifies a particular PDP context definition. The cid has to be defined by using the AT+CGDCONT command</p> <p>The dial command responds with CONNECT or ERROR</p>
ATD*<GPRS_SC_IP>[*<cid>]#	<p>Request GPRS IP service</p> <p>&lt;GPRS_SC_IP&gt;                   GPRS Service Code a digit string (value 98)</p> <p>&lt;cid&gt;                             a digit string which specifies a particular PDP context definition. The cid has to be defined by using the AT+CGDCONT command</p> <p>The dial command responds with CONNECT or ERROR</p>
ATO	Return to on-line data state
ATS0	Automatic answer. The command may be used to turn off (n=0) and on (n>0) the automatic response to a network request for a PDP context activation.
ATS3	Termination character
ATS4	Response formatting character
ATS5	Command line editing character
ATS7	Wait for carrier after dialing (in seconds).

### 2.3.6 Commands for GPRS

This section provides the descriptions of commands related to GPRS.

#### AT+CGACT

AT+CGACT	PDP context activate or deactivate
Test command AT+CGACT=?	Response: +CGACT: (list of supported <state>s) OK / ERROR / +CME ERROR Parameter: <state>                      indicates the state of PDP context activation 0      deactivated 1      activated
Read command AT+CGACT?	Response: +CGACT: <cid> , <state> [ <CR> <LF> +CGACT: <cid> , <state> . . . ] ] OK / ERROR / +CME ERROR Parameter: <cid>                      numeric PDP Context Identifier <state>                    See Test command
Write command AT+CGACT=[<state>[,<cid>[,<cid>[...]]]]	Response: OK / ERROR / +CME ERROR Parameter: <cid>                      See Read command <state>                    See Test command

#### AT+CGANS

AT+CGANS	Manual response to a network request for PDP context activation
Test command AT+CGANS=?	Response: +CGANS: (list of supported <response>s), (list of supported <L2P>s) OK / ERROR / +CME ERROR Parameter: <response>      0      the request is rejected 1      the request is answered <L2P>                      layer 2 protocol to be used between the TE and MT PPP
Write command AT+CGANS=[<response> , [<L2P> , [<cid>]]]	Response: CONNECT / ERROR / +CME ERROR Parameter: <response>              See Test command <L2P>                      See Test command <cid>                      numeric PDP Context Identifier

**AT+CGATT**

AT+CGATT	GPRS attach or detach
Test command AT+CGATT=?	Response: +CGATT: (list of supported <state>s) OK / ERROR / +CME ERROR Parameter: <state> indicates the state of GPRS attachment 0 detached 1 attached
Read command AT+CGATT?	Response: +CGATT: <state> OK / ERROR / +CME ERROR Parameter: <state> See Test command
Write command AT+CGATT=[<state>]	Response: OK / ERROR / +CME ERROR Parameter: <state> See Test command

**AT+CGAUTO**

AT+CGAUTO	Auto response to a network request for PDP context activation
Test command AT+CGAUTO=?	Response: +CGAUTO: (list of supported <n>s) OK / ERROR / +CME ERROR Parameter: <n> indicates the state of PDP context activation 0 turn off automatic response for GPRS only 1 turn on automatic response for GPRS only 3 modem compatibility mode, GPRS and circuit switched calls (default)
Read command AT+CGAUTO?	Response: +CGAUTO: <n> OK / ERROR / +CME ERROR Parameter: <n> See Test command
Write command AT+CGAUTO=[<n>]	Response: OK / ERROR / +CME ERROR Parameter: <n> See Test command

### AT+CGCLASS

AT+CGCLASS	GPRS mobile station class
Test command AT+CGCLASS=?	Response: +CGCLASS: (list of supported <class>s) OK/ERROR/+CME ERROR Parameter: <class> string parameter for the GPRS mobile class B class B CG class C in GPRS only mode CC class C in circuit switched only mode (lowest)
Read command AT+CGCLASS?	Response: +CGCLASS: <class> OK/ERROR/+CME ERROR Parameter: <n> See Test command
Write command AT+CGCLASS=[<class>]	Response: OK/ERROR/+CME ERROR Parameter: <class> See Test command

### AT+CGCMOD

AT+CGCMOD	PDP context Modify
Test command AT+CGCMOD=?	Response: +CGCMOD: (list of <cid>s associated with active contexts) OK/ERROR/+CME ERROR Parameter: <cid> numeric PDP Context Identifier
Write command AT+CGCMOD=[<cid>[,<cid>[,...]]]	Response: OK/ERROR/+CME ERROR Parameter: <cid> See Test command

### AT+CGDATA

AT+CGDATA	Enter data state
Test command AT+CGDATA=?	Response: +CGDATA: (list of supported <L2P>s) OK/ERROR/+CME ERROR Parameter: <L2P> Layer 2 protocol to be used between the TE and MT PPP Point-to-Point Protocol
Write command AT+CGDATA=[<L2P> ,<cid> [,<cid> [...]]]	Response: CONNECT/ERROR/+CME ERROR Parameter: <L2P> See Test command <cid> 1 .. x numeric PDP Context Identifier (maximum value x returned by command AT+CGDCONT=?)

**AT+CGDCONT**

AT+CGDCONT	Define PDP Context																																							
Test command AT+CGDCONT=?	<p>Response:</p> <p>+CGDCONT: (range of supported &lt;cid&gt;s), &lt;PDP_type&gt; , , , (list of supported &lt;d_comp&gt;s), (list of supported &lt;h_comp&gt;s) [ &lt;CR&gt;&lt;LF&gt; ]</p> <p>+CGDCONT: (range of supported &lt;cid&gt;s), &lt;PDP_type&gt; , , , (list of supported &lt;d_comp&gt;s), (list of supported &lt;h_comp&gt;s) [ . . . ] ]</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table><tr><td>&lt;cid&gt;</td><td>1 .. x</td><td>numeric PDP Context Identifier</td></tr><tr><td>&lt;PDP_type&gt;</td><td></td><td>string parameter of Packet Data Protocol type</td></tr><tr><td></td><td>PPP</td><td>Type PPT</td></tr><tr><td></td><td>IP</td><td>Type IP</td></tr><tr><td>&lt;d_comp&gt;</td><td></td><td>numeric parameter that controls PDP data compression</td></tr><tr><td></td><td>0</td><td>off</td></tr><tr><td></td><td>1</td><td>on (manufacturer preferred compression)</td></tr><tr><td></td><td>2</td><td>V.42bis</td></tr><tr><td>&lt;h_comp&gt;</td><td></td><td>numeric parameter that controls PDP header compression</td></tr><tr><td></td><td>0</td><td>off</td></tr><tr><td></td><td>1</td><td>on (manufacturer preferred compression) which is RFC1144 if it is available</td></tr><tr><td></td><td>2</td><td>RFC1144 (applicable for SDCP only)</td></tr><tr><td></td><td>3</td><td>RFC2507</td></tr></table>	<cid>	1 .. x	numeric PDP Context Identifier	<PDP_type>		string parameter of Packet Data Protocol type		PPP	Type PPT		IP	Type IP	<d_comp>		numeric parameter that controls PDP data compression		0	off		1	on (manufacturer preferred compression)		2	V.42bis	<h_comp>		numeric parameter that controls PDP header compression		0	off		1	on (manufacturer preferred compression) which is RFC1144 if it is available		2	RFC1144 (applicable for SDCP only)		3	RFC2507
<cid>	1 .. x	numeric PDP Context Identifier																																						
<PDP_type>		string parameter of Packet Data Protocol type																																						
	PPP	Type PPT																																						
	IP	Type IP																																						
<d_comp>		numeric parameter that controls PDP data compression																																						
	0	off																																						
	1	on (manufacturer preferred compression)																																						
	2	V.42bis																																						
<h_comp>		numeric parameter that controls PDP header compression																																						
	0	off																																						
	1	on (manufacturer preferred compression) which is RFC1144 if it is available																																						
	2	RFC1144 (applicable for SDCP only)																																						
	3	RFC2507																																						
Read command AT+CGDCONT?	<p>Response:</p> <p>+CGDCONT: &lt;cid&gt; , &lt;PDP_type&gt; , &lt;APN&gt; , &lt;PDP_addr&gt; , &lt;d_comp&gt; , &lt;h_comp&gt; [ &lt;CR&gt;&lt;LF&gt; ]</p> <p>+CGDCONT: &lt;cid&gt; , &lt;PDP_type&gt; , &lt;APN&gt; , &lt;PDP_addr&gt; , &lt;d_comp&gt; , &lt;h_comp&gt; [ . . . ] ]</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table><tr><td>&lt;cid&gt;</td><td>See Test command</td></tr><tr><td>&lt;PDP_type&gt;</td><td>See Test command</td></tr><tr><td>&lt;APN&gt;</td><td>string parameter for Access Point Name</td></tr><tr><td>&lt;PDP_addr&gt;</td><td>string parameter: Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16' for IPv6.</td></tr><tr><td>&lt;d_comp&gt;</td><td>See Test command</td></tr><tr><td>&lt;h_comp&gt;</td><td>See Test command</td></tr></table>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	string parameter for Access Point Name	<PDP_addr>	string parameter: Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16' for IPv6.	<d_comp>	See Test command	<h_comp>	See Test command																											
<cid>	See Test command																																							
<PDP_type>	See Test command																																							
<APN>	string parameter for Access Point Name																																							
<PDP_addr>	string parameter: Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16' for IPv6.																																							
<d_comp>	See Test command																																							
<h_comp>	See Test command																																							
Write command AT+CGDCONT=[<cid> [, <PDP_type> [, <APN> [, <PDP_addr> [, <d_comp> [, <h_comp> ]]]]]]	<p>Response:</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table><tr><td>&lt;cid&gt;</td><td>See Test command</td></tr><tr><td>&lt;PDP_type&gt;</td><td>See Test command</td></tr><tr><td>&lt;APN&gt;</td><td>See Read command</td></tr><tr><td>&lt;PDP_addr&gt;</td><td>See Read command</td></tr><tr><td>&lt;d_comp&gt;</td><td>See Test command</td></tr><tr><td>&lt;h_comp&gt;</td><td>See Test command</td></tr></table>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	See Read command	<PDP_addr>	See Read command	<d_comp>	See Test command	<h_comp>	See Test command																											
<cid>	See Test command																																							
<PDP_type>	See Test command																																							
<APN>	See Read command																																							
<PDP_addr>	See Read command																																							
<d_comp>	See Test command																																							
<h_comp>	See Test command																																							



## AT+CGDSCONT

AT+CGDSCONT	Define Secondary PDP Context																																																
Test command AT+CGDSCONT=?	<p>Response:</p> <p>+CGDSCONT: (range of supported <a href="#">&lt;cid&gt;s</a>), (list of <a href="#">&lt;p_cid&gt;s</a> for active primary contexts) , <a href="#">&lt;PDP_type&gt;</a> , , , (list of supported <a href="#">&lt;d_comp&gt;s</a>), (list of supported <a href="#">&lt;h_comp&gt;s</a>) [ &lt;CR&gt;&lt;LF&gt;</p> <p>+CGDSCONT : (range of supported <a href="#">&lt;cid&gt;s</a>), (list of <a href="#">&lt;p_cid&gt;s</a> for active primary contexts) , <a href="#">&lt;PDP_type&gt;</a> , , , (list of supported <a href="#">&lt;d_comp&gt;s</a>), (list of supported <a href="#">&lt;h_comp&gt;s</a>) [ . . . ]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table><tr><td><a href="#">&lt;cid&gt;</a></td><td>1...x</td><td>numeric PDP Context Identifier</td></tr><tr><td><a href="#">&lt;p_cid&gt;</a></td><td></td><td>Primary PDP Context Identifier</td></tr><tr><td><a href="#">&lt;PDP_type&gt;</a></td><td></td><td>string parameter of Packet Data Protocol type</td></tr><tr><td></td><td>PPP</td><td>Type PPT</td></tr><tr><td></td><td>IP</td><td>Type IP</td></tr><tr><td></td><td>IPV6</td><td>Type IP Version 6</td></tr><tr><td><a href="#">&lt;d_comp&gt;</a></td><td></td><td>numeric parameter that controls PDP data compression</td></tr><tr><td></td><td>0</td><td>off</td></tr><tr><td></td><td>1</td><td>on (manufacturer preferred compression)</td></tr><tr><td></td><td>2</td><td>V.42bis</td></tr><tr><td><a href="#">&lt;h_comp&gt;</a></td><td></td><td>numeric parameter that controls PDP header compression</td></tr><tr><td></td><td>0</td><td>off</td></tr><tr><td></td><td>1</td><td>on (manufacturer preferred compression)</td></tr><tr><td></td><td></td><td>which is RFC1144 if it is available</td></tr><tr><td></td><td>2</td><td>RFC1144 (applicable for SNDCP only)</td></tr><tr><td></td><td>3</td><td>RFC2507</td></tr></table>	<a href="#">&lt;cid&gt;</a>	1...x	numeric PDP Context Identifier	<a href="#">&lt;p_cid&gt;</a>		Primary PDP Context Identifier	<a href="#">&lt;PDP_type&gt;</a>		string parameter of Packet Data Protocol type		PPP	Type PPT		IP	Type IP		IPV6	Type IP Version 6	<a href="#">&lt;d_comp&gt;</a>		numeric parameter that controls PDP data compression		0	off		1	on (manufacturer preferred compression)		2	V.42bis	<a href="#">&lt;h_comp&gt;</a>		numeric parameter that controls PDP header compression		0	off		1	on (manufacturer preferred compression)			which is RFC1144 if it is available		2	RFC1144 (applicable for SNDCP only)		3	RFC2507
<a href="#">&lt;cid&gt;</a>	1...x	numeric PDP Context Identifier																																															
<a href="#">&lt;p_cid&gt;</a>		Primary PDP Context Identifier																																															
<a href="#">&lt;PDP_type&gt;</a>		string parameter of Packet Data Protocol type																																															
	PPP	Type PPT																																															
	IP	Type IP																																															
	IPV6	Type IP Version 6																																															
<a href="#">&lt;d_comp&gt;</a>		numeric parameter that controls PDP data compression																																															
	0	off																																															
	1	on (manufacturer preferred compression)																																															
	2	V.42bis																																															
<a href="#">&lt;h_comp&gt;</a>		numeric parameter that controls PDP header compression																																															
	0	off																																															
	1	on (manufacturer preferred compression)																																															
		which is RFC1144 if it is available																																															
	2	RFC1144 (applicable for SNDCP only)																																															
	3	RFC2507																																															
Read command AT+CGDSCONT?	<p>Response:</p> <p>+CGDSCONT: <a href="#">&lt;cid&gt;</a> , <a href="#">&lt;p_cid&gt;</a> , <a href="#">&lt;d_comp&gt;</a> , <a href="#">&lt;h_comp&gt;</a></p> <p>[ &lt;CR&gt;&lt;LF&gt;+CGDSCONT: <a href="#">&lt;cid&gt;</a> , <a href="#">&lt;p_cid&gt;</a> , <a href="#">&lt;d_comp&gt;</a> , <a href="#">&lt;h_comp&gt;</a> [ . . . ]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table><tr><td><a href="#">&lt;cid&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;p_cid&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;d_comp&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;h_comp&gt;</a></td><td>See Test command</td></tr></table>	<a href="#">&lt;cid&gt;</a>	See Test command	<a href="#">&lt;p_cid&gt;</a>	See Test command	<a href="#">&lt;d_comp&gt;</a>	See Test command	<a href="#">&lt;h_comp&gt;</a>	See Test command																																								
<a href="#">&lt;cid&gt;</a>	See Test command																																																
<a href="#">&lt;p_cid&gt;</a>	See Test command																																																
<a href="#">&lt;d_comp&gt;</a>	See Test command																																																
<a href="#">&lt;h_comp&gt;</a>	See Test command																																																
Write command AT+CGDSCONT=[ <a href="#">&lt;cid&gt;</a> [, <a href="#">&lt;p_cid&gt;</a> , [ <a href="#">&lt;d_comp&gt;</a> , ], [ <a href="#">&lt;h_comp&gt;</a> ] ]]]	<p>Response:</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table><tr><td><a href="#">&lt;cid&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;p_cid&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;d_comp&gt;</a></td><td>See Test command</td></tr><tr><td><a href="#">&lt;h_comp&gt;</a></td><td>See Test command</td></tr></table>	<a href="#">&lt;cid&gt;</a>	See Test command	<a href="#">&lt;p_cid&gt;</a>	See Test command	<a href="#">&lt;d_comp&gt;</a>	See Test command	<a href="#">&lt;h_comp&gt;</a>	See Test command																																								
<a href="#">&lt;cid&gt;</a>	See Test command																																																
<a href="#">&lt;p_cid&gt;</a>	See Test command																																																
<a href="#">&lt;d_comp&gt;</a>	See Test command																																																
<a href="#">&lt;h_comp&gt;</a>	See Test command																																																

## AT+CGEQMIN

AT+CGEQMIN	3G Quality of Service Profile (Minimum acceptable)																																				
Test command AT+CGEQMIN=?	<p>Response:</p> <p>+CGEQMIN: &lt;PDP_type&gt;, (list of supported &lt;Traffic_class&gt;s), (list of supported &lt;Maximum bitrate UL&gt;s), (list of supported &lt;Maximum bitrate DL&gt;s), (list of supported &lt;Guaranteed bitrate UL&gt;s), (list of supported &lt;Guaranteed bitrate DL&gt;s), (list of supported &lt;Delivery order&gt;s), (list of supported &lt;Maximum SDU size&gt;s), (list of supported &lt;SDU error ratio&gt;s), (list of supported &lt;Residual bit error ratio&gt;s), (list of supported &lt;Delivery of erroneous SDUs&gt;s), (list of supported &lt;Transfer delay&gt;s), (list of supported &lt;Traffic handling priority&gt;s)[&lt;CR&gt;&lt;LF&gt;</p> <p>+CGEQMIN: &lt;PDP_type&gt;, (list of supported &lt;Traffic_class&gt;s), (list of supported &lt;Maximum bitrate UL&gt;s), (list of supported &lt;Maximum bitrate DL&gt;s), (list of supported &lt;Guaranteed bitrate UL&gt;s), (list of supported &lt;Guaranteed bitrate DL&gt;s), (list of supported &lt;Delivery order&gt;s), (list of supported &lt;Maximum SDU size&gt;s), (list of supported &lt;SDU error ratio&gt;s), (list of supported &lt;Residual bit error ratio&gt;s), (list of supported &lt;Delivery of erroneous SDUs&gt;s), (list of supported &lt;Transfer delay&gt;s), (list of supported &lt;Traffic handling priority&gt;s)[...]</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;PDP_type&gt;</td><td>string parameter of Packet Data Protocol type</td></tr> <tr> <td></td><td>PPP      Type PPP</td></tr> <tr> <td></td><td>IP        Type IP</td></tr> <tr> <td></td><td>IPV6     Type IP Version 6</td></tr> <tr> <td>&lt;Traffic_class&gt;</td><td>numeric parameter for the traffic class</td></tr> <tr> <td></td><td>0      conversational</td></tr> <tr> <td></td><td>1      streaming</td></tr> <tr> <td></td><td>2      interactive</td></tr> <tr> <td></td><td>3      background</td></tr> <tr> <td>&lt;Maximum bitrate UL&gt;</td><td>a numeric parameter that indicates the maximum number of kbits/s delivered to UMTS (up-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as '32'</td></tr> <tr> <td></td><td>0      network subscribed value</td></tr> <tr> <td></td><td>1..8640    kbit/s</td></tr> <tr> <td>&lt;Maximum bitrate DL&gt;</td><td>Same as Maximum bitrate UL but for down link</td></tr> <tr> <td></td><td>0      network subscribed value</td></tr> <tr> <td></td><td>1..8640    kbit/s</td></tr> <tr> <td>&lt;Guaranteed bitrate UL&gt;</td><td>a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as 32</td></tr> <tr> <td></td><td>0      network subscribed value</td></tr> <tr> <td></td><td>1..8640    kbit/s</td></tr> </table>	<PDP_type>	string parameter of Packet Data Protocol type		PPP      Type PPP		IP        Type IP		IPV6     Type IP Version 6	<Traffic_class>	numeric parameter for the traffic class		0      conversational		1      streaming		2      interactive		3      background	<Maximum bitrate UL>	a numeric parameter that indicates the maximum number of kbits/s delivered to UMTS (up-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as '32'		0      network subscribed value		1..8640    kbit/s	<Maximum bitrate DL>	Same as Maximum bitrate UL but for down link		0      network subscribed value		1..8640    kbit/s	<Guaranteed bitrate UL>	a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as 32		0      network subscribed value		1..8640    kbit/s
<PDP_type>	string parameter of Packet Data Protocol type																																				
	PPP      Type PPP																																				
	IP        Type IP																																				
	IPV6     Type IP Version 6																																				
<Traffic_class>	numeric parameter for the traffic class																																				
	0      conversational																																				
	1      streaming																																				
	2      interactive																																				
	3      background																																				
<Maximum bitrate UL>	a numeric parameter that indicates the maximum number of kbits/s delivered to UMTS (up-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as '32'																																				
	0      network subscribed value																																				
	1..8640    kbit/s																																				
<Maximum bitrate DL>	Same as Maximum bitrate UL but for down link																																				
	0      network subscribed value																																				
	1..8640    kbit/s																																				
<Guaranteed bitrate UL>	a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as 32																																				
	0      network subscribed value																																				
	1..8640    kbit/s																																				

	<p>&lt;<a href="#">Guaranteed bitrate DL</a>&gt;</p> <p>a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (down-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as 32</p> <table border="1"> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..8640</td><td>kbit/s</td></tr> </table> <p>&lt;<a href="#">Delivery order</a>&gt;</p> <p>a numeric parameter that indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not</p> <table border="1"> <tr> <td>0</td><td>No</td></tr> <tr> <td>1</td><td>Yes</td></tr> <tr> <td>2</td><td>network subscribed value</td></tr> </table> <p>&lt;<a href="#">Maximum SDU size</a>&gt;</p> <p>a numeric parameter (1, 2, 3,...) that indicates the maximum allowed SDU size in octets</p> <table border="1"> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..1520</td><td>octets</td></tr> </table> <p>&lt;<a href="#">SDU error ratio</a>&gt;</p> <p>a string parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. For example, a target SDU error ratio of <math>5 \cdot 10^{-3}</math> would be specified as 5E3</p> <table border="1"> <tr> <td>0E0</td><td>network subscribed value</td></tr> <tr> <td>1E1-1E6</td><td>Range of supported values</td></tr> </table> <p>&lt;<a href="#">Residual bit error ratio</a>&gt;</p> <p>a string parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'.</p> <table border="1"> <tr> <td>0E0</td><td>network subscribed value</td></tr> <tr> <td>5E2-6E8</td><td>Range of supported values</td></tr> </table> <p>&lt;<a href="#">Delivery of erroneous SDUs</a>&gt;</p> <p>a numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not</p> <table border="1"> <tr> <td>0</td><td>No</td></tr> <tr> <td>1</td><td>Yes</td></tr> <tr> <td>2</td><td>no detect</td></tr> <tr> <td>3</td><td>network subscribed value</td></tr> </table> <p>&lt;<a href="#">Transfer delay</a>&gt;</p> <p>a numeric parameter (0,1,2,...) that indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds</p> <table border="1"> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..4000</td><td>milliseconds</td></tr> </table> <p>&lt;<a href="#">Traffic handling priority</a>&gt;</p> <p>a numeric parameter (1, 2, 3,...) that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers</p> <table border="1"> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..3</td><td>Priority Level</td></tr> </table>	0	network subscribed value	1..8640	kbit/s	0	No	1	Yes	2	network subscribed value	0	network subscribed value	1..1520	octets	0E0	network subscribed value	1E1-1E6	Range of supported values	0E0	network subscribed value	5E2-6E8	Range of supported values	0	No	1	Yes	2	no detect	3	network subscribed value	0	network subscribed value	1..4000	milliseconds	0	network subscribed value	1..3	Priority Level
0	network subscribed value																																						
1..8640	kbit/s																																						
0	No																																						
1	Yes																																						
2	network subscribed value																																						
0	network subscribed value																																						
1..1520	octets																																						
0E0	network subscribed value																																						
1E1-1E6	Range of supported values																																						
0E0	network subscribed value																																						
5E2-6E8	Range of supported values																																						
0	No																																						
1	Yes																																						
2	no detect																																						
3	network subscribed value																																						
0	network subscribed value																																						
1..4000	milliseconds																																						
0	network subscribed value																																						
1..3	Priority Level																																						

Read command	Response:																										
AT+CGEQMIN?	<p>+CGEQMIN: &lt;cid&gt;, &lt;Traffic_class&gt;, &lt;Maximum bitrate UL&gt;, &lt;Maximum bitrate DL&gt;, &lt;Guaranteed bitrate UL&gt;, &lt;Guaranteed bitrate DL&gt;, &lt;Delivery order&gt;, &lt;Maximum SDU size&gt;, &lt;SDU error ratio&gt;, &lt;Residual bit error ratio&gt;, &lt;Delivery of erroneous SDUs&gt;, &lt;Transfer delay&gt;, &lt;Traffic handling priority&gt; [ &lt;CR&gt; &lt;LF&gt;</p> <p>+CGEQMIN: &lt;cid&gt;, &lt;Traffic_class&gt;, &lt;Maximum bitrate UL&gt;, &lt;Maximum bitrate DL&gt;, &lt;Guaranteed bitrate UL&gt;, &lt;Guaranteed bitrate DL&gt;, &lt;Delivery order&gt;, &lt;Maximum SDU size&gt;, &lt;SDU error ratio&gt;, &lt;Residual bit error ratio&gt;, &lt;Delivery of erroneous SDUs&gt;, &lt;Transfer delay&gt;, &lt;Traffic handling priority&gt;</p> <p>OK/ERROR/+CME ERROR</p>																										
	Parameter:																										
	<table> <tr> <td>&lt;cid&gt;</td><td>numeric PDP Context Identifier</td></tr> <tr> <td>&lt;Traffic_class&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum bitrate UL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum bitrate DL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Guaranteed bitrate DL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Delivery order&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum SDU size&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;SDU error ratio&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Residual bit error ratio&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Delivery of erroneous SDUs&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Transfer delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Traffic handling priority&gt;</td><td>See Test command</td></tr> </table>	<cid>	numeric PDP Context Identifier	<Traffic_class>	See Test command	<Maximum bitrate UL>	See Test command	<Maximum bitrate DL>	See Test command	<Guaranteed bitrate UL>	See Test command	<Guaranteed bitrate DL>	See Test command	<Delivery order>	See Test command	<Maximum SDU size>	See Test command	<SDU error ratio>	See Test command	<Residual bit error ratio>	See Test command	<Delivery of erroneous SDUs>	See Test command	<Transfer delay>	See Test command	<Traffic handling priority>	See Test command
<cid>	numeric PDP Context Identifier																										
<Traffic_class>	See Test command																										
<Maximum bitrate UL>	See Test command																										
<Maximum bitrate DL>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Guaranteed bitrate DL>	See Test command																										
<Delivery order>	See Test command																										
<Maximum SDU size>	See Test command																										
<SDU error ratio>	See Test command																										
<Residual bit error ratio>	See Test command																										
<Delivery of erroneous SDUs>	See Test command																										
<Transfer delay>	See Test command																										
<Traffic handling priority>	See Test command																										
Write command																											
AT+CGEQMIN=[<cid> [,<Traffic_class> [,<Maximum bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL> [,<Guaranteed bitrate DL> [,<Delivery order> [,<Maximum SDU size> [,<SDU error ratio> [,<Residual bit error ratio> [,<Delivery of erroneous SDUs> [,<Transfer delay> [,<Traffic handling priority> ]]]]]]]]]]																											
	Response:																										
	OK/ERROR/+CME ERROR																										
	Parameter:																										
	<table> <tr> <td>&lt;cid&gt;</td><td>See Read command</td></tr> <tr> <td>&lt;Traffic_class&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum bitrate UL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum bitrate DL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Guaranteed bitrate DL&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Delivery order&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Maximum SDU size&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;SDU error ratio&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Residual bit error ratio&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Delivery of erroneous SDUs&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Transfer delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;Traffic handling priority&gt;</td><td>See Test command</td></tr> </table>	<cid>	See Read command	<Traffic_class>	See Test command	<Maximum bitrate UL>	See Test command	<Maximum bitrate DL>	See Test command	<Guaranteed bitrate UL>	See Test command	<Guaranteed bitrate DL>	See Test command	<Delivery order>	See Test command	<Maximum SDU size>	See Test command	<SDU error ratio>	See Test command	<Residual bit error ratio>	See Test command	<Delivery of erroneous SDUs>	See Test command	<Transfer delay>	See Test command	<Traffic handling priority>	See Test command
<cid>	See Read command																										
<Traffic_class>	See Test command																										
<Maximum bitrate UL>	See Test command																										
<Maximum bitrate DL>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Guaranteed bitrate DL>	See Test command																										
<Delivery order>	See Test command																										
<Maximum SDU size>	See Test command																										
<SDU error ratio>	See Test command																										
<Residual bit error ratio>	See Test command																										
<Delivery of erroneous SDUs>	See Test command																										
<Transfer delay>	See Test command																										
<Traffic handling priority>	See Test command																										

**AT+CGEQREQ**

AT+CGEQREQ	3G Quality of Service Profile (Requested)
------------	---

Test command  
AT+CGEQREQ=?

Response:  
+CGEQREQ: <PDP\_type>, (list of supported <Traffic class>s), (list of supported <Maximum bitrate UL>s), (list of supported <Maximum bitrate DL>s), (list of supported <Guaranteed bitrate UL>s), (list of supported <Guaranteed bitrate DL>s), (list of supported <Delivery order>s), (list of supported <Maximum SDU size>s), (list of supported <SDU error ratio>s), (list of supported <Residual bit error ratio>s), (list of supported <Delivery of erroneous SDUs>s), (list of supported <Transfer delay>s), (list of supported <Traffic handling priority>s)  
[<CR><LF>+CGEQREQ: : <PDP\_type>, (list of supported <Traffic class>s), (list of supported <Guaranteed bitrate UL>s), (list of supported <Maximum bitrate DL>s), (list of supported <Guaranteed bitrate UL>s), (list of supported <Guaranteed bitrate DL>s), (list of supported <Delivery order>s), (list of supported <Maximum SDU size>s), (list of supported <SDU error ratio>s), (list of supported <Residual bit error ratio>s), (list of supported <Delivery of erroneous SDUs>s), (list of supported <Transfer delay>s), (list of supported <Traffic handling priority>s) [...]]  
OK/ERROR/+CME ERROR

Parameter:

<PDP_type>	string parameter of Packet Data Protocol type
PPP	Type PPP
IP	Type IP
IPV6	Type IP Version 6
<Traffic class>	numeric parameter for the traffic class
0	conversational
1	streaming
2	interactive
3	background
4	network subscribed value
<Guaranteed bitrate UL>	numeric parameter for the traffic class
1..8640	kbit/s
<Maximum bitrate UL>	a numeric parameter that indicates the maximum number of kbits/s delivered to UMTS (up-link traffic) at a SAP. As an example a bitrate of 32kbit/s would be specified as 32
1..8640	kbit/s
<Maximum bitrate DL>	Same as Maximum bitrate UL but for down link
1..8640	kbit/s
<Guaranteed bitrate UL>	a numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (up-link traffic) at a SAP (provided that there is data to deliver). As an example a bitrate of 32kbit/s would be specified as 32
1..8640	kbit/s
<Guaranteed bitrate DL>	Same as Guaranteed bitrate DL but for down link
1..8640	kbit/s
<Delivery order>	a numeric parameter that indicates whether the UMTS

Document No.: A30880-A10-A001-75-D376  
Revision: Master R75  
Revision Date: 10.February, 2006

	bearer shall provide in-sequence SDU delivery or not
0	No
1	Yes
2	network subscribed value
<Maximum SDU size>	a numeric parameter (1, 2, 3, ...) that indicates the maximum allowed SDU size in octets 1..1520 Octets
<SDU error ratio>	a string parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'. As an example a target SDU error ratio of $5 \cdot 10^{-3}$ would be specified as 5E3 0E0 network subscribed value 1E1-1E6 Range of supported values
<Residual bit error ratio>	a string parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'. 0E0 network subscribed value 5E2-6E8 Range of supported values
<Delivery of erroneous SDUs>	a numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not
0	No
1	Yes
2	no detect
3	network subscribed value
<Transfer delay>	a numeric parameter (0, 1, 2, ...) that indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds 0 network subscribed value 1..4000 Milliseconds
<Traffic handling priority>	a numeric parameter (1, 2, 3, ...) that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers 0 network subscribed value 1..3 Priority Level

Read command AT+CGEQREQ?	Response +CGEQREQ: <cid>,(<Traffic class>,<Maximum bitrate UL>,<Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>,<Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>,<Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling priority> [<CR><LF>+CGEQREQ: <cid>,<Traffic class>,<Maximum bitrate UL>,<Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>,<Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>,<Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling priority> [...]] OK/ERROR/+CME ERROR																										
	Parameter: <table border="1"> <tr><td>&lt;cid&gt;</td><td>numeric PDP Context Identifier</td></tr> <tr><td>&lt;Traffic class&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Maximum bitrate DL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate DL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Delivery order&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Maximum SDU size&gt;</td><td>See Test command</td></tr> <tr><td>&lt;SDU error ratio&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Residual bit error ratio&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Delivery of erroneous SDUs&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Transfer delay&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Traffic handling priority&gt;</td><td>See Test command</td></tr> </table>	<cid>	numeric PDP Context Identifier	<Traffic class>	See Test command	<Guaranteed bitrate UL>	See Test command	<Maximum bitrate DL>	See Test command	<Guaranteed bitrate UL>	See Test command	<Guaranteed bitrate DL>	See Test command	<Delivery order>	See Test command	<Maximum SDU size>	See Test command	<SDU error ratio>	See Test command	<Residual bit error ratio>	See Test command	<Delivery of erroneous SDUs>	See Test command	<Transfer delay>	See Test command	<Traffic handling priority>	See Test command
<cid>	numeric PDP Context Identifier																										
<Traffic class>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Maximum bitrate DL>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Guaranteed bitrate DL>	See Test command																										
<Delivery order>	See Test command																										
<Maximum SDU size>	See Test command																										
<SDU error ratio>	See Test command																										
<Residual bit error ratio>	See Test command																										
<Delivery of erroneous SDUs>	See Test command																										
<Transfer delay>	See Test command																										
<Traffic handling priority>	See Test command																										
Write command AT+CGEQREQ=[<cid> [,<Traffic class> [,<Guaranteed bitrate UL> [,<Maximum bitrate DL> [,<Guaranteed bitrate UL> [,<Guaranteed bitrate DL> [,<Delivery order> [,<Maximum SDU size> [,<SDU error ratio> [,<Residual bit error ratio> [,<Delivery of erroneous SDUs> [,<Transfer delay> [,<Traffic handling priority> ]]]]]]]]]]]	Response: OK/ERROR/+CME ERROR Parameter: <table border="1"> <tr><td>&lt;cid&gt;</td><td>See Read command</td></tr> <tr><td>&lt;Traffic class&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Maximum bitrate DL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate UL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Guaranteed bitrate DL&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Delivery order&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Maximum SDU size&gt;</td><td>See Test command</td></tr> <tr><td>&lt;SDU error ratio&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Residual bit error ratio&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Delivery of erroneous SDUs&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Transfer delay&gt;</td><td>See Test command</td></tr> <tr><td>&lt;Traffic handling priority&gt;</td><td>See Test command</td></tr> </table>	<cid>	See Read command	<Traffic class>	See Test command	<Guaranteed bitrate UL>	See Test command	<Maximum bitrate DL>	See Test command	<Guaranteed bitrate UL>	See Test command	<Guaranteed bitrate DL>	See Test command	<Delivery order>	See Test command	<Maximum SDU size>	See Test command	<SDU error ratio>	See Test command	<Residual bit error ratio>	See Test command	<Delivery of erroneous SDUs>	See Test command	<Transfer delay>	See Test command	<Traffic handling priority>	See Test command
<cid>	See Read command																										
<Traffic class>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Maximum bitrate DL>	See Test command																										
<Guaranteed bitrate UL>	See Test command																										
<Guaranteed bitrate DL>	See Test command																										
<Delivery order>	See Test command																										
<Maximum SDU size>	See Test command																										
<SDU error ratio>	See Test command																										
<Residual bit error ratio>	See Test command																										
<Delivery of erroneous SDUs>	See Test command																										
<Transfer delay>	See Test command																										
<Traffic handling priority>	See Test command																										

## AT+CGEREP

AT+CGEREP	GPRS event reporting
-----------	----------------------

Test command AT+CGEREP=?	Response: +CGEREP: (list of supported <a href="#">&lt;mode&gt;</a> s),(list of supported <a href="#">&lt;bfr&gt;</a> s) OK/ERROR/+CME ERROR	
	Parameter: <a href="#">&lt;mode&gt;</a> numeric parameter 0      buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE 1      discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE 2      buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE <a href="#">&lt;bfr&gt;</a> numeric parameter 0      MT buffer of unsolicited result codes defined within this command is cleared when 1 or 2 is entered for <a href="#">&lt;mode&gt;</a> 1      MT buffer of unsolicited result codes defined within this command is flushed to the TE when 1 or 2 is entered for <a href="#">&lt;mode&gt;</a>	
Read command AT+CGEREP?	Response: +CGEREP: <a href="#">&lt;mode&gt;</a> , <a href="#">&lt;bfr&gt;</a> OK/ERROR/+CME ERROR	
	Parameter:	
	<a href="#">&lt;mode&gt;</a>	See Test command
	<a href="#">&lt;bfr&gt;</a>	See Test command
Write command AT+CGEREP=[ <a href="#">&lt;mode&gt;</a> ],[ <a href="#">&lt;bfr&gt;</a> ]		
	Response: OK/ERROR/+CME ERROR	
	Parameter:	
	<a href="#">&lt;mode&gt;</a>	See Test command
	<a href="#">&lt;bfr&gt;</a>	See Test command
Unsolicited result code:		
+CGEV: REJECT <a href="#">&lt;PDP_type&gt;</a> , <a href="#">&lt;PDP_addr&gt;</a>		context activation rejected
+CGEV: NW REACT <a href="#">&lt;PDP_type&gt;</a> , <a href="#">&lt;PDP_addr&gt;</a>		context activation by ME
+CGEV: NW DEACT <a href="#">&lt;PDP_type&gt;</a> , <a href="#">&lt;PDP_addr&gt;</a>		detached by network
+CGEV: ME DEACT <a href="#">&lt;PDP_type&gt;</a> , <a href="#">&lt;PDP_addr&gt;</a>		context activation by ME
+CGEV: NW DETACH		detached by network
+CGEV: ME DETACH		detached by ME
+CGEV: NW CLASS <a href="#">&lt;class&gt;</a>		change of mobile class by network
+CGEV: ME CLASS <a href="#">&lt;class&gt;</a>		change of mobile class by ME
	Parameter:	
	<a href="#">&lt;PDP_type&gt;</a>	The PDP context type. Refer to AT+CGDCONT for details
	<a href="#">&lt;PDP_addr&gt;</a>	The IP-address of the context

**AT+CGQMIN**

AT+CGQMIN	Quality of Service Profile (Minimum acceptable)
Test command	Response:



AT+CGQMIN=?	<p>+CGQMIN: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s), (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s) [ &lt;CR&gt;&lt;LF&gt; ]</p> <p>+CGQMIN: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s), (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s) [...]]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table border="1"> <tr> <td>&lt;PDP_type&gt;</td><td>string parameter of Packet Data Protocol type</td></tr> <tr> <td>PPP</td><td>Type PPP</td></tr> <tr> <td>IP</td><td>Type IP</td></tr> <tr> <td>&lt;precedence&gt;</td><td>numeric parameter for the precedence class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1 .. 3</td><td></td></tr> <tr> <td>&lt;delay&gt;</td><td>numeric parameter for the delay class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1 .. 4</td><td></td></tr> <tr> <td>&lt;reliability&gt;</td><td>numeric parameter for the reliability class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1 .. 5</td><td></td></tr> <tr> <td>&lt;peak&gt;</td><td>numeric parameter for the peak throughput class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1 .. 7</td><td></td></tr> <tr> <td>&lt;mean&gt;</td><td>numeric parameter for the mean throughput class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1 .. 12</td><td></td></tr> </table>	<PDP_type>	string parameter of Packet Data Protocol type	PPP	Type PPP	IP	Type IP	<precedence>	numeric parameter for the precedence class	0	network subscribed value	1 .. 3		<delay>	numeric parameter for the delay class	0	network subscribed value	1 .. 4		<reliability>	numeric parameter for the reliability class	0	network subscribed value	1 .. 5		<peak>	numeric parameter for the peak throughput class	0	network subscribed value	1 .. 7		<mean>	numeric parameter for the mean throughput class	0	network subscribed value	1 .. 12	
<PDP_type>	string parameter of Packet Data Protocol type																																				
PPP	Type PPP																																				
IP	Type IP																																				
<precedence>	numeric parameter for the precedence class																																				
0	network subscribed value																																				
1 .. 3																																					
<delay>	numeric parameter for the delay class																																				
0	network subscribed value																																				
1 .. 4																																					
<reliability>	numeric parameter for the reliability class																																				
0	network subscribed value																																				
1 .. 5																																					
<peak>	numeric parameter for the peak throughput class																																				
0	network subscribed value																																				
1 .. 7																																					
<mean>	numeric parameter for the mean throughput class																																				
0	network subscribed value																																				
1 .. 12																																					
Read command AT+CGQMIN?	<p>Response:</p> <p>+CGQMIN:</p> <p>&lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt;[ &lt;CR&gt;&lt;LF&gt; ]+CGQMIN:</p> <p>&lt;cid&gt;,&lt;precedence&gt;,&lt;delay&gt;,&lt;reliability&gt;,&lt;peak&gt;,&lt;mean&gt; [...]]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table border="1"> <tr> <td>&lt;cid&gt;</td><td>numeric PDP Context Identifier</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See Test command</td></tr> </table>	<cid>	numeric PDP Context Identifier	<PDP_type>	See Test command	<precedence>	See Test command	<delay>	See Test command	<reliability>	See Test command	<peak>	See Test command	<mean>	See Test command																						
<cid>	numeric PDP Context Identifier																																				
<PDP_type>	See Test command																																				
<precedence>	See Test command																																				
<delay>	See Test command																																				
<reliability>	See Test command																																				
<peak>	See Test command																																				
<mean>	See Test command																																				
Write command AT+CGQMIN=[<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>]]]]]]	<p>Response:</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table border="1"> <tr> <td>&lt;cid&gt;</td><td>See Read command</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See Test command</td></tr> </table>	<cid>	See Read command	<PDP_type>	See Test command	<precedence>	See Test command	<delay>	See Test command	<reliability>	See Test command	<peak>	See Test command	<mean>	See Test command																						
<cid>	See Read command																																				
<PDP_type>	See Test command																																				
<precedence>	See Test command																																				
<delay>	See Test command																																				
<reliability>	See Test command																																				
<peak>	See Test command																																				
<mean>	See Test command																																				

**AT+CGQREQ**

AT+CGQREQ	Quality of Service Profile (Requested)																																				
Test command AT+CGQREQ=?	<p>Response:</p> <p>+CGQREQ: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s), (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s)[&lt;CR&gt;&lt;LF&gt;+CGQREQ: &lt;PDP_type&gt;, &lt;precedence&gt;, &lt;delay&gt;, &lt;reliability&gt;, &lt;peak&gt;, &lt;mean&gt;[...]]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;PDP_type&gt;</td><td>string parameter of Packet Data Protocol type</td></tr> <tr> <td>PPP</td><td>Type PPP</td></tr> <tr> <td>IP</td><td>Type IP</td></tr> <tr> <td>&lt;precedence&gt;</td><td>numeric parameter for the precedence class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..3</td><td></td></tr> <tr> <td>&lt;delay&gt;</td><td>numeric parameter for the delay class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..4</td><td></td></tr> <tr> <td>&lt;reliability&gt;</td><td>numeric parameter for the reliability class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..5</td><td></td></tr> <tr> <td>&lt;peak&gt;</td><td>numeric parameter for the peak throughput class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..7</td><td></td></tr> <tr> <td>&lt;mean&gt;</td><td>numeric parameter for the mean throughput class</td></tr> <tr> <td>0</td><td>network subscribed value</td></tr> <tr> <td>1..12</td><td></td></tr> </table>	<PDP_type>	string parameter of Packet Data Protocol type	PPP	Type PPP	IP	Type IP	<precedence>	numeric parameter for the precedence class	0	network subscribed value	1..3		<delay>	numeric parameter for the delay class	0	network subscribed value	1..4		<reliability>	numeric parameter for the reliability class	0	network subscribed value	1..5		<peak>	numeric parameter for the peak throughput class	0	network subscribed value	1..7		<mean>	numeric parameter for the mean throughput class	0	network subscribed value	1..12	
<PDP_type>	string parameter of Packet Data Protocol type																																				
PPP	Type PPP																																				
IP	Type IP																																				
<precedence>	numeric parameter for the precedence class																																				
0	network subscribed value																																				
1..3																																					
<delay>	numeric parameter for the delay class																																				
0	network subscribed value																																				
1..4																																					
<reliability>	numeric parameter for the reliability class																																				
0	network subscribed value																																				
1..5																																					
<peak>	numeric parameter for the peak throughput class																																				
0	network subscribed value																																				
1..7																																					
<mean>	numeric parameter for the mean throughput class																																				
0	network subscribed value																																				
1..12																																					
Read command AT+CGQREQ?	<p>Response:</p> <p>+CGQREQ: &lt;cid&gt;, &lt;precedence&gt;, &lt;delay&gt;, &lt;reliability&gt;, &lt;peak&gt;, &lt;mean&gt;[&lt;CR&gt;&lt;LF&gt;+CGQREQ: &lt;cid&gt;, &lt;precedence&gt;, &lt;delay&gt;, &lt;reliability&gt;, &lt;peak&gt;, &lt;mean&gt;[...]]</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;cid&gt;</td><td>numeric PDP Context Identifier</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See Test command</td></tr> </table>	<cid>	numeric PDP Context Identifier	<PDP_type>	See Test command	<precedence>	See Test command	<delay>	See Test command	<reliability>	See Test command	<peak>	See Test command	<mean>	See Test command																						
<cid>	numeric PDP Context Identifier																																				
<PDP_type>	See Test command																																				
<precedence>	See Test command																																				
<delay>	See Test command																																				
<reliability>	See Test command																																				
<peak>	See Test command																																				
<mean>	See Test command																																				
Write command AT+CGQREQ=[<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]]]	<p>Response:</p> <p>OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;cid&gt;</td><td>See Read command</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See Test command</td></tr> </table>	<cid>	See Read command	<precedence>	See Test command	<delay>	See Test command	<reliability>	See Test command	<peak>	See Test command	<mean>	See Test command																								
<cid>	See Read command																																				
<precedence>	See Test command																																				
<delay>	See Test command																																				
<reliability>	See Test command																																				
<peak>	See Test command																																				
<mean>	See Test command																																				

### AT+CGPADDR

AT+CGPADDR	Show PDP address
Test command AT+CGPADDR=?	Response: +CGPADDR: (list of defined <cid>s) OK/ERROR/+CME ERROR
	Parameter: <cid>                      numeric PDP Context Identifier
Write command AT+CGPADDR=[<cid> , [< cid> [<cid> [,...]]]]	Response: +CGPADDR: <cid> , <PDP addr> [ <CR><LF> +CGPADDR: <cid> , <PDP addr> [ ... ] ] OK/ERROR/+CME ERROR
	Parameter:
	<cid>                      See Test command
	<PDP addr>              IP address of PDP

### AT+CGREG

AT+CGREG	GPRS network registration status
Test command AT+CGREG=?	Response: +CGREG: (list of supported <n>s) OK/ERROR/+CME ERROR
	Parameter:
	<n>                      0    Suppresses the unexpected network status messages
	1    Enable the unexpected network status messages
Unsolicited result code OK/ERROR/+CME ERROR	
Read command AT+CGREG?	Response: +CGREG: <n> , <stat> OK/ERROR/+CME ERROR
	Parameter:
	<n>                      See Test command
	<stat>                  Status
	0    Not registered, not currently searching
	1    Registered home network
	2    Not registered, but currently searching
	3    registration denied by network
	4    Unknown
	5    Registered, roaming
Write command AT+CGREG=[<n>]	Response: OK/ERROR/+CME ERROR
	Parameter:
	<n>                      See Test command
Unsolicited Result Code +CGREG: <stat>	Parameter: <stat>                  See Read command

**AT+CGSMS**

AT+CGSMS	Select service for MO SMS messages
Test command AT+CGSMS=?	Response: +CGSMS: (list of currently available <service>s) OK / ERROR / +CME ERROR Parameter: <service> numeric parameter for service or service preference 0 GPRS 1 circuit switched 2 GPRS preferred (use circuit switched if GPRS not available) 3 circuit switched preferred (use GPRS if circuit switched not available)
Read command AT+CGSMS?	Response: +CGSMS: <service> OK / ERROR / +CME ERROR Parameter: <service> See Test command
Write command AT+CGSMS=[<service>]	Response: OK / ERROR / +CME ERROR Parameter: <service> See Test command

## AT+CGTFT

AT+CGTFT	Traffic Flow Template																						
Test command AT+CGTFT=?	<p>Response:</p> <p>+CGTFT: &lt;PDP_type&gt;list of supported &lt;packet filter identifier&gt;s), (list of supported &lt;evaluation precedence index&gt;s), (list of supported &lt;source address and subnet mask&gt;s), (list of supported &lt;protocol number (ipv4) / next header (ipv6)&gt;s), (list of supported &lt;destination port range&gt;s), (list of supported &lt;source port range&gt;s), (list of supported &lt;ipsec security parameter index (spi)&gt;s), (list of supported &lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;s), (list of supported &lt;flow label (ipv6)&gt;s) [&lt;CR&gt;&lt;LF&gt;</p> <p>+CGTFT: &lt;PDP_type&gt;, (list of supported &lt;packet filter identifier&gt;s), (list of supported &lt;evaluation precedence index&gt;s), (list of supported &lt;source address and subnet mask&gt;s), (list of supported &lt;protocol number (ipv4) / next header (ipv6)&gt;s), (list of supported &lt;destination port range&gt;s), (list of supported &lt;source port range&gt;s), (list of supported &lt;ipsec security parameter index (spi)&gt;s), (list of supported &lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;s), (list of supported &lt;flow label (ipv6)&gt;s) [...]]</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;PDP_type&gt;</td><td>string parameter of Packet Data Protocol type</td></tr> <tr> <td>PPP</td><td>Type PPP</td></tr> <tr> <td>IP</td><td>Type IP</td></tr> <tr> <td>IPV6</td><td>Type IP Version 6</td></tr> </table> <table> <tr> <td>&lt;packet filter identifier&gt;</td><td>numeric parameter identifies the filter 1..8</td></tr> </table> <table> <tr> <td>&lt;evaluation precedence index&gt;</td><td>Numeric parameter 0..255</td></tr> </table> <table> <tr> <td>&lt;source address and subnet mask&gt;</td><td>Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4.m1.m2.m3.m4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16', for IPv6. Where 'ax' is the IP address and 'mx' is the mask.</td></tr> </table> <table> <tr> <td>&lt;protocol number (ipv4) / next header (ipv6)&gt;</td><td>Numeric parameter 0..255</td></tr> </table> <table> <tr> <td>&lt;destination port range&gt;</td><td>Consists of dot-separated parameters of the form 'f.t' (from ...to). 0..65535</td></tr> </table> <table> <tr> <td>&lt;source port range&gt;</td><td>Same as destination port range but source port 0..65535</td></tr> </table> <table> <tr> <td>&lt;ipsec security parameter index (spi)&gt;</td><td></td></tr> </table>	<PDP_type>	string parameter of Packet Data Protocol type	PPP	Type PPP	IP	Type IP	IPV6	Type IP Version 6	<packet filter identifier>	numeric parameter identifies the filter 1..8	<evaluation precedence index>	Numeric parameter 0..255	<source address and subnet mask>	Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4.m1.m2.m3.m4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16', for IPv6. Where 'ax' is the IP address and 'mx' is the mask.	<protocol number (ipv4) / next header (ipv6)>	Numeric parameter 0..255	<destination port range>	Consists of dot-separated parameters of the form 'f.t' (from ...to). 0..65535	<source port range>	Same as destination port range but source port 0..65535	<ipsec security parameter index (spi)>	
<PDP_type>	string parameter of Packet Data Protocol type																						
PPP	Type PPP																						
IP	Type IP																						
IPV6	Type IP Version 6																						
<packet filter identifier>	numeric parameter identifies the filter 1..8																						
<evaluation precedence index>	Numeric parameter 0..255																						
<source address and subnet mask>	Consists of dot-separated numeric (0-255) parameters on the form 'a1.a2.a3.a4.m1.m2.m3.m4', for IPv4 and 'a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16', for IPv6. Where 'ax' is the IP address and 'mx' is the mask.																						
<protocol number (ipv4) / next header (ipv6)>	Numeric parameter 0..255																						
<destination port range>	Consists of dot-separated parameters of the form 'f.t' (from ...to). 0..65535																						
<source port range>	Same as destination port range but source port 0..65535																						
<ipsec security parameter index (spi)>																							

	<p>Hexadecimal parameter, value range from 0..FFFFFFFF</p> <p>&lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;</p> <p>Dot-separated numeric parameters on the form 't.m'. 0..255</p> <p>&lt;flow label (ipv6)&gt;</p> <p>Hexadecimal parameter, value range from 00000 to FFFFF. Valid for IPv6 only</p> <p>0 network subscribed value</p>																				
Read command	Response:																				
AT+CGTFT?	<p>+CGTFT: &lt;cid&gt;, &lt;packet filter identifier&gt;, &lt;evaluation precedence index&gt;, &lt;source address and subnet mask&gt;, &lt;protocol number (ipv4) / next header (ipv6)&gt;, &lt;destination port range&gt;, &lt;source port range&gt;, &lt;ipsec security parameter index (spi)&gt;, &lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;, &lt;flow label (ipv6)&gt;</p> <p>[&lt;CR&gt;&lt;LF&gt;+CGTFT: &lt;cid&gt;, &lt;packet filter identifier&gt;, &lt;evaluation precedence index&gt;, &lt;source address and subnet mask&gt;, &lt;protocol number (ipv4) / next header (ipv6)&gt;, &lt;destination port range&gt;, &lt;source port range&gt;, &lt;ipsec security parameter index (spi)&gt;, &lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;, &lt;flow label (ipv6)&gt;, &lt;flow label (ipv6)&gt;</p> <p>[...]</p> <p>OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;cid&gt;</td><td>numeric PDP Context Identifier</td></tr> <tr> <td>&lt;packet filter identifier&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;evaluation precedence index&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;source address and subnet mask&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;protocol number (ipv4) / next header (ipv6)&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;destination port range&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;source port range&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;ipsec security parameter index (spi)&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;flow label (ipv6)&gt;</td><td>See Test command</td></tr> </table>	<cid>	numeric PDP Context Identifier	<packet filter identifier>	See Test command	<evaluation precedence index>	See Test command	<source address and subnet mask>	See Test command	<protocol number (ipv4) / next header (ipv6)>	See Test command	<destination port range>	See Test command	<source port range>	See Test command	<ipsec security parameter index (spi)>	See Test command	<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>	See Test command	<flow label (ipv6)>	See Test command
<cid>	numeric PDP Context Identifier																				
<packet filter identifier>	See Test command																				
<evaluation precedence index>	See Test command																				
<source address and subnet mask>	See Test command																				
<protocol number (ipv4) / next header (ipv6)>	See Test command																				
<destination port range>	See Test command																				
<source port range>	See Test command																				
<ipsec security parameter index (spi)>	See Test command																				
<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>	See Test command																				
<flow label (ipv6)>	See Test command																				
Write command																					
AT+CGTFT=[<cid> [<packet filter identifier>, <evaluation precedence index> [,<source address and subnet mask> [,<protocol number (ipv4) / next header (ipv6)> [,<destination port range> [,<source port range> [,<ipsec security parameter index (spi)> [,<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask> [,<flow label (ipv6)> ]]]]]]]]																					
	Response:																				
	OK/ERROR/+CME ERROR																				
	Parameter:																				
<cid>	See Read command																				
<packet filter identifier>	See Test command																				
<evaluation precedence index>	See Test command																				
<source address and subnet mask>	See Test command																				
<protocol number (ipv4) / next header	See Test command																				

(ipv6)>	
<destination port range>	See Test command
<source port range>	See Test command
<ipsec security parameter index (spi)>	See Test command
<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>	See Test command
<flow label (ipv6)>	See Test command

### 2.3.7 Commands related to mobile equipment errors

#### AT+CMEE

AT+CMEE	Expanded error messages according to 3GPP TS 27.007
Test command AT+CMEE=?	Response: +CMEE: (list of supported <n>s) Parameter: <n> 0 Suppresses the expanded error format 1 Expanded error messages as number 2 Expanded error messages as text
Read command AT+CMEE?	Response: +CMEE: <n> Parameter: <n> See Read command
Write command AT+CMEE=<n>	Response: OK / ERROR / +CME ERROR Parameter: <n> See Read command
<b>Note:</b> For detailed information on the values possible for +CME ERROR see section 6.1. +CMS errors have been defined for SMS; for detailed information on the values possible for +CMS ERROR see section 6.2.	

### 2.3.8 TIA IS-101 commands (“Voice control interim standard for asynchronous DCE”)

This section provides the descriptions of other AT commands.

#### AT+VTD

AT+VTD	Set duration of a DTMF tone
Test command AT+VTD=?	Response: <duration> OK / ERROR / +CME ERROR Parameter: <duration> Duration of tone (in tenths of seconds) 1 .. 255
Read command AT+VTD?	Response: <duration> OK / ERROR / +CME ERROR
Write command AT+VTD=<duration>	Response: OK / ERROR Parameter: <duration> See Test command

#### AT+VTS

AT+VTS	Send a DTMF tone
Test command	Response:



AT+VTS=?	(list of supported <a href="#">&lt;dtmf&gt;s</a> ), (list of supported <a href="#">&lt;duration&gt;s</a> )	
	OK / ERROR / +CME ERROR	
	Parameter:	
	<a href="#">&lt;dtmf&gt;</a>	0-9, #, *, A-D exactly one character of the list
	<a href="#">&lt;duration&gt;</a>	1 .. 255 Duration of tone (in tenths of seconds)
Write command		
AT+VTS= <a href="#">&lt;dtmf&gt;</a> [, <a href="#">&lt;duration&gt;</a> ]		
Or		
AT+VTS= <a href="#">&lt;dtmf-string&gt;</a>		
	Response:	
	OK / ERROR / +CME ERROR	
	Parameter:	
	<a href="#">&lt;dtmf&gt;</a>	character from the list, see Test command
	<a href="#">&lt;dtmf-string&gt;</a>	max. 29 characters in quotation marks ("...") (no duration cannot be specified)

## 2.4 General commands according to 3GPP TS 27.005

3GPP TS 27.005 commands are used for operating the SMS functions of the GSM mobile phone. GSM module mobiles support the SMS PDU mode.

### AT+CMGC

AT+CMGC	Send an SMS command
Test command AT+CMGC=?	Response: OK / ERROR / +CME ERROR
Write command <b>If PDU mode (+CMGF=0)</b> AT+CMGC=< <a href="#">length</a> ><CR> <b>PDU is given:</b> <ctrl-Z/ESC>	Response: <b>If sending is successful:</b> +CMGC: < <a href="#">mr</a> > <b>If sending is not successful:</b> +CMS ERROR
	Parameter:
< <a href="#">length</a> >	Length of PDU
< <a href="#">pdu</a> >	See AT+CMGL command
< <a href="#">mr</a> >	Message reference
< <a href="#">ackpdu</a> >	RP-ACK PDU according to [3]
< <a href="#">ackpdu</a> >	RP-ACK PDU according to [3]

### AT+CMGD

AT+CMGD	Delete an SMS in the SMS memory
Test command At+CMGD=?	Response: OK / ERROR / +CME ERROR
Write command AT+CMGD=< <a href="#">index</a> >	Response: OK / ERROR / +CMS ERROR
	Parameter:
< <a href="#">index</a> >	Index of message in memory selected by AT+CPMS

### AT+CMGF

AT+CMGF	SMS format
Test command AT+CMGF=?	Response: +CMGF: (list of supported <mode>s) Parameter: <mode> 0 PDU mode
Read command AT+CMGF?	Response: +CMGF: <mode> Parameter: <mode> See Test command
Write command AT+CMGF=[<mode>]	Response: OK / ERROR Parameter: <mode> See Test command

### AT+CMGL

AT+CMGL	(Short) Message List Revision according to 3GPP TS 27.005
Test command AT+CMGL=?	Response: +CMGL: (list of supported <stat>s) Parameter: <stat> <div> 0 REC UNREAD i.e. received messages unread (default) </div> <div> 1 REC READ i.e. received messages read </div> <div> 2 STO UNSENT i.e. stored unsent messages </div> <div> 3 STO SENT i.e. stored sent messages </div> <div> 4 ALL i.e. all messages </div>
Write command AT+CMGL=[<stat>]	Response: If PDU mode (+CMGF=0) and command are successful: +CMGL: <index>,<stat>,[<alpha>],<length><CR><LF><pdu>[<CR><LF> +CMGL: <index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF>[...]] Parameter: <index> Index of message in memory selected by AT+CPMS <stat> See Test command <pdu> The PDU begins with the service-center address (according to GSM 04.11, [9]), followed by the TPDU (according to GSM 03.40, [3]) in hexadecimal format otherwise: +CMS ERROR <alpha> String type alphanumeric representation of telephone number <length> Length of PDU

**AT+CMGR**

AT+CMGR	(Short) Message Read (SMS) Revision according to 3GPP TS 27.005																				
Test command AT+CMGR=?	Response: OK/ERROR/+CME ERROR																				
Write command AT+CMGR=<index>	Response: <b>If PDU mode (+CMGF=0) and command is successful:</b> +CMGR: <stat>,,<length><CR><LF><pdu> Parameter: <index>      Index of message in memory selected by AT+CPMS <pdu>      The PDU begins with the service-center address (according to GSM 04.11, [9]), followed by the TPDU (according to GSM 03.40, [3]) in hexadecimal format <stat> <table border="1"> <tr><td>0</td><td>REC UNREAD</td></tr> <tr><td></td><td>i.e. received messages unread (default)</td></tr> <tr><td>1</td><td>REC READ</td></tr> <tr><td></td><td>i.e. received messages read</td></tr> <tr><td>2</td><td>STO UNSENT</td></tr> <tr><td></td><td>i.e. stored unsent messages</td></tr> <tr><td>3</td><td>STO SENT</td></tr> <tr><td></td><td>i.e. stored sent messages</td></tr> <tr><td>4</td><td>ALL</td></tr> <tr><td></td><td>i.e. all messages</td></tr> </table> <length>      Length of PDU otherwise: +CMS ERROR	0	REC UNREAD		i.e. received messages unread (default)	1	REC READ		i.e. received messages read	2	STO UNSENT		i.e. stored unsent messages	3	STO SENT		i.e. stored sent messages	4	ALL		i.e. all messages
0	REC UNREAD																				
	i.e. received messages unread (default)																				
1	REC READ																				
	i.e. received messages read																				
2	STO UNSENT																				
	i.e. stored unsent messages																				
3	STO SENT																				
	i.e. stored sent messages																				
4	ALL																				
	i.e. all messages																				

**AT+CMGS**

AT+CMGS	(Short) Message Send
Test command AT+CMGS=?	Response: OK/ERROR/+CME ERROR
Write command <b>If PDU mode (+CMGF=0)</b> AT+CMGS=<length><CR> <b>PDU is given:</b> <ctrl-Z/ESC>	Response: <b>If sending is successful:</b> +CMGS: <mr> <b>If sending is not successful:</b> +CMS ERROR Parameter: <length>      Length of PDU <pdu>      The PDU begins with the service-center address (according to GSM 04.11, [9]), followed by the TPDU (according to GSM 03.40, [6]) in hexadecimal format <mr>      Message reference <ackpdu>      RP-ACK PDU according to GSM 03.40 [6]

## AT+CMGW

AT+CMGW	(Short) Message Write (SMS to the SMS memory)														
Test command AT+CMGW=?	Response: OK / ERROR / +CME ERROR														
Write command <b>If PDU mode (+CMGF=0)</b> AT+CMGW=<length>[,<stat>]<CR> <b>PDU is given:</b> <ctrl-Z/ESC>	<div>Response:</div> <div>+CMGW: &lt;index&gt;</div> <div>+CMS ERROR</div> <div>Parameter:</div> <table> <tr> <th>&lt;length&gt;</th><th>Length of PDU</th></tr> <tr> <td>&lt;stat&gt;</td><td></td></tr> <tr> <td>0</td><td>REC UNREAD i.e. received messages unread (default)</td></tr> <tr> <td>1</td><td>REC READ i.e. received messages read</td></tr> <tr> <td>2</td><td>STO UNSENT i.e. stored unsent messages</td></tr> <tr> <td>3</td><td>STO SENT i.e. stored sent messages</td></tr> <tr> <td>4</td><td>ALL i.e. all messages</td></tr> </table> <div>&lt;pdu&gt;</div> <div>The PDU begins with the service-center address (according to GSM 04.11, [9]), followed by the TPDU (according to GSM 03.40, [6]) in hexadecimal format</div> <div>&lt;index&gt;</div> <div>Index of message in memory selected by AT+CPMS</div>	<length>	Length of PDU	<stat>		0	REC UNREAD i.e. received messages unread (default)	1	REC READ i.e. received messages read	2	STO UNSENT i.e. stored unsent messages	3	STO SENT i.e. stored sent messages	4	ALL i.e. all messages
<length>	Length of PDU														
<stat>															
0	REC UNREAD i.e. received messages unread (default)														
1	REC READ i.e. received messages read														
2	STO UNSENT i.e. stored unsent messages														
3	STO SENT i.e. stored sent messages														
4	ALL i.e. all messages														

## AT+CMMS

AT+CMMS	More (Short) Message to Send								
Test command AT+CMMS=?	Response: +CMMS: (list of supported <a href="#">&lt;mode&gt;s</a> )								
	Parameter:								
	<table><tr><td><a href="#">&lt;mode&gt;</a></td><td>0</td><td>Disable</td></tr><tr><td></td><td>1</td><td>Keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes the link and TA switches <a href="#">&lt;n&gt;</a> to 0</td></tr><tr><td></td><td>2</td><td>keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes the link and TA does NOT switch <a href="#">&lt;n&gt;</a> to 0</td></tr></table>	<a href="#">&lt;mode&gt;</a>	0	Disable		1	Keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes the link and TA switches <a href="#">&lt;n&gt;</a> to 0		2
<a href="#">&lt;mode&gt;</a>	0	Disable							
	1	Keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes the link and TA switches <a href="#">&lt;n&gt;</a> to 0							
	2	keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes the link and TA does NOT switch <a href="#">&lt;n&gt;</a> to 0							
Read command AT+CMMS?	Response: +CMMS : <a href="#">&lt;mode&gt;</a>								
	Parameter: <a href="#">&lt;mode&gt;</a> See Test Command								
Write command AT+CMMS=[ <a href="#">&lt;mode&gt;</a> ]	Response: OK/ERROR								
	Parameter <a href="#">&lt;mode&gt;</a> See Test Command								

**AT+CMSS**

AT+CMSS	Send an SMS from the SMS memory
Test command AT+CMSS=?	Response OK
Write command AT+CMSS=< <a href="#">index</a> >[,< <a href="#">da</a> >[,< <a href="#">toda</a> >]]	Response: <b>If sending is successful:</b> +CMSS: < <a href="#">mr</a> > <b>If sending is not successful:</b> +CMS ERROR Parameter: < <a href="#">index</a> >      Index of message in selected memory <mem2> < <a href="#">da</a> >          Destination address in string format < <a href="#">toda</a> >        Format of destination address < <a href="#">mr</a> >          Message reference < <a href="#">ackpdu</a> >      RP-ACK PDU according to GSM 03.40 [6]

**AT+CMUX**

AT+CMUX	Multiplexing Mode
Test command AT+CMUX=?	Response +CMUX: (list of supported < <a href="#">mode</a> >s) OK/ERROR
Read command AT+CMUX?	Response +CMUX: < <a href="#">mode</a> > OK
Write command AT+CMUX=< <a href="#">mode</a> >	Response OK Parameter < <a href="#">mode</a> >    0    Basic option

**AT+CNMA**

AT+CNMA	Acknowledgment of a short message directly output (without storing) ( <b>NOTE:</b> This command is only available if Phase 2+ compatibility has been activated by means of AT+CSMS=1)
Test command AT+CNMA=?	Response: +CNMA: (list of supported < <a href="#">n</a> >s) Parameter: < <a href="#">n</a> >            0    Mode of functioning in analogy to GSM 27.005 text mode
Write command AT+CNMA[=< <a href="#">n</a> >]	Response: OK/ERROR/+CMS ERROR Parameter: < <a href="#">n</a> >            See Test command

## AT+CNMI

AT+CNMI	New Message Indication																								
Notes	<p>TA selects the procedure how the receipt of new messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38 ( see [5]).</p> <p>1) If the DTR signal is not available or the state of the signal is ignored (V.250 command &amp;D0), reliable message transfer can be assured by using AT+CNMA acknowledgement procedure.</p> <p>2) The rules &lt;mt&gt;=2 and &lt;mt&gt;=3 for storing received SM are possible only if phase 2+ compatibility is activated with AT+CSMS=1</p> <p>3) The parameter &lt;ds&gt;=1 is only available in phase 2+</p>																								
Test command AT+CNMI=?	<p>Response: +CNMI: (list of supported &lt;mode&gt;s),(list of supported &lt;mt&gt;s),(list of supported &lt;bm&gt;s),(list of supported &lt;ds&gt;s),(list of supported &lt;bfr&gt;s)</p> <p>Parameter:</p> <table><tr><td>&lt;mode&gt;</td><td>0</td><td>Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</td></tr><tr><td></td><td>1</td><td>Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE</td></tr><tr><td>&lt;mt&gt;</td><td></td><td>Rules for storing received SMS depend on the relevant data coding method (refer to GSM 03.38, ( see [5]) ), preferred memory storage AT+CPMS) setting and this value</td></tr><tr><td>Note</td><td></td><td>If the AT command interface is acting as the only display device, the ME must support storage of class 0 messages and messages in the message waiting indication group (discard message)</td></tr><tr><td></td><td>0</td><td>No SMS-DELIVER indications are routed to the TE</td></tr><tr><td></td><td>1</td><td>If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: &lt;mem&gt;,&lt;index&gt;</td></tr><tr><td></td><td>2</td><td>SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled)</td></tr><tr><td></td><td>3</td><td>Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in &lt;mt&gt;=2. Messages of other data coding schemes result in indication as defined in &lt;mt&gt;=1.</td></tr></table>	<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.		1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE	<mt>		Rules for storing received SMS depend on the relevant data coding method (refer to GSM 03.38, ( see [5]) ), preferred memory storage AT+CPMS) setting and this value	Note		If the AT command interface is acting as the only display device, the ME must support storage of class 0 messages and messages in the message waiting indication group (discard message)		0	No SMS-DELIVER indications are routed to the TE		1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: <mem>,<index>		2	SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: <length><CR><LF><pdu> (PDU mode enabled)		3	Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.
<mode>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.																							
	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE																							
<mt>		Rules for storing received SMS depend on the relevant data coding method (refer to GSM 03.38, ( see [5]) ), preferred memory storage AT+CPMS) setting and this value																							
Note		If the AT command interface is acting as the only display device, the ME must support storage of class 0 messages and messages in the message waiting indication group (discard message)																							
	0	No SMS-DELIVER indications are routed to the TE																							
	1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: <mem>,<index>																							
	2	SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: <length><CR><LF><pdu> (PDU mode enabled)																							
	3	Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.																							
	<table><tr><td>&lt;bm&gt;</td><td>Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38 ( see [5])), the setting of Select CBM Types AT+CSCB) and these values:</td></tr><tr><td>0</td><td>No CBM indications are routed to the TE.</td></tr><tr><td>2</td><td>New CBMs are routed directly to the TE using unsolicited result code: +CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; (PDU mode enabled)</td></tr><tr><td>Note</td><td>The settings of command AT+CNMI and AT+CSCB have to be done on the same Serial Interface.</td></tr></table>	<bm>	Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38 ( see [5])), the setting of Select CBM Types AT+CSCB) and these values:	0	No CBM indications are routed to the TE.	2	New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled)	Note	The settings of command AT+CNMI and AT+CSCB have to be done on the same Serial Interface.																
<bm>	Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38 ( see [5])), the setting of Select CBM Types AT+CSCB) and these values:																								
0	No CBM indications are routed to the TE.																								
2	New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled)																								
Note	The settings of command AT+CNMI and AT+CSCB have to be done on the same Serial Interface.																								

	<a href="#">&lt;ds&gt;</a>	0	No SMS-STATUS-REPORTs are routed to the TE
		1	SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled)
		2	If SMS-STATUS-REPORT is routed into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index>
	<a href="#">&lt;bfr&gt;</a>	1	TA buffer of unsolicited result codes defined within this command is cleared when <a href="#">&lt;mode&gt;</a> 1...3 is entered.
	<a href="#">&lt;mem&gt;</a>		See AT+CPMS command
	<a href="#">&lt;index&gt;</a>		Index of the record on the chip card
	<a href="#">&lt;length&gt;</a>		Length of <pdu>
	<a href="#">&lt;pdu&gt;</a>		See AT+CMGL command
Read command AT+CNMI?	Response :		
	+CNMI: < <a href="#">mode</a> >,< <a href="#">mt</a> >,< <a href="#">bm</a> >,< <a href="#">ds</a> >,< <a href="#">bfr</a> >		
	Parameter:		
	<a href="#">&lt;mode&gt;</a>		See Test command
	<a href="#">&lt;mt&gt;</a>		See Test command
	<a href="#">&lt;bm&gt;</a>		See Test command
	<a href="#">&lt;ds&gt;</a>		See Test command
Write command AT+CNMI=[< <a href="#">mode</a> >[,< <a href="#">mt</a> >[,< <a href="#">bm</a> >[,< <a href="#">ds</a> >[,< <a href="#">bfr</a> >]]]]]	Response:		
	OK / ERROR / +CMS ERROR		
	Parameter:		
	<a href="#">&lt;mode&gt;</a>		See Test command
	<a href="#">&lt;mt&gt;</a>		See Test command
	<a href="#">&lt;bm&gt;</a>		See Test command
	<a href="#">&lt;ds&gt;</a>		See Test command
Unsolicited result code	<a href="#">&lt;bfr&gt;</a>		See Test command
	+CMTI: <mem>,<index>		
	+CMT: <length><CR><LF><pdu>		
	+CDS: <length><CR><LF><pdu>		
	+CDSI: <mem>,<index>		
+CBM: <length><CR><LF><pdu>			



## AT+CPMS

AT+CPMS	Preferred SMS message storage Revision according to 3GPP TS 27.005																								
Test command AT+CPMS=?	<p>Response: +CPMS: (list of supported &lt;mem1&gt;s),( list of supported &lt;mem2&gt;s) ,(list of supported &lt;mem3&gt;s)</p> <p>Parameter:</p> <table> <tr> <td>&lt;mem1&gt;</td><td>Memory from which messages are read and deleted</td></tr> <tr> <td>SM</td><td>SIM message storage</td></tr> <tr> <td>ME</td><td>Mobile Equipment message storage</td></tr> <tr> <td>MT</td><td>combination of "ME" and "SM" storages</td></tr> </table> <table> <tr> <td>&lt;mem2&gt;</td><td>Messages will be written and sent from this memory storage:</td></tr> <tr> <td>SM</td><td>SIM message storage</td></tr> <tr> <td>ME</td><td>Mobile Equipment message storage</td></tr> <tr> <td>MT</td><td>combination of "ME" and "SM" storages</td></tr> </table> <table> <tr> <td>&lt;mem3&gt;</td><td>Memory in which received messages are preferred to be stored, if routing to TE is not set (see AT+CNMI command with parameter &lt;mt&gt;=2)</td></tr> <tr> <td>SM</td><td>SIM message storage</td></tr> <tr> <td>ME</td><td>Mobile Equipment message storage</td></tr> <tr> <td>MT</td><td>combination of "ME" and "SM" storages</td></tr> </table>	<mem1>	Memory from which messages are read and deleted	SM	SIM message storage	ME	Mobile Equipment message storage	MT	combination of "ME" and "SM" storages	<mem2>	Messages will be written and sent from this memory storage:	SM	SIM message storage	ME	Mobile Equipment message storage	MT	combination of "ME" and "SM" storages	<mem3>	Memory in which received messages are preferred to be stored, if routing to TE is not set (see AT+CNMI command with parameter <mt>=2)	SM	SIM message storage	ME	Mobile Equipment message storage	MT	combination of "ME" and "SM" storages
<mem1>	Memory from which messages are read and deleted																								
SM	SIM message storage																								
ME	Mobile Equipment message storage																								
MT	combination of "ME" and "SM" storages																								
<mem2>	Messages will be written and sent from this memory storage:																								
SM	SIM message storage																								
ME	Mobile Equipment message storage																								
MT	combination of "ME" and "SM" storages																								
<mem3>	Memory in which received messages are preferred to be stored, if routing to TE is not set (see AT+CNMI command with parameter <mt>=2)																								
SM	SIM message storage																								
ME	Mobile Equipment message storage																								
MT	combination of "ME" and "SM" storages																								
Read command AT+CPMS?	<p>Response: +CPMS: &lt;mem1&gt;,&lt;used1&gt;,&lt;total1&gt;,&lt;mem2&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;mem3&gt;,&lt;used3&gt;,&lt;total3&gt;</p> <p>Parameter:</p> <table> <tr> <td>&lt;memx&gt;</td><td>Memory from which messages are read and deleted, x=1..3</td></tr> <tr> <td>&lt;usedx&gt;</td><td>Number of messages currently in &lt;memx&gt;</td></tr> <tr> <td>&lt;totalx&gt;</td><td>Total number of messages that can be stored in &lt;memx&gt;</td></tr> </table>	<memx>	Memory from which messages are read and deleted, x=1..3	<usedx>	Number of messages currently in <memx>	<totalx>	Total number of messages that can be stored in <memx>																		
<memx>	Memory from which messages are read and deleted, x=1..3																								
<usedx>	Number of messages currently in <memx>																								
<totalx>	Total number of messages that can be stored in <memx>																								
Write command AT+CPMS= <mem1>[,<mem2>[,<mem3>]]	<p>Response: +CPMS: &lt;used1&gt;,&lt;total1&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;used3&gt;,&lt;total3&gt; OK/ERROR/+CMS ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;mem1&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mem2&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;mem3&gt;</td><td>See Test command</td></tr> </table>	<mem1>	See Test command	<mem2>	See Test command	<mem3>	See Test command																		
<mem1>	See Test command																								
<mem2>	See Test command																								
<mem3>	See Test command																								
<p><b>Note</b> Incoming short messages with message class 2 (see GSM 03.38, [5] ) will be stored in the "SM" storage only. Therefore, the AT^SMGO:2 indication (see AT^SMGO command) can occur without a preceding AT^SMGO:1 indication.</p>																									

**AT+CSCA**

AT+CSCA	Address of the SMS service centre
Test command AT+CSCA=?	Response: OK / ERROR / +CME ERROR
Read command AT+CSCA?	Response: +CSCA: <sca> , <tosca>
	Parameter:
	<sca>           Service center address in string format
	<tosca>       Service center address format
Write command AT+CSCA=<sca>[,<tosca>]	Response: OK / ERROR

**AT+CSCB**

AT+CSCB	Select cell broadcast messages
Test command AT+CSCB=?	Response: +CSCB: (list of supported <mode>s)
	Parameter:
	<mode>       0   Accepts messages that are defined in <mids> and <dcss>
	1   Does not accept messages that are defined in <mids> and <dcss>
Read command AT+CSCB?	Response: +CSCB: <mode> , <mids> , <dcss>
	Parameter:
	<mode>       See Test command
	<mids>       String type; combinations of CBM message IDs
	<dcss>       String type; combinations of CBM data coding schemes
Write command AT+CSCB=[<mode>[,<mids>[,<dcss>]]]	Parameter:
	<mode>       See Test command
	<mids>       String type; combinations of CBM message IDs
	<dcss>       String type; combinations of CBM data coding schemes

## AT+CSMS

AT+CSMS	Selection of message service Revision according to 3GPP TS 27.005 Version 5.0.0
Test command AT+CSMS=?	Response: +CSMS: (list of supported <service>s)
	Parameter: <service>    0    GSM 03.40 [6] and 03.41 [7] 1    GSM 03.40 [6] and 03.41 [7] and compatibility of the AT command syntax for phase 2+
	<b>Note:</b> Deactivating phase 2+ compatibility is only possible if the direct output of short messages AT+CNMI=1, 2 or AT+CNMI=1, 3 is not activated. If necessary, the latter should be deactivated first
Read command AT+CSMS?	Response: +CSMS: <service> , <mt> , <mo> , <bm>
	Parameter:
	<service>    See Test Command
	<mt>            Mobile terminated messages 1    Type supported
	<mo>            Mobile originated messages 1    Type supported
<bm>            Broadcast type messages 1    Type not supported	
Write command AT+CSMS= <service>	Response: +CSMS: <mt> , <mo> , <bm> OK/ERROR/+CME ERROR
	Parameter: <service>    See Test Command

## 2.5 Modem commands

This section provides the descriptions of modem commands.

### AT+CBST

AT+CBST	Select bearer service type																																	
Selects the bearer service <a href="#">&lt;name&gt;</a> with data rate <a href="#">&lt;speed&gt;</a> and the connection element <a href="#">&lt;ce&gt;</a> to be used when data calls are originated.																																		
Test command AT+CBST=?	Response: +CBST: (list of supported <a href="#">&lt;speed&gt;</a> s), (list of supported <a href="#">&lt;name&gt;</a> s), (list of supported <a href="#">&lt;ce&gt;</a> s) OK / ERROR / +CME ERROR																																	
	Parameter: <table><tr><td><a href="#">&lt;speed&gt;</a></td><td>0</td><td>auto bauding</td></tr><tr><td></td><td>4</td><td>2400 bps ( V.22bis)</td></tr><tr><td></td><td>6</td><td>4800 bps ( V.32)</td></tr><tr><td></td><td>7</td><td>9600 bps (V.32)</td></tr><tr><td></td><td>14</td><td>14400 bps (V.34)</td></tr><tr><td></td><td>68</td><td>2400 bps (V.110)</td></tr><tr><td></td><td>70</td><td>4800 bps (V.110)</td></tr><tr><td></td><td>71</td><td>9600 bps (V.110)</td></tr><tr><td></td><td>75</td><td>14400 bps (V.110)</td></tr><tr><td><a href="#">&lt;name&gt;</a></td><td>0</td><td>asynchronous modem</td></tr><tr><td><a href="#">&lt;ce&gt;</a></td><td>1</td><td>non-transparent</td></tr></table>	<a href="#">&lt;speed&gt;</a>	0	auto bauding		4	2400 bps ( V.22bis)		6	4800 bps ( V.32)		7	9600 bps (V.32)		14	14400 bps (V.34)		68	2400 bps (V.110)		70	4800 bps (V.110)		71	9600 bps (V.110)		75	14400 bps (V.110)	<a href="#">&lt;name&gt;</a>	0	asynchronous modem	<a href="#">&lt;ce&gt;</a>	1	non-transparent
<a href="#">&lt;speed&gt;</a>	0	auto bauding																																
	4	2400 bps ( V.22bis)																																
	6	4800 bps ( V.32)																																
	7	9600 bps (V.32)																																
	14	14400 bps (V.34)																																
	68	2400 bps (V.110)																																
	70	4800 bps (V.110)																																
	71	9600 bps (V.110)																																
	75	14400 bps (V.110)																																
<a href="#">&lt;name&gt;</a>	0	asynchronous modem																																
<a href="#">&lt;ce&gt;</a>	1	non-transparent																																
Read command AT+CBST?	Response: +CBST: <a href="#">&lt;speed&gt;</a> , <a href="#">&lt;name&gt;</a> , <a href="#">&lt;ce&gt;</a> OK / ERROR / +CME ERROR																																	
Write command AT+CBST= <a href="#">&lt;speed&gt;</a> [,0,1]	Response: OK / ERROR / +CME ERROR Parameter: <a href="#">&lt;speed&gt;</a> See Test command																																	

### AT+CRLP

AT+CRLP	Select radio link protocol parameter for originating non-transparent data call								
This modem command sets radio link protocol (RLP) parameters used when non-transparent data calls are initiated. This command returns supported values as a compound value.									
Test command AT+CRLP=?	Response: +CRLP: (list of supported <a href="#">&lt;iws&gt;</a> s), (list of supported <a href="#">&lt;mws&gt;</a> s), (list of supported <a href="#">&lt;T1&gt;</a> s), (list of supported <a href="#">&lt;N2&gt;</a> s) OK / ERROR / +CME ERROR								
	Parameter: <table> <tr> <td><a href="#">&lt;iws&gt;</a></td><td>Interworking window size (IWF to MS)</td></tr> <tr> <td></td><td>0-<u>61</u> Default: 61</td></tr> <tr> <td><a href="#">&lt;mws&gt;</a></td><td>Mobile window size (MS to IWF)</td></tr> <tr> <td></td><td>0-<u>61</u> Default: 61</td></tr> </table>	<a href="#">&lt;iws&gt;</a>	Interworking window size (IWF to MS)		0- <u>61</u> Default: 61	<a href="#">&lt;mws&gt;</a>	Mobile window size (MS to IWF)		0- <u>61</u> Default: 61
<a href="#">&lt;iws&gt;</a>	Interworking window size (IWF to MS)								
	0- <u>61</u> Default: 61								
<a href="#">&lt;mws&gt;</a>	Mobile window size (MS to IWF)								
	0- <u>61</u> Default: 61								

	<T1>	Acknowledgement timer (T1 in 10 ms units) 48-255      Default: 78
	<N2>	Re-transmission attempts N2 1-255      Default: 6
Read command AT+CRLP?	Response The command returns current settings for the supported RLP version 0. +CRLP: <iws> , <mws> , <T1> , <N2> OK / ERROR / +CME ERROR	
	Parameter:	
	<iws>	See Test command
	<mws>	See Test command
	<T1>	See Test command
	<N2>	See Test command
Write command AT+CRLP= [<iws>[,<mws>[,<T1> , <N2>]]]		
	Response: OK / ERROR / +CME ERROR	
	Parameter:	
	<iws>	See Test command
	<mws>	See Test command
	<T1>	See Test command
	<N2>	See Test command

## 2.6 Fax commands

The following commands can be used for FAX transmission. If the ME is acting as a FAX modem to a PC-based application, it is necessary to select the appropriate service class (FAX class) provided by the ME. The ME reports its FAX service class capabilities, both the current setting and the range of services available, via the AT+FCLASS command.

**Note:** According to EIA/-592-A [20], the Error Correcting Mode (ECM) should not be used when sending FAXes over GSM.

+FCLASS parameter	Service Class	Reference, Standard
0		e.g. TIA/EIA-602 or ITU V.250
1	Service Class 1	EIA/TIA-578-A
2	Vendor-specific	this document and EIA PN-2388 (draft)

The following FAX commands are dummy commands. Invoking these commands will not cause ERROR result codes, but these commands have no functionality either.

**Note:** all these commands are Fax Class 2 commands

Command	Meaning
AT+FAA	Auto Answer mode
AT+FECM	Error Correction Mode control
AT+FLNFC	Page Length format conversion
AT+FLPL	Indicate document available for polling
AT+FMINS	Minimum Phase C speed
AT+FRBC	Phase C data receive byte count
AT+FREL	Phase C received EOL alignment
AT+FSPL	Enable polling
AT+FTBC	Phase C data transmit byte count
AT+FWDFC	Page width format conversion

**Table 2-9: List of dummy FAX commands (Fax Class 2)**

## AT+FBADLIN

AT+FBADLIN	Define or read number of bad lines
<b>Used for FAX class 2 only</b> This command defines the "Copy Quality OK" threshold. If pixel count errors were detected in normal resolution (98 dpi) mode in as many consecutive lines as defined in <badlin>, the copy quality is unacceptable. If pixel count errors were detected in fine resolution (196 dpi) mode in twice as many consecutive lines as defined in <badlin>, the copy quality is unacceptable. "Copy Quality Not OK" occurs if either the error percentage is too high or if too many consecutive lines contain errors	
Read command AT+FBADLIN?	Response: +FBADLIN: <badlin> OK / ERROR / +CME ERROR  Parameter: <badlin>                      See Write command
Write command AT+FBADLIN=<badlin>	Parameter: <badlin>                      0 . . . 255      0 indicates that error checking is not present or disabled (Default value: 10)

## AT+FBADMUL

AT+FBADMUL	Define, read or test number of bad lines
<b>Used for FAX class 2 only</b> This command defines the "Copy-Quality-OK" multiplier. The number of lines received with a bad pixel count is multiplied by this number. If the result exceeds the total number of lines on the page the error rate is considered too high. A threshold multiplier value of 20 corresponds to a 5% error rate.	
Read command AT+FBADMUL?	Response: +FBADMUL: <n> OK / ERROR / +CME ERROR  Parameter: <n>                              See Write command
Write command AT+FBADMUL =<n>	Response: OK / ERROR / +CME ERROR  Parameter: <n>                              0 . . . 255      0 indicates that error checking is not present or disabled (Default value: 20)

**AT+FBOR**

<b>AT+FBOR</b>	Query the bit order for receive mode
<b>Used for FAX class 2 only</b>	
Query the bit order for receive-mode. The mode is set by the ME dependent on the selected Service Class.	
Test command AT+FBOR=?	Response: +FBOR: (list of supported bit order modes <bor>s) OK Parameter: <bor> <div style="margin-left: 100px;">             0    direct bit order for both Phase C and Phase B/D data              1    Reversed bit order for Phase C data, direct bit order for Phase B/D data           </div>
Read command AT+FBOR?	Response: +FBOR: <bor> OK/ERROR/+CME ERROR Parameter: <bor>                      See Test command
Write command AT+FBOR=<bor>	Response: OK/ERROR/+CME ERROR Parameter: <bor>                      See Test command

**AT+FCIG**

<b>AT+FCIG</b>	Query or set the Local polling id
<b>Used for FAX class 2 only</b>	
Test command AT+FCIG=?	Response: +FCIG: (max. length of Local Polling ID string) (range of supported ASCII character values) OK/ERROR/+CME ERROR Parameter: <id>                      Local Polling ID string, maximum length and possible content as reported by Test command. Default value is empty string (""). Maximum length: 20 <div style="text-align: right;">See also the "AT+FLID" command</div>
Read command AT+FCIG?	Response: +FCIG: <id> OK/ERROR/+CME ERROR Parameter: <id>                      See Test command
Write command AT+FCIG=<id>	Response: OK/ERROR/+CME ERROR Parameter: <id>                      See Test command



## AT+FCQ

AT+FCQ	Control Copy Quality
<b>Used for FAX class 2 only</b> This command controls Copy Quality checking when receiving a fax	
Test command AT+FCQ=?	Response: +FCQ: (list of supported copy quality checking <cq>s) OK  Parameter: <cq>  0 No checking of copy quality performed. The ME will generate Copy Quality OK (MCF) responses to complete pages 1 ME can check 1-D phase data. The connected application must check copy quality for 2-D phase C data
Read command AT+FCQ?	Response: +FCQ <cq> OK / ERROR / +CME ERROR  Parameter: <cq> See Test command
Write command AT+FCQ=<cq>	Response: OK / ERROR / +CME ERROR  Parameter: <cq> See Test command

## AT+FCLASS

AT+FCLASS	Select, read or test FAX service class
Test command AT+FCLASS=?	Response: +FCLASS: (list of supported <n>s) OK / ERROR / +CME ERROR  Parameter: <n>  0 data (e.g. EIA/TIA-602 or ITU V.250) 1 Fax class 1 (EIA/TIA-578-A, Service Class 1) 2 Vendor-specific (Fax class 2 (EIA/TIA SP-2388, an early draft version of EIA/TIA-592-A – asynchronous Facsimile DCE Control Standard - Service class 2 )
Read command AT+FCLASS?	Response: +FCLASS: <n> OK / ERROR / +CME ERROR  Parameter: <n> See Test command
Write command AT+FCLASS=<n>	Response: OK / ERROR / +CME ERROR  Parameter: <n> See Test command

**AT+FCR**

AT+FCR	Capability to receive
Write command AT+FCR=<cr>	Response: OK/ERROR/+CME ERROR
	Parameter:
	<cr>      0      ME cannot receive message data. This value can be used when the application has insufficient storage. The ME can send and can be polled for a file.
	1      ME can receive message data. <b>Used for FAX class 2 only</b>

**AT+FDCC**

AT+FDCC	Select service for MO SMS messages
<b>Used for Faxclass 2 only</b>	
This command allows the connected application to sense and constrain the capabilities of the facsimile DCE (=ME), from the choices defined in ITU T.30 Table 2.	
Test command AT+FDCC=?	Response: +FDCC: (list of <vr>s), (list of  s), (list of <wd>s), (list of <ln>s), (list of <df>s), (list of <ec>s), (list of <bf>s), (list of <st>s) OK/ERROR/+CME ERROR
	Parameter:
	<vr>      Vertical Resolution
	       Bit rate
	<wd>      Page Width
	<ln>      Page length
	<df>      Data compression Format
	<ec>      Error Correction mode
	<bf>      Binary File transfer mode
	<st>      Scan Time / line
<b>Note:</b> For further information see AT+FDIS	
Read command: AT+FDCC?	Response: +FDCC: <vr>, ,<wd>,<ln>,<df>,<ec>,<bf>,<st> OK/ERROR/+CME ERROR
	Parameter:
	<vr>      See Test command
	       See Test command
	<wd>      See Test command
	<ln>      See Test command
	<df>      See Test command
	<ec>      See Test command
	<bf>      See Test command
	<st>      See Test command
Write command AT+FDCC=<vr>, ,<wd>,<ln>,<df>,<ec>,<bf>,<st>	Response: OK/ERROR/+CME ERROR
	Parameter:
	<vr>      See Test command
	       See Test command
	<wd>      See Test command

<ln>	See Test command
<df>	See Test command
<ec>	See Test command
<bf>	See Test command
<st>	See Test command

## AT+FDFFC

AT+FDFFC	Data Compression Format Conversion
<b>Used for FAX class 2 only</b> This parameter determines whether there is a mismatch in the ME response between the data format negotiated for the facsimile session (reported by the +FDSC:DF subparameter) and the Phase C data desired by the controlling application, indicated by the optional +FDT:DF subparameter, or the +FDIS=DF subparameter for the +FDR operation.	
Test command AT+FDFFC=?	Response: +FDFFC: (list of supported <df>s) OK/ERROR/+CME ERROR  Parameter: <df> 0 mismatch checking is always disabled. The controlling application has to check the +FDSC: DF subparameter and transfer matching data
Read command AT+FDFFC?	Response: +FDFFC: <df> OK/ERROR/+CME ERROR  Parameter: <df> See Test Command
Write command AT+FDFFC=<df>	Response: OK/ERROR/+CME ERROR  Parameter: <df> See Test Command

## AT+FDIS

AT+FDIS	Query or set session parameters
<b>Used for FAX class 2 only</b> This command allows the controlling application to set and constrain the capabilities used for the current session. +FDIS is used to generate DIS or DTC messages directly. +FDIS (and received DIS messages) is also used to generate DCS messages.	
Test command AT+FDIS=?	Response +FDIS: (list of <vr>s), (list of  s), (list of <wd>s), (list of <ln>s), (list of <df>s), (list of <ec>s), (list of <bf>s), (list of <st>s)  Parameter: <vr> Vertical Resolution 0 normal, 98 lpi 1 fine, 196 lpi    Bit rate 0 2400 bit/s, V.27ter 1 4800 bit/s, V.27ter 2 7200 bit/s, V.29 3 9600 bit/s, V.29  <wd> Page Width 0*) 1728 pixels in 215mm 1 2048 pixels in 255 mm

	<ln>	2	2432 pixels in 303 mm
		3	1216 pixels in 151 mm
		4	864 pixels in 107 mm
			Page length
	<df>	0	A4, 297mm
		1	B4, 364mm
		2	unlimited length
			Data compression Format
	<ec>	0*)	1-D modified Huffman
		1	2-D modified read
		2	2-D uncompressed mode
			Error Correction mode
	<bf>	0*)	disable ECM
		1	enable ECM, 64 bytes/frame
		2	enable ECM, 256 bytes/frame
			Binary Fole transfer mode
	<st>	0*)	disable BFT
		1	enable BFT
			Scan Time / line
		0*)	0 ms (at vr= normal)
1		5 ms	
2		10 ms	
3		10 ms	
4		20 ms	
5		20 ms	
6		40 ms	
7	40 ms		

\*) Note:  
Only the default value needs to be implemented.  
Use test command to check which parameter values are in fact possible!

Read command AT+FDIS?	Response:	
	+FDIS: <vr>, ,<wd>,<ln>,<df>,<ec>,<bf>,<st>	
	OK/ERROR/+CME ERROR	
	Parameter:	
	<vr>	See Test command
	 	See Test command
	<wd>	See Test command
	<ln>	See Test command
	<df>	See Test command
	<ec>	See Test command
	<bf>	See Test command
	<st>	See Test command

Write command  
AT+FDIS=<VR>,<BR>,<WD>,<LN>,<DF>,<EC>,<BF>,<ST>

	Response:	
	OK/ERROR/+CME ERROR	
	Parameter:	
	<vr>	See Test command
	 	See Test command
	<wd>	See Test command
	<ln>	See Test command
	<df>	See Test command
	<ec>	See Test command
	<bf>	See Test command

	<st>	See Test command
--	------	------------------

### AT+FDR

AT+FDR	Begin or continue phase C data reception
<b>Used for FAX class 2 only</b>	
This command initiates transition to Phase C data reception	
Execute command	Response:
AT+FDR	CONNECT/OK/ERROR

### AT+FDT

AT+FDT	Data Transmission
<b>Used for FAX class 2 only</b>	
This command requests the ME to transmit a Phase C page. When the ME is ready to accept Phase C data, it issues the negotiation responses and the CONNECT result code to the application.	
In Phase B, this command releases the ME to proceed with negotiation, and releases the DCS message to the remote station.	
In Phase C, this command resumes transmission after the end of a data stream transmitted before.	
Execute command	Response
AT+FDT	CONNECT
	Parameter:
<dt>	list of <df>s, <vr>s, <wd>s, <ln>s
<df>	Data compression Format
0	1-D modified Huffman
1	2-D modified read
2	2-D uncompressed mode
<vr>	Vertical Resolution
0	normal, 98 lpi
1	fine, 196 lpi
<wd>	Page Width
0	1728 pixels in 215mm
1	2048 pixels in 255 mm
2	2432 pixels in 303 mm
3	1216 pixels in 151 mm
4	864 pixels in 107 mm
<ln>	Page length
0	A4, 297mm
1	B4, 364mm
2	unlimited length
<b>*) Note:</b> Only the default value needs to be implemented. Use test command to check which parameter values are in fact possible!	

**AT+FET**

AT+FET		End a page or document
<b>Used for FAX class 2 only</b>		
This command indicates that the current page or part thereof is complete. An ERROR response code results if this command is issued while the mode is on-hook.		
Write command AT+FET=<ppm>	Response: OK / ERROR	
	Parameter: <ppm>	Post Page Message Codes
		0 Another page next, same document
		1 another document next
		2 no more pages or documents
		4 another page, procedure interrupt
		5 another document, procedure interrupt

**AT+FK**

AT+FK		Kill operation, orderly FAX abort
<b>Used for FAX class 2 only</b>		
This command causes the TA to terminate the session in an orderly manner.		
Execute command AT+FK	Response: OK / ERROR	

**AT+FLID**

AT+FLID		Query or set session parameters
<b>Used for FAX class 2 only</b>		
Test command AT+FLID=?	Response: +FLID: (max. character length of Local ID string) (range of supported ASCII character values) OK / ERROR / +CME ERROR	
	Parameter: <lid> Local ID string, max. length and possible content as reported by test command. Default value is empty string (""). Maximum length: 20  See also the "AT+FCIG" command	
Read command AT+FLID?	Response: +FLID: <lid> OK / ERROR / +CME ERROR	
	Parameter: <lid> See Test Command	
Write command AT+FLID=<lid>	Response: +FLID: (max. character length of Local ID string) (range of supported ASCII character values) OK / ERROR / +CME ERROR	
	Parameter: <lid> See Test command	

### AT+FMDL

AT+FMDL	Identify Product Model
<b>Used for FAX class 2 only</b>	
Send the model identification to the TA.	
Read command AT+FMDL?	Response: Gipsy Soft Protocolstack OK

### AT+FMFR

AT+FMFR	Request Manufacturer Identification
<b>Used for FAX class 2 only</b>	
Send the manufacturer identification to the TA.	
Read command AT+FMFR?	Response: BenQ OK

### AT+FOPT

AT+FOPT	Set bit order independently
<b>Used for FAX class 2 only</b>	
Read command AT+FOPT?	Parameter: <opt>    0    non-standard 1    standard
Write command AT+FOPT=<opt>	Response: OK / ERROR / +CME ERROR Model-specific command to set bit order independently of the understanding which is "mirrored" and which is direct.
	Parameter: <opt>                    1    See Read command

### AT+FPHCTO

AT+FPHCTO	DTE Phase C Response Timeout
<b>Used for FAX class 2 only</b>	
Determines how long the DCE will wait for a command after reaching the end of data when transmitting in Phase C. When time-out is reached, the DCE assumes that there are no more pages or documents to send	
Read command AT+FPHCTO?	Response: +FPHCTO: <tout> OK / ERROR
	Parameter: <tout>    See Write command
Write command AT+FPHCTO=<tout>	Response: OK / ERROR
	Parameter: <tout>    0...255    Time-out value in 100ms units. Default: 30
	Model-specific command to set bit order independently of the understanding which is "mirrored" and which is direct

**AT+FREV**

AT+FREV	Identify Product Revision
<b>Used for FAX class 2 only</b> This command sends the revision identification to the TA.	
Read command AT+FREV?	Response V2.550 OK

**AT+FRH**

AT+FRH	Receive Data Using HDLC Framing
<b>Used for FAX class 1 only</b> This command causes the TA to receive frames using the HDLC protocol and the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook.	
Execute command AT+FRH=<mod>	Response: CONNECT/ERROR
	Parameter: <mod>                      modulation mode 3            V21 Ch2    300 bps

**AT+FRM**

AT+FRM	Receive Data			
<b>Used for FAX class 1 only</b> This command causes the TA to enter the receiver-mode using the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook				
Test command AT+FRM=?	Response			
	+FRM: (List of supported modulation modes <mod>s)			
	OK/ERROR/+CME ERROR			
	Parameter:			
	<mod>	96	V.29	9600 bps
		72	V.29	7200 bps
		48	V.27ter	4800 bps
		24	V.27ter	2400 bps
				See [21]
				See [21]
Write command AT+FRM=<mod>	Response:			
	CONNECT			
	Parameter			
	<mod>	See Test command		



## AT+FRS

AT+FRS	Receive Silence
<b>Used for FAX class 1 only</b> This command causes the TA to report an OK result code to the TE after <time> 10 millisecond intervals of silence have been detected on the line. This command is aborted if any character is received by the DTE. The modem discards the aborting character and issues an OK result code. An ERROR response code results if this command is issued while the mode is on-hook.	
Write command AT+FRS=<time>	Response: (List of supported modulation modes <mod>s) OK
	Parameter <time> 0 .. 255 number of 10 millisecond intervals

## AT+FTH

AT+FTH	Transmit Data Using HDLC Framing
<b>Used for FAX class 1 only</b> This command causes the TA to transmit data using HDLC protocol and the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.	
Read command AT+FTH?	Response: +FTH: (List of supported modulation modes <mod>s) OK / ERROR / +CME ERROR
	Parameter <mod> 3 V.21 Ch2 300 bps
Write command AT+FTH=<mod>	Response: CONNECT
	Parameter <mod> See Read command

## AT+FTM

AT+FTM	Transmit Data
<b>Used for FAX class 1 only</b> This command causes the TA to transmit data using the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.	
Test command AT+FTM=?	Response: +FTH: (List of supported modulation modes <mod>s) OK / ERROR / +CME ERROR
	Parameter: <mod> modulation mode
	96 V.29 9600 bps See [21]
	72 V.29 7200 bps See [21]
	48 V.27ter 4800 bps See [22]
	24 V.27ter 2400 bps See [22]
Write command AT+FTM=<mod>	Response: CONNECT
	Parameter <mod> See Test command

**AT+FTS**

<b>AT+FTS</b>	<b>Stop Transmission and Wait</b>
<b>Used for FAX class 1 only</b> This command causes the TA to terminate a transmission and wait for <time> 10 millisecond intervals before responding with the OK result code to the DTE. An ERROR response code results if this command is issued while the modem is on-hook	
Write command <b>AT+FTS=&lt;time&gt;</b>	Response: OK/ERROR/+CME ERROR
	Parameter: <time> 0 .. 85    number of 10 millisecond intervals

**AT+FVRFC**

<b>AT+FVRFC</b>	<b>Vertical resolution format conversion</b>
<b>Used for FAX class 2 only</b> This command determines the DCE response to a mismatch between the vertical resolution negotiated for the facsimile session and the Phase C data desired by the DTE. An ERROR response code results if this command is issued while the modem is on-hook	
Test command <b>AT+FVRFC=?</b>	Response: (List of supported mismatch checking modes <vrfc>) OK/ERROR/+CME ERROR
	Parameter: <vrfc> 0    disable mismatch checking 2    enable mismatch checking, with resolution conversion of 1-D data in the DCE and an implied AT+FK command executed on 2-D mismatch detection
Read command <b>AT+FVRFC?</b>	Response: OK/ERROR/+CME ERROR
	Parameter: <vrfc>    See Test command
Write command <b>AT+FVRFC=&lt;vrfc&gt;</b>	Response: OK/ERROR/+CME ERROR
	Parameter: <vrfc>    See Test command

## 2.7 Bluetooth related commands

This section provides descriptions of commands related to Bluetooth applications. AT commands defined in this chapter are only to be used over a bluetooth connection between mobile and devices such as Headset or Carkit. These commands are currently specified in the Bluetooth Profile Description and not part of an ETSI specification [18].

### AT+BINP

This command is part of the Handsfree (e.g. Carkit) Profile.

AT+BINP	Phone number corresponding to the last voice tag recorded in the HF
Test command AT+BINP=?	Response: OK/ERROR/+CME ERROR
Write command AT+BINP=1	Response: +BINP: <number>, <type> OK/ERROR/+CME ERROR
	Parameter: <number> Telephone number <type> Type of number

### AT+BLDN

This command is part of the Handsfree (e.g. Carkit) Profile.

AT+BLDN	Redial Last Number
Execute command AT+BLDN;	Response: OK/ERROR/+CME ERROR Dial Last number! Similar to ATDL command but only for connection over Bluetooth

### AT+BRSF

AT+BRSF	Report Supported Features																
Test command AT+BRSF=?	Response: OK/ERROR/+CME ERROR																
Write command AT+BRSF=<integer>	Response: +BRSF: <integer> OK																
	Parameter: <integer> A 32 bit integer type parameter:																
	<table> <tr> <th>Bit</th><th>Feature</th></tr> <tr> <td>0</td><td>Three-way Calling</td></tr> <tr> <td>1</td><td>EC and/or NR function</td></tr> <tr> <td>2</td><td>Voice Recognition</td></tr> <tr> <td>3</td><td>In-band ringing Tone (AT+BSIR)</td></tr> <tr> <td>4</td><td>Attach a number to a voice Tag (AT+BINP)</td></tr> <tr> <td>5</td><td>Ability to reject a call</td></tr> <tr> <td>6...31</td><td>Unused</td></tr> </table>	Bit	Feature	0	Three-way Calling	1	EC and/or NR function	2	Voice Recognition	3	In-band ringing Tone (AT+BSIR)	4	Attach a number to a voice Tag (AT+BINP)	5	Ability to reject a call	6...31	Unused
Bit	Feature																
0	Three-way Calling																
1	EC and/or NR function																
2	Voice Recognition																
3	In-band ringing Tone (AT+BSIR)																
4	Attach a number to a voice Tag (AT+BINP)																
5	Ability to reject a call																
6...31	Unused																

**AT+BSIR**

AT+BSIR	In-band Ring Tone Command (for Bluetooth Handsfree Profile)		
Test command AT+BSIR=?	Response: OK		
Unsolicited result code ^BSIR: <a href="#">&lt;bsir&gt;</a>			
	Parameter:		
	<a href="#">&lt;mode&gt;</a>	0	Mobile provides no in-band ring tone
		1	Mobile provides in-band ring tone

**AT+NREC**

This command is part of the Handsfree (e.g. Carkit) Profile.

AT+NREC	Noise Reduction and Echo Canceling	
Test command AT+NREC=?	Response: OK / ERROR / +CME ERROR	
Write command AT+NREC=<nrec>	Response: OK / ERROR / +CME ERROR	
	Parameter:	
	<nrec>	0 Disable Noise Reduction and Echo Cancellation
		1 Enable Noise Reduction and Echo Cancellation

## AT+VGS

This command is part of the Headset and Handsfree (e.g. Carkit) Profile.

AT+VGS	Gain of the Speaker Volume
Test command AT+VGS=?	Response: OK / ERROR / +CME ERROR
Write command AT+VGS=<gain>	Response: OK / ERROR / +CME ERROR
	Parameter:
	<gain> 0 .. Minimum Gain
	15 Maximum Gain
Unsolicited result code +VGS: <gain>	

## 2.8 General commands according to ITU-T Recommendation V.250

This section provides the descriptions of general ITU-T Recommendation V.250 commands.

### AT+GCAP

AT+GCAP	Request Capabilities List
Test command AT+GCAP=?	Response: OK/ERROR
Read command AT+GCAP?	Response: +GCAP: <mode>
	Parameter <mode> : e.g. "+GCAP: AT+CGSMS , AT+FCLASS"

### AT+IPR

AT+IPR	Fixed DTE rate
Test command AT+IPR=?	Response: +IPR: (list of supported <rate> values) OK / ERROR / +CME ERROR
	Parameter: <rate> bits per second at which the DTE-DCE interface is to operate. The set of supported values can be retrieved by means of the Test command. 0 Auto-bauding
Read command AT+IPR?	Response: +IPR: <rate> OK/ERROR/+CME ERROR
	Parameter: <rate> See Test command
Write command: AT+IPR=<rate>	Response: +IPR: <rate> OK/ERROR/+CME ERROR
	Parameter: <rate> See Test command

## 2.9 BenQ defined commands

Since user-defined commands cannot be implemented according to official syntax, the character string "+C" is replaced by "^S" (^ = 0x5E). In future, if a user-defined command is accepted in the syntax prescribed in 3GPP TS recommendations, the command can be addressed using either command string.

### AT^SABD

AT^SABD	Accessory for Bluetooth Data
Test command AT^SABD=?	Response : ^SABD: (list of supported <mode>s) OK Parameter: <mode> See Write command
Read command AT^SABD?	Response: ^SABD: <mode> OK
Write command AT^SABD=<mode>[,<data>]	Response: [ ^SABD: <data> ] OK Parameter: <mode> integer type parameter, indicating the status of the Accessory Data interface 0 disable Notifications and Accessory Data Transfer 1 enable Accessory Data Transfer Mode 2 Data Transfer mode <b>Note:</b> It can be used directly since x65 devices, no need to switch in mode 1 beforehand. <data> String type, as input parameter only available in transfer mode (see <mode> = 2), Accessory specific data.
Unsolicited Result Code : ^SABD: <data>	
<b>Note:</b> Unsolicited Result Code, only available if write command with mode = 1 or 2 previously entered, that is to say if Data Transfer Mode enabled.	

### AT^SACD

AT^SACD	Accessory Data
Test command AT^SACD=?	Response: ^SACD: (list of supported <mode>s) OK/ERROR/+CME ERROR The Test command returns the modes for the Accessory Notifications and Accessory Data Transfer Parameter: <mode> See Write command
Read command: AT^SACD?	Response: ^SACD: (list of supported <mode>s) OK

	The Read command returns the mode currently selected										
Write command AT <sup>^</sup> SACD==<mode>[,data]	<p>Response: [<sup>^</sup>SACD: &lt;data&gt;] OK</p> <p>The Write command enables the accessory notifications and accessory data transfer. If the mode is set to 'unsolicited Notifications', all accessory notifications are issued with the unsolicited result code</p> <p>Parameter:</p> <table> <tr> <td>&lt;mode&gt;</td><td>integer type parameter, indicating the status of the Accessory Data interface</td></tr> <tr> <td>0</td><td>disable Notifications and Accessory Data Transfer</td></tr> <tr> <td>1</td><td>enable Accessory Data Transfer</td></tr> <tr> <td>2</td><td>Data Transfer mode</td></tr> </table> <p>Note: It can be used directly as of x65 devices, no need to switch in mode 1 beforehand.</p> <table> <tr> <td>&lt;data&gt;</td><td>String type, as input parameter only available in transfer mode (see &lt;mode&gt; = 2), Accessory specific data.</td></tr> </table>	<mode>	integer type parameter, indicating the status of the Accessory Data interface	0	disable Notifications and Accessory Data Transfer	1	enable Accessory Data Transfer	2	Data Transfer mode	<data>	String type, as input parameter only available in transfer mode (see <mode> = 2), Accessory specific data.
<mode>	integer type parameter, indicating the status of the Accessory Data interface										
0	disable Notifications and Accessory Data Transfer										
1	enable Accessory Data Transfer										
2	Data Transfer mode										
<data>	String type, as input parameter only available in transfer mode (see <mode> = 2), Accessory specific data.										
Unsolicited Result Code for mode '2': <sup>^</sup> SACD: <data>											
<b>Note:</b> Unsolicited Result Code, only available if Data Transfer Mode enabled (i. e. <mode> = 1 or <mode>=2 previously entered in Write command											

### AT<sup>^</sup>SACM

AT <sup>^</sup> SACM	Output ACM (accumulated call meter) and ACMmax						
Test command AT <sup>^</sup> SACM=?	<p>Response: <sup>^</sup>SACM: (list of supported &lt;n&gt;s)</p>						
Execute command AT <sup>^</sup> SACM	<p>Response: <sup>^</sup>SACM: &lt;n&gt; , &lt;acm&gt; , &lt;acm_max&gt; OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;n&gt;</td><td>See Write command</td></tr> <tr> <td>&lt;acm&gt;</td><td>Accumulated call meter</td></tr> <tr> <td>&lt;acm_max&gt;</td><td>Maximum accumulated call meter</td></tr> </table>	<n>	See Write command	<acm>	Accumulated call meter	<acm_max>	Maximum accumulated call meter
<n>	See Write command						
<acm>	Accumulated call meter						
<acm_max>	Maximum accumulated call meter						
Write command AT <sup>^</sup> SACM=<n>	<p>Response: OK/ERROR/+CME ERROR</p> <p>Parameter:</p> <table> <tr> <td>&lt;n&gt;</td><td>Specifies whether the unsolicited result code is to be displayed</td></tr> <tr> <td>0</td><td>Suppresses the Unsolicited result code specified</td></tr> <tr> <td>1</td><td>Displays the Unsolicited result code specified</td></tr> </table>	<n>	Specifies whether the unsolicited result code is to be displayed	0	Suppresses the Unsolicited result code specified	1	Displays the Unsolicited result code specified
<n>	Specifies whether the unsolicited result code is to be displayed						
0	Suppresses the Unsolicited result code specified						
1	Displays the Unsolicited result code specified						
Unsolicited result code <sup>^</sup> SACM: <m>	<p>Parameter:</p> <table> <tr> <td>&lt;m&gt;</td><td>1 ACM limit almost reached</td></tr> <tr> <td></td><td>2 ACM greater than ACMmax</td></tr> <tr> <td></td><td>3 ACM range overflow</td></tr> </table>	<m>	1 ACM limit almost reached		2 ACM greater than ACMmax		3 ACM range overflow
<m>	1 ACM limit almost reached						
	2 ACM greater than ACMmax						
	3 ACM range overflow						



### AT^SAKA

AT^SAKA	Any Key Answer								
Test command AT^SAKA=?	Response: ^SAKA: (list of supported <a href="#">&lt;mode&gt;</a> s) OK / ERROR / +CME ERROR								
	Parameter: <table><tr><td><a href="#">&lt;mode&gt;</a></td><td>0</td><td>OFF</td><td>Any Key Answer is deactivated</td></tr><tr><td></td><td>1</td><td>ON</td><td>Any Key Answer is activated (default)</td></tr></table>	<a href="#">&lt;mode&gt;</a>	0	OFF	Any Key Answer is deactivated		1	ON	Any Key Answer is activated (default)
<a href="#">&lt;mode&gt;</a>	0	OFF	Any Key Answer is deactivated						
	1	ON	Any Key Answer is activated (default)						
Read command AT^SAKA?	Response: ^SAKA: <a href="#">&lt;mode&gt;</a> OK / ERROR / +CME ERROR The Read command returns the actual setting for the <a href="#">&lt;mode&gt;</a> parameter.								
Write command AT^SAKA=[ <a href="#">&lt;mode&gt;</a> ]	Response: OK / ERROR / +CME ERROR The Write command sets the Any Key Answer to ON (default) or OFF								

### AT^SAOF

AT^SAOF	Auto Off								
Test command AT^SAOF=?	Response: ^SAOF: (list of supported <u>&lt;mode&gt;</u> s and <u>&lt;time&gt;</u> format) OK / ERROR / +CME ERROR								
	Parameter:								
	<table><tr><td><u>&lt;mode&gt;</u></td><td>0</td><td>OFF</td><td>Auto off deactivated</td></tr><tr><td></td><td>1</td><td>ON</td><td>Auto off activated</td></tr></table>	<u>&lt;mode&gt;</u>	0	OFF	Auto off deactivated		1	ON	Auto off activated
	<u>&lt;mode&gt;</u>	0	OFF	Auto off deactivated					
	1	ON	Auto off activated						
<u>&lt;time&gt;</u> hh:mmTime for Auto Off									
Read command AT^SAOF?	Response: ^SAOF: <u>&lt;mode&gt;</u> , <u>&lt;time&gt;</u> OK / ERROR / +CME ERROR The Read command returns the actual setting for the <u>&lt;mode&gt;</u> and <u>&lt;time&gt;</u> parameter.								
Write command AT^SAOF=< <u>mode</u> >,[< <u>time</u> >]									
	Response: OK / ERROR / +CME ERRORThe Write command sets the Auto Off ON or OFF with an optional time								

**AT^SBAC**

AT^SBAC	Backup Alarm Clock								
Test command AT^SBAC=?	Response: OK / ERROR / +CME ERROR								
Read command AT^SBAC?	Response: ^SBAC : <path> OK / ERROR / +CME ERROR Parameter: <path>      Path and file name of the PD file								
Write command AT^SBAC=<action>	Response: OK / ERROR / +CME ERROR Parameter: <action>      Action to be done for backup <table> <tr><td>0</td><td>Lock PD file reading</td></tr> <tr><td>1</td><td>Unlock PD file reading</td></tr> <tr><td>2</td><td>Lock PD file writing</td></tr> <tr><td>3</td><td>Unlock PD file writing</td></tr> </table>	0	Lock PD file reading	1	Unlock PD file reading	2	Lock PD file writing	3	Unlock PD file writing
0	Lock PD file reading								
1	Unlock PD file reading								
2	Lock PD file writing								
3	Unlock PD file writing								
<b>Note:</b>	Before every read/write access the PD file has to be locked. After the read/write access has finished the PD file has to be unlocked again.								

**AT^SBIG**

AT^SBIG	Get / Set Big Letters in display
Test command AT^SBIG=?	Response: ^SBIG: ( 0 , 1 ) OK / ERROR / +CME ERROR
Read command AT^SBIG?	Response: ^SBIG : <state> OK / ERROR / +CME ERROR Parameter: <state>      0 Enabled 1 Disabled
Write command AT^SBIG=<state>	Response: OK / ERROR / +CME ERROR

**AT^SBLK**

AT^SBLK	Clear black list
Test command AT^SBLK=?	Response: OK/ERROR/+CME ERROR
Execute command AT^SBLK	Response: OK / ERROR / +CME ERROR

## AT^SBMH

AT^SBMH	Bookmark Handling				
Test command AT^SBMH=?	<p>Response: ^SBMH: (list of supported <a href="#">&lt;action&gt;s</a>), max. length of <a href="#">&lt;folder&gt;</a> OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td><a href="#">&lt;action&gt;</a></td><td> 1 overwrite existing bookmarks in root folder by imported bookmarks  2 append imported bookmarks to bookmarks in root folder  3 append imported bookmarks to existing bookmarks in folder specified by <a href="#">&lt;folder&gt;</a>.  Only for this <a href="#">&lt;action&gt;</a> is the <a href="#">&lt;folder&gt;</a> parameter required </td></tr> <tr> <td><a href="#">&lt;folder&gt;</a></td><td>string type parameter which contains the folder name where the bookmarks have to be stored</td></tr> </table>	<a href="#">&lt;action&gt;</a>	1 overwrite existing bookmarks in root folder by imported bookmarks 2 append imported bookmarks to bookmarks in root folder 3 append imported bookmarks to existing bookmarks in folder specified by <a href="#">&lt;folder&gt;</a> . Only for this <a href="#">&lt;action&gt;</a> is the <a href="#">&lt;folder&gt;</a> parameter required	<a href="#">&lt;folder&gt;</a>	string type parameter which contains the folder name where the bookmarks have to be stored
<a href="#">&lt;action&gt;</a>	1 overwrite existing bookmarks in root folder by imported bookmarks 2 append imported bookmarks to bookmarks in root folder 3 append imported bookmarks to existing bookmarks in folder specified by <a href="#">&lt;folder&gt;</a> . Only for this <a href="#">&lt;action&gt;</a> is the <a href="#">&lt;folder&gt;</a> parameter required				
<a href="#">&lt;folder&gt;</a>	string type parameter which contains the folder name where the bookmarks have to be stored				
Read command AT^SBMH?	<p>Response: OK / ERROR / +CME ERROR</p>				
<b>Note:</b> The read command causes the Browser to export the bookmarks to a file called <code>bookmark.htm</code> . This bookmark file is stored in <code>data\misc</code> folder of the file system.					
Write command AT^SBMH= <a href="#">&lt;action&gt;</a> [, <a href="#">&lt;folder&gt;</a> ]	<p>Response: OK / ERROR / +CME ERROR</p> <p>Parameter:</p> <table> <tr> <td><a href="#">&lt;action&gt;</a></td><td>See Test command</td></tr> <tr> <td><a href="#">&lt;folder&gt;</a></td><td>See Test command</td></tr> </table>	<a href="#">&lt;action&gt;</a>	See Test command	<a href="#">&lt;folder&gt;</a>	See Test command
<a href="#">&lt;action&gt;</a>	See Test command				
<a href="#">&lt;folder&gt;</a>	See Test command				
<b>Note:</b> The file name of the import file has to be <code>bookmark.htm</code> and has to be stored in the <code>data\misc</code> folder of the file system.					

AT^SBNR

AT^SBNR	Binary Read		
Test command AT^SBNR=?	Response: ^SBNR: (list of supported <type>s, (list of supported <subtype>s)) OK/ERROR/+CME ERROR		
	Parameter:		
	<type>	bmp	Bitmap; Windows bitmap format compression; 2/16/256 colours
		<subtype>	0 Logo shown permanently when registered in home network
			1 Screensaver
			2 Wallpaper
		mid	ring tones in standard MIDI format 0, without polyphony specification: <a href="http://www.midi.org">http://www.midi.org</a>
		<subtype>	0 - 8 Group1 .. Group9
			9 Startup melody
			10 Shutdown melody
		dir	Folder name
		<subtype>	1 Ringtone
			2 Ringtone EMS
			3 Ringtone ON/OFF
			4 Ringtone Slide
			5 Pictures
			6 Pictures EMS
			7 Pictures Logo
			8 Pictures Wallpaper
			9 Pictures MMS
			10 Videos
			11 Animation
			12 Colour skins
			13 JAM
			14 Java Applications
			15 Java Games
			16 Themes
			17 Avatars
			18 SMS Archive
			19 SMS Archive Inbox
			20 SMS Archive Sent
			21 SMS Archive Unsent
			22 SMS Archive Draft
			23 Camera
			24 MMS
			25 System Email
			26 MMC1 Pictures
			27 MMC1 Videos
			28 MISC
			29 System SMS
			30 System WAP
		t9d	Tegic database for t9 text recognition.
		<subtype>	0 first (and only) entry of type t9d

	<a href="#"><u>&lt;actNumber&gt;</u></a>	0	deletes entry of the current subtype
		other	current packet number
	<a href="#"><u>&lt;maxNumber&gt;</u></a>	maximum number of packets	
Write command			
AT^SBNR=< <a href="#"><u>type</u><u>subtype</u></a> >			
	Response:		
	^SBNR: < <a href="#"><u>type</u><u>subtype</u><u>maxNumber</u></a> >		
	<CR><LF>< <a href="#"><u>data</u></a>		
	^SBNR: < <a href="#"><u>type</u><u>subtype</u><u>maxNumber</u></a> >		
	<CR><LF>< <a href="#"><u>data</u></a>		
	OK/ERROR/+CME ERROR		
	Parameter:		
	<a href="#"><u>&lt;type&gt;</u></a>	see Test command	
	<a href="#"><u>&lt;subtype&gt;</u></a>	see Test command	
	<a href="#"><u>&lt;data&gt;</u></a>	data in hexadecimal form (PDU)	
	<a href="#"><u>&lt;maxNumber&gt;</u></a>	see Test command	
		See the “	
		Appendix B” for examples	

AT^SBNW

AT^SBNW	Binary Write										
Test command AT^SBNW=?	Response: ^SBNW: (list of supported <type>s, list of supported <subtype>s) OK / ERROR / +CME ERROR Parameter: <table> <tr> <td>&lt;type&gt;</td><td>See AT^SBNR</td></tr> <tr> <td>&lt;subtype&gt;</td><td>See AT^SBNR</td></tr> <tr> <td>&lt;actNumber&gt;</td><td>0 deletes entry of the current subtype</td></tr> <tr> <td></td><td>other current packet number</td></tr> <tr> <td>&lt;maxNumber&gt;</td><td>maximum number of packets</td></tr> </table>	<type>	See AT^SBNR	<subtype>	See AT^SBNR	<actNumber>	0 deletes entry of the current subtype		other current packet number	<maxNumber>	maximum number of packets
<type>	See AT^SBNR										
<subtype>	See AT^SBNR										
<actNumber>	0 deletes entry of the current subtype										
	other current packet number										
<maxNumber>	maximum number of packets										
Write command AT^SBNW=<type>,<subtype>,[<actNumber>[, <maxNumber>]]<CR> <b>PDU is given:</b> <ctrl-Z/ESC>	Response: OK / ERROR / +CME ERROR Parameter: <table> <tr> <td>&lt;type&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;subtype&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;actNumber&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;maxNumber&gt;</td><td>see Test command</td></tr> </table>	<type>	see Test command	<subtype>	see Test command	<actNumber>	see Test command	<maxNumber>	see Test command		
<type>	see Test command										
<subtype>	see Test command										
<actNumber>	see Test command										
<maxNumber>	see Test command										
<b>Notes:</b> 1) 2) 3) 4) 5) 6) 7)	It is not possible to upload data when a call is active or in progress. If a call is active the mobile responds with +CME ERROR: PHONE BUSY, the current upload sequence is aborted and all data packets are discarded. If uploaded data is not useable (e.g. wrong data format) the mobile responds with +CME ERROR: INV CHAR IN TEXT after the last packet is uploaded. To get the extended +CME ERROR response, AT+CMEE=2 has to be sent first. Otherwise the mobile only returns an ERROR. (see 1) If <actNumber> and <maxNumber> are omitted during the upload, the mobile aborts the whole input sequence for the current subtype. If <actNumber> is 0 during the upload and <maxNumber> is omitted, the mobile deletes the current record with index <subtype> Packets have to be uploaded in the right order!										
<b>Restriction</b> The maximum PDU size is 508 bytes. See “Appendix B” for examples.											

## AT^SCAM

AT^SCAM	Camera Settings																																		
Test command AT^SCAM=?	Response: OK / ERROR / +CME ERROR																																		
Read command AT^SCAM?	Response: ^SCAM: <name>,<res>,<selftimer>,<wbalance> OK / ERROR / +CME ERROR Parameter: <table> <tr> <td>&lt;name&gt;</td><td>String with Default Name of picture</td></tr> <tr> <td>&lt;res&gt;</td><td>Resolution</td></tr> <tr> <td>0</td><td>Premium (default)</td></tr> <tr> <td>1</td><td>High</td></tr> <tr> <td>2</td><td>Medium</td></tr> <tr> <td>3</td><td>Low</td></tr> <tr> <td>4</td><td>Wallpaper</td></tr> <tr> <td>&lt;selftimer&gt;</td><td> <table> <tr> <td>0</td><td>5 Seconds</td></tr> <tr> <td>1</td><td>10 Seconds</td></tr> <tr> <td>2</td><td>15 Seconds</td></tr> <tr> <td>3</td><td>20 Seconds</td></tr> <tr> <td>4</td><td>30 Seconds</td></tr> </table> </td></tr> <tr> <td>&lt;wbalance&gt;</td><td>White balance</td></tr> <tr> <td>0</td><td>Auto (default)</td></tr> <tr> <td>1</td><td>Indoor</td></tr> <tr> <td>2</td><td>Outdoor</td></tr> </table>	<name>	String with Default Name of picture	<res>	Resolution	0	Premium (default)	1	High	2	Medium	3	Low	4	Wallpaper	<selftimer>	<table> <tr> <td>0</td><td>5 Seconds</td></tr> <tr> <td>1</td><td>10 Seconds</td></tr> <tr> <td>2</td><td>15 Seconds</td></tr> <tr> <td>3</td><td>20 Seconds</td></tr> <tr> <td>4</td><td>30 Seconds</td></tr> </table>	0	5 Seconds	1	10 Seconds	2	15 Seconds	3	20 Seconds	4	30 Seconds	<wbalance>	White balance	0	Auto (default)	1	Indoor	2	Outdoor
<name>	String with Default Name of picture																																		
<res>	Resolution																																		
0	Premium (default)																																		
1	High																																		
2	Medium																																		
3	Low																																		
4	Wallpaper																																		
<selftimer>	<table> <tr> <td>0</td><td>5 Seconds</td></tr> <tr> <td>1</td><td>10 Seconds</td></tr> <tr> <td>2</td><td>15 Seconds</td></tr> <tr> <td>3</td><td>20 Seconds</td></tr> <tr> <td>4</td><td>30 Seconds</td></tr> </table>	0	5 Seconds	1	10 Seconds	2	15 Seconds	3	20 Seconds	4	30 Seconds																								
0	5 Seconds																																		
1	10 Seconds																																		
2	15 Seconds																																		
3	20 Seconds																																		
4	30 Seconds																																		
<wbalance>	White balance																																		
0	Auto (default)																																		
1	Indoor																																		
2	Outdoor																																		
Write command AT^SCAM=<name>,<res>,<selftimer>,<wbalance>	Response: OK / ERROR The Write command sets the camera settings																																		

AT^SCCM

AT^SCCM	CC Monitor
Test command AT^SCCM=?	Response: OK/ERROR/+CME ERROR
Execute command AT^SCCM	Response: ^SCCM: <version> , <General> , <Setup> , <Network> , <Battery> , <Diagnosis> , <Provider> OK/ERROR/+CME ERROR
	Parameters:
	<version>      The version string of the CC Monitor
	<General>      General: Specified as a 6-digit-hexadecimal-value
	<Setup>        Setup: Specified as a 6-digit-hexadecimal-value
	<Network>      Network: Specified as a 6-digit-hexadecimal-value
	<Battery>      Battery: Specified as a 6-digit-hexadecimal-value
	<Diagnosis>    Diagnosis: Specified as a 6-digit-hexadecimal-value
	<Provider>     Provider: Specified as a 6-digit-hexadecimal-value
<b>Note:</b> 6-digit-hexadecimal-values are specified by Simens Company itself	

AT^SCID

AT^SCID	Output card ID
Test command AT^SCID=?	Response: OK/ERROR/+CME ERROR
Execute command AT^SCID	Response: ^SCID: <cid> OK/ERROR/+CME ERROR
	Parameter: <cid>      Number of SIM card

AT^SCKA

AT^SCKA	Display SIM card status
Test command AT^SCKA=?	Response: OK/ERROR/+CME ERROR
Read command AT^SCKA?	Response: ^SCKA: <n> OK/ERROR
	Parameter:
	<n>      0      No card
	2      Card in card reader



## AT^SCKH

AT^SCKH	Get / Set Carkit/Headset stettings						
Test command AT^SCKH=?	Response: ^SCKH: ( 0-3 ) OK / ERROR / +CME ERROR						
Read command AT^SCKH?	Response: ^SCKH: 0 ,<state0> ^SCKH: 1 ,<state1> ^SCKH: 2 ,<state2> ^SCKH: 3 ,<state3> ,<minutes> OK / ERROR / +CME ERROR Parameter: <table><tr><td>&lt;statex&gt;</td><td>0 Enabled</td></tr><tr><td></td><td>1 Disabled</td></tr><tr><td>&lt;minutes&gt;</td><td>time in minutes for auto off feature</td></tr></table>	<statex>	0 Enabled		1 Disabled	<minutes>	time in minutes for auto off feature
<statex>	0 Enabled						
	1 Disabled						
<minutes>	time in minutes for auto off feature						
Write command AT^SCKH=<n>,<state>[,<minutes>]	Response: OK / ERROR / +CME ERROR Parameter: <table><tr><td>&lt;statex&gt;</td><td>See Test command</td></tr><tr><td>&lt;minutes&gt;</td><td>See Test command</td></tr></table>	<statex>	See Test command	<minutes>	See Test command		
<statex>	See Test command						
<minutes>	See Test command						
<b>Note:</b>							
0	Auto Answer in Headset						
1	Auto Answer in Carkit						
2	Loudspeaker in Carkit						
3	Loudspeaker in CarkitAuto off feature						

## AT^SCKS

AT^SCKS	Display SIM unsolicited card status					
Test command AT^SCKS=?	Response: ^SCKS: (list of supported <n>s)					
	Parameter: <table><tr><td>&lt;n&gt;</td><td>0</td><td>Suppresses the Unsolicited result codes</td></tr><tr><td></td><td>1</td><td>Displays the Unsolicited result codes</td></tr></table>	<n>	0	Suppresses the Unsolicited result codes		1
<n>	0	Suppresses the Unsolicited result codes				
	1	Displays the Unsolicited result codes				
Read command AT^SCKS?	Response: ^SCKS: <n>, <m>					
	Parameter: <table><tr><td>&lt;m&gt;</td><td>0</td><td>No card</td></tr><tr><td></td><td>1</td><td>Card in card reader</td></tr></table>	<m>	0	No card		1
<m>	0	No card				
	1	Card in card reader				
Write command AT^SCKS=<n>	Response: OK / ERROR					
	Parameter <table><tr><td>&lt;n&gt;</td><td>See Test command</td></tr></table>	<n>	See Test command			
<n>	See Test command					
Unsolicited result code ^SCKS: <m>						

**AT^SGCLASS**

AT^SGCLASS	GPRS mobile station class and store it to EE-Block
Test command AT^SGCLASS=?	Response: ^SGCLASS: (list of supported <class>s) OK/ERROR/+CME ERROR Parameter: <class>      string parameter for the GPRS mobile class B      class B CG     class C in GPRS only mode CC     class C in circuit switched only mode (lowest)
Read command AT^SGCLASS?	Response: ^SGCLASS: <class> OK/ERROR/+CME ERROR Parameter: <n>            See Test command
Write command AT^SGCLASS=[<class>]	Response: OK/ERROR/+CME ERROR Parameter: <class>       See Test command
Note. This command is equal to +CGCLASS but the new value is additionally stored in the EE-Block	

**AT^SCNI**

AT^SCNI	Output call number information
Test command AT^SCNI=?	Response: OK/ERROR/+CME ERROR
Execute command AT^SCNI	Response: ^SCNI: 1[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 2[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 3[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 4[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 5[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 6[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 7[,<cs>[,<number>,<type>]] OK/ERROR/+CME ERROR Parameter: <cs>            Call status of affiliated call number ( first parameter) 0      Call on hold 1      Active call 2      Waiting call <number>      Telephone number <type>          Type of number

## AT^SCRE

AT^SCRE	Get / Set Call Screening in display					
Test command AT^SCRE=?	Response: ^SCRE: (list of supported <a href="#">&lt;n&gt;s</a> ) OK / ERROR / +CME ERROR					
Read command AT^SCRE?	Response: SCRE: <a href="#">&lt;n&gt;</a> OK / ERROR / +CME ERROR					
	Parameter:					
	<table><tr><td><a href="#">&lt;n&gt;</a></td><td>0</td><td>Disabled</td></tr><tr><td></td><td>X</td><td>Enabled only for phone group X</td></tr></table>	<a href="#">&lt;n&gt;</a>	0	Disabled		X
<a href="#">&lt;n&gt;</a>	0	Disabled				
	X	Enabled only for phone group X				
Write command AT^SCRE= <a href="#">&lt;n&gt;</a>	Response: OK / ERROR / +CME ERROR					

## AT^SDBR

AT^SDBR	Database Read																						
Test command AT^SDBR=?	Response: ^SDBR: (list of supported <index>s) OK/ERROR/+CME ERROR Parameter: <table border="1"> <tr> <td>&lt;index&gt;</td><td>Location number stored in the alphabetically-sorted addressbook</td></tr> </table>	<index>	Location number stored in the alphabetically-sorted addressbook																				
<index>	Location number stored in the alphabetically-sorted addressbook																						
Write command AT^SDBR=<index1>[,<number typ>]	Response: [ ^SDBR: <number typ>, <number>, <typ>, <text>[<CR><LF> ^SDBR: <number typ>, <number>, <typ>, <text>[...]]] OK/ERROR/+CME ERROR Parameter: <table border="1"> <tr> <td>&lt;number typ&gt;</td><td>Number type</td></tr> <tr> <td>0</td><td>phone number 'HOME'</td></tr> <tr> <td>1</td><td>phone number 'OFFICE'</td></tr> <tr> <td>2</td><td>phone number 'MOBILE'</td></tr> <tr> <td>3</td><td>phone number 'FAX'</td></tr> <tr> <td>4</td><td>phone number 'MOBILE OFFICE'</td></tr> <tr> <td>5</td><td>phone number 'FAX OFFICE'</td></tr> <tr> <td>&lt;number&gt;</td><td>Telephone number</td></tr> <tr> <td>&lt;typ&gt;</td><td>Type of number</td></tr> <tr> <td>&lt;text&gt;</td><td>Text corresponding to the telephone number</td></tr> <tr> <td colspan="2">&lt;text&gt; depends on AT+CSCS.</td></tr> </table>	<number typ>	Number type	0	phone number 'HOME'	1	phone number 'OFFICE'	2	phone number 'MOBILE'	3	phone number 'FAX'	4	phone number 'MOBILE OFFICE'	5	phone number 'FAX OFFICE'	<number>	Telephone number	<typ>	Type of number	<text>	Text corresponding to the telephone number	<text> depends on AT+CSCS.	
<number typ>	Number type																						
0	phone number 'HOME'																						
1	phone number 'OFFICE'																						
2	phone number 'MOBILE'																						
3	phone number 'FAX'																						
4	phone number 'MOBILE OFFICE'																						
5	phone number 'FAX OFFICE'																						
<number>	Telephone number																						
<typ>	Type of number																						
<text>	Text corresponding to the telephone number																						
<text> depends on AT+CSCS.																							
<b>Note:</b> In the <text> field, special characters like the following may appear: `" ` (0x22), `@ ` (0x00), `ö ` (0x08), `Ö ` (0x5c).  (See also AT+CPBW and Appendix A: "How to use special characters in certain commands ( e. g., AT+CPBW")																							

**AT^SDLD**

AT^SDLD	Delete the "last number redial" memory
Test command AT^SDLD=?	Response: OK / ERROR / +CME ERROR
Execute command AT^SDLD	Response: OK / ERROR / +CME ERROR

**AT^SDLY**

AT^SDLY	Delay Command
Test command AT^SDLY=?	Response: OK / ERROR / +CME ERROR
Write command AT^SDLY =<n>	Response: OK / ERROR / +CME ERROR
	Parameter: <n> Time (in tenth of second) until OK is returned e.g. <n>= 10 corresponds to 1 second
<b>Note:</b> This command implements a delay for the specified time.	

**AT^SGAUTH**

AT^SGAUTH	Select Type of Authentication for PPP connection
Test command AT^SGAUTH=?	Response: ^SGAUTH: (list of supported <auth>s) ,(max supported string length for username),(max supported string length for password) OK / ERROR / +CME ERROR
	Parameter: <auth> indicates type of supported authentication 0 none 1 PAP 2 CHAP 3 PAP and CHAP
Read command AT^SGAUTH?	Response: ^SGAUTH: <auth> OK / ERROR / +CME ERROR
	Parameter: <auth> See Test command
Write command AT^SGAUTH =<auth>,[username] [,password]	Response: OK / ERROR / +CME ERROR
	Parameter: <auth> See Test command <username> Username used for authentication <password> Password to be used for authentication

## AT^SGDCONT

AT^SGDCONT	Define PDP Context												
Test command AT^SGDCONT=?	Response: ^SGDCONT: (range of supported <cid>s), <PDP_type>,,, (list of supported <d_comp>s), (list of supported <h_comp>s) [ <CR><LF> ^SGDCONT: (range of supported <cid>s), <PDP_type>,,, (list of supported <d_comp>s), (list of supported <h_comp>s) [ ... ] OK/ERROR/+CME ERROR Parameter: <table> <tr> <td>&lt;cid&gt;</td><td>numeric PDP Context Identifier 0 .. 4</td></tr> <tr> <td></td><td><b>Note:</b> The default context is not affected by the ATZ and AT&amp;F commands</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>string parameter of Packet Data Protocol type PPP      Type PPT IP        Type IP</td></tr> <tr> <td>&lt;d_comp&gt;</td><td>numeric parameter that controls PDP data compression 0        off</td></tr> <tr> <td>&lt;h_comp&gt;</td><td>numeric parameter that controls PDP header compression 0        off</td></tr> </table>	<cid>	numeric PDP Context Identifier 0 .. 4		<b>Note:</b> The default context is not affected by the ATZ and AT&F commands	<PDP_type>	string parameter of Packet Data Protocol type PPP      Type PPT IP        Type IP	<d_comp>	numeric parameter that controls PDP data compression 0        off	<h_comp>	numeric parameter that controls PDP header compression 0        off		
<cid>	numeric PDP Context Identifier 0 .. 4												
	<b>Note:</b> The default context is not affected by the ATZ and AT&F commands												
<PDP_type>	string parameter of Packet Data Protocol type PPP      Type PPT IP        Type IP												
<d_comp>	numeric parameter that controls PDP data compression 0        off												
<h_comp>	numeric parameter that controls PDP header compression 0        off												
Read command AT^SGDCONT?	Response: ^SGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <d_comp>, <h_comp> [ <CR><LF> ^SGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <d_comp>, <h_comp> [ ... ] OK/ERROR/+CME ERROR Parameter: <table> <tr> <td>&lt;cid&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;APN&gt;</td><td>string parameter for Access Point Name</td></tr> <tr> <td>&lt;PDP_addr&gt;</td><td>string parameter in IP V4 address notification</td></tr> <tr> <td>&lt;d_comp&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;h_comp&gt;</td><td>See Test command</td></tr> </table>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	string parameter for Access Point Name	<PDP_addr>	string parameter in IP V4 address notification	<d_comp>	See Test command	<h_comp>	See Test command
<cid>	See Test command												
<PDP_type>	See Test command												
<APN>	string parameter for Access Point Name												
<PDP_addr>	string parameter in IP V4 address notification												
<d_comp>	See Test command												
<h_comp>	See Test command												
Write command AT^SGDCONT=[<cid> [,<PDP_type> [,<APN> [,<PDP_addr> ]]]]	Response: OK/ERROR/+CME ERROR Parameter <table> <tr> <td>&lt;cid&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See Test command</td></tr> <tr> <td>&lt;APN&gt;</td><td>See Read command</td></tr> <tr> <td>&lt;PDP_addr&gt;</td><td>See Read command</td></tr> </table>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	See Read command	<PDP_addr>	See Read command				
<cid>	See Test command												
<PDP_type>	See Test command												
<APN>	See Read command												
<PDP_addr>	See Read command												

**AT^SGDI**

AT^SGDI	Get Device Info
Test command AT^SGDI=?	Response: ^SGDI: (list of supported <capability>s) OK/ERROR/+CME Error Parameter: <capability>      Name of the device BBERRY      Blackberry
Write command AT^SGDI =<capability>	Response: ^SGDI: <value> OK/ERROR/+CME Error Parameter: <value>              The capability value: PROSUMER or ENTERPRISE <capability>        See Test command

**AT^SGDV**

AT^SGDV	GPRS data volume
Test command AT^SGDV=?	Response: ^SGDV: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter: <n>                    0      Reset GPRS data volume statistics 1      Get total amount of data (mobile)
Read command AT^SGDV?	Response : ^SGDV: <cid> , <down> , <up> [ <CR><LF> ^SGDV: <cid> , <down> , <up> [ . . ] ] OK/ERROR/+CME ERROR Parameter: <cid>                The context ID <down>              count of bytes of downlink <up>                 count of bytes of uplink
Write command AT^SGDV=<n>	Response: OK/ERROR/+CME ERROR Parameter: <n>                    See Test command

## AT^SGMR

AT^SGMR	Output the GSM telephone software info																
Test command: AT^SGMR=?	Response: OK																
Execute command: AT^SGMR	Response: <version>, <builder>, <ReconfTime>, <BuildTime> , <BuildDate>, <BSVersion>, <BSRelease>, <BuildLocation> Parameter: <table> <tr> <td>&lt;version&gt;</td><td>Version of the telephone software</td></tr> <tr> <td>&lt;builder&gt;</td><td>Account used while compiling</td></tr> <tr> <td>&lt;ReconfTime&gt;</td><td>Time stamp of last 'reconfigure' of Configuration</td></tr> <tr> <td>&lt;BuildTime&gt;</td><td>Time of build</td></tr> <tr> <td>&lt;BuildDate&gt;</td><td>Date of Build</td></tr> <tr> <td>&lt;BSVersion&gt;</td><td>Baseline version</td></tr> <tr> <td>&lt;BSRelease&gt;</td><td>Baseline release</td></tr> <tr> <td>&lt;BuildLocation&gt;</td><td>DBMS used for build</td></tr> </table>	<version>	Version of the telephone software	<builder>	Account used while compiling	<ReconfTime>	Time stamp of last 'reconfigure' of Configuration	<BuildTime>	Time of build	<BuildDate>	Date of Build	<BSVersion>	Baseline version	<BSRelease>	Baseline release	<BuildLocation>	DBMS used for build
<version>	Version of the telephone software																
<builder>	Account used while compiling																
<ReconfTime>	Time stamp of last 'reconfigure' of Configuration																
<BuildTime>	Time of build																
<BuildDate>	Date of Build																
<BSVersion>	Baseline version																
<BSRelease>	Baseline release																
<BuildLocation>	DBMS used for build																
<b>Note:</b> This information is available only if the BFC-bus is open																	

## AT^SGND

AT^SGND	Get phone number associated date														
Test command AT^SGND=?	Response OK / ERROR														
Write command AT^SGND=<number>	Response: ^SGND: <name>, [<IDType>, <ID>, [<CR><LF><IDType>, <ID>,[...]]] OK / ERROR Parameter: <table> <tr> <td>&lt;number&gt;</td><td>The phone number the data is requested for.</td></tr> <tr> <td>&lt;name&gt;</td><td>The last name associated (address book) or text field (SIM phone book).</td></tr> <tr> <td>&lt;IDType&gt;</td><td> <table> <tr> <td>rmcLuid</td><td>luid usable in Irmc GET</td></tr> <tr> <td>SyncMLLuid</td><td>luid used for SyncML</td></tr> <tr> <td>SM</td><td>SIM phonebook</td></tr> </table> </td></tr> <tr> <td>&lt;ID&gt;</td><td>The luid ID or phonebook index.</td></tr> </table>	<number>	The phone number the data is requested for.	<name>	The last name associated (address book) or text field (SIM phone book).	<IDType>	<table> <tr> <td>rmcLuid</td><td>luid usable in Irmc GET</td></tr> <tr> <td>SyncMLLuid</td><td>luid used for SyncML</td></tr> <tr> <td>SM</td><td>SIM phonebook</td></tr> </table>	rmcLuid	luid usable in Irmc GET	SyncMLLuid	luid used for SyncML	SM	SIM phonebook	<ID>	The luid ID or phonebook index.
<number>	The phone number the data is requested for.														
<name>	The last name associated (address book) or text field (SIM phone book).														
<IDType>	<table> <tr> <td>rmcLuid</td><td>luid usable in Irmc GET</td></tr> <tr> <td>SyncMLLuid</td><td>luid used for SyncML</td></tr> <tr> <td>SM</td><td>SIM phonebook</td></tr> </table>	rmcLuid	luid usable in Irmc GET	SyncMLLuid	luid used for SyncML	SM	SIM phonebook								
rmcLuid	luid usable in Irmc GET														
SyncMLLuid	luid used for SyncML														
SM	SIM phonebook														
<ID>	The luid ID or phonebook index.														

AT^SHFR

AT^SHFR	Set Handsfree Loudspeaker on/off												
Test command AT^SHFR=?	<div>Response: ^SHFR: (list of supported &lt;mode&gt;s, &lt;ind&gt;s) OK / ERROR / +CME ERROR</div> <div>Parameter: <table><tr><td>&lt;mode&gt;</td><td>0</td><td>Disable Handsfree Loudspeaker</td></tr><tr><td></td><td>1</td><td>Enable Handsfree Loudspeaker (MMI confirmation necessary per key press only possible during an established call)</td></tr><tr><td>&lt;ind&gt;</td><td>0</td><td>Disable Handsfree Loudspeaker events</td></tr><tr><td></td><td>1</td><td>Enable Handsfree Loudspeaker events</td></tr></table></div>	<mode>	0	Disable Handsfree Loudspeaker		1	Enable Handsfree Loudspeaker (MMI confirmation necessary per key press only possible during an established call)	<ind>	0	Disable Handsfree Loudspeaker events		1	Enable Handsfree Loudspeaker events
<mode>	0	Disable Handsfree Loudspeaker											
	1	Enable Handsfree Loudspeaker (MMI confirmation necessary per key press only possible during an established call)											
<ind>	0	Disable Handsfree Loudspeaker events											
	1	Enable Handsfree Loudspeaker events											
Read command AT^SHFR?	<div>Response: ^SHFR: &lt;mode&gt; , &lt;ind&gt; OK / ERROR / +CME ERROR</div> <div>Parameter: <table><tr><td>&lt;mode&gt;</td><td>See Test command</td></tr><tr><td>&lt;ind&gt;</td><td>See Test command</td></tr></table></div>	<mode>	See Test command	<ind>	See Test command								
<mode>	See Test command												
<ind>	See Test command												
Write command AT^SHFR=[<mode>][,<ind>]	<div>Response OK / ERROR / +CME ERROR</div> <div>Parameter <table><tr><td>&lt;mode&gt;</td><td>See Test command</td></tr><tr><td>&lt;ind&gt;</td><td>See Test command</td></tr></table></div>	<mode>	See Test command	<ind>	See Test command								
<mode>	See Test command												
<ind>	See Test command												
Unsolicited result code ^SHFR: <mode>													



### AT^SICO

AT^SICO	Icon control																		
Test command AT^SICO=?	Response: ^SICO: (list of supported <n>s),( list of supported <m>s) OK/ERROR/+CME ERROR																		
Write command AT^SICO=<n>,<m>	<div>Response for &lt;m&gt; = 0 and 1</div> <div>OK/ERROR/+CME ERROR</div> <div>Response for &lt;m&gt; = 2</div> <div>^SICO: &lt;s&gt;</div> <div>OK</div> <div>Parameter:</div> <table> <tr> <td>&lt;n&gt;</td><td>Type of icon</td></tr> <tr> <td>0</td><td>GPS icon</td></tr> <tr> <td>&lt;m&gt;</td><td>hide icon</td></tr> <tr> <td>0</td><td>hide icon</td></tr> <tr> <td>1</td><td>show icon</td></tr> <tr> <td>2</td><td>query icon status</td></tr> <tr> <td>&lt;s&gt;</td><td>Status</td></tr> <tr> <td>0</td><td>icon hidden</td></tr> <tr> <td>1</td><td>icon shown</td></tr> </table>	<n>	Type of icon	0	GPS icon	<m>	hide icon	0	hide icon	1	show icon	2	query icon status	<s>	Status	0	icon hidden	1	icon shown
<n>	Type of icon																		
0	GPS icon																		
<m>	hide icon																		
0	hide icon																		
1	show icon																		
2	query icon status																		
<s>	Status																		
0	icon hidden																		
1	icon shown																		

### AT^SIFS

AT^SIFS	Query InterFace Setting
Test command AT^SIFS=?	Response: OK/ERROR/+CME ERROR
Exec command AT^SIFS	<div>Response:</div> <div>^SIFS: &lt;medium&gt;</div> <div>OK/ERROR/+CME ERROR</div> <div>Parameter:</div> <div>&lt;medium&gt; possible external interfaces.</div> <div>Wire</div> <div>USB</div> <div>IrDA</div> <div>BT</div>

### AT^SILL

AT^SILL	Get / Set Illumination
Test command AT^SILL=?	Response: ^SILL: (list of supported <n>s) OK/ERROR/+CME ERROR
Read command AT^SILL?	<div>Response:</div> <div>^SILL: &lt;n&gt;</div> <div>OK/ERROR/+CME ERROR</div> <div>Parameter:</div> <div>&lt;n&gt; Illumination setting</div>
Write command AT^SILL=<n>	Response: OK/ERROR/+CME ERROR

**AT^SINT**

AT^SINT	Set Info Tones												
Test command AT^SINT=?	Response: ^SINT: (list of supported <a href="#">mode</a> s) OK / ERROR / +CME ERROR												
	Parameter: <table><tr><td><a href="#">mode</a></td><td>0</td><td>OFF</td><td>Info Tones are deactivated</td></tr><tr><td></td><td>1</td><td>ON</td><td>Info Tones are activated (default)</td></tr><tr><td></td><td>2</td><td>Extended</td><td>Info Tones are set to extended mode</td></tr></table>	<a href="#">mode</a>	0	OFF	Info Tones are deactivated		1	ON	Info Tones are activated (default)		2	Extended	Info Tones are set to extended mode
<a href="#">mode</a>	0	OFF	Info Tones are deactivated										
	1	ON	Info Tones are activated (default)										
	2	Extended	Info Tones are set to extended mode										
Read command AT^SINT?	Response: ^SINT: <a href="#">mode</a> OK The Read command returns the current setting of the <a href="#">mode</a> parameter.												
Write command AT^SINT=[ <a href="#">mode</a> ]	Response: OK / ERROR / +CME ERROR The Write command sets the Aout Time to ON (default) or OFF												

**AT^SJAV**

AT^SJAV	Install JAVA application
Test command AT^SJAV=?	Response: OK / ERROR / +CME ERROR
Write command AT^SJAV=< <a href="#">file</a> >	Response: OK / ERROR / +CME ERROR
	Parameter: <a href="#">file</a> Complete path and filename of the installation file to be installed.
<b>Note:</b> Depending on the JAVA application to be installed the installation may request user inputs at the MMI. This behaviour can not be influenced by the mobile.	

**AT^SKPD**

AT^SKPD	Keypad control single key
Test command AT^SKPD=?	Response: OK / ERROR / +CME ERROR
Write command AT^SKPD =< <a href="#">key</a> >	Response: OK / ERROR / +CME ERROR
	Parameter: <a href="#">key</a> The key in ASCII integer format (e.g. 48 for key '0') For a list of keys implemented for AT^SKPD see section 6.6

### AT^SKYT

AT^SKYT	Key Tones												
Test command AT^SKYT=?	Response: ^SKYT: (list of supported <a href="#">&lt;mode&gt;s</a> ) OK/ERROR/+CME ERROR Parameter: <table><tr><td><a href="#">&lt;mode&gt;</a></td><td>0</td><td>Silent</td><td>Key Tones are silent</td></tr><tr><td></td><td>1</td><td>Click</td><td>Key Tones are click (default)</td></tr><tr><td></td><td>2</td><td>Tones</td><td>Key Tones are tones</td></tr></table>	<a href="#">&lt;mode&gt;</a>	0	Silent	Key Tones are silent		1	Click	Key Tones are click (default)		2	Tones	Key Tones are tones
<a href="#">&lt;mode&gt;</a>	0	Silent	Key Tones are silent										
	1	Click	Key Tones are click (default)										
	2	Tones	Key Tones are tones										
Read command AT^SKYT?	Response: ^SKYT: <a href="#">&lt;mode&gt;</a> OK/ERROR/+CME ERROR The Read command returns the current setting of the <a href="#">&lt;mode&gt;</a> parameter.												
Write command AT^SKYT=[ <a href="#">&lt;mode&gt;</a> ]	Response: OK/ERROR/+CME ERROR												

### AT^SLCD

AT^SLCD	Last call duration
Test command AT^SLCD=?	Response: OK/ERROR/+CME ERROR
Execute command AT^SLCD	Response: ^SLCD: <a href="#">&lt;duration&gt;</a> OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;duration&gt;</a> Duration of last or active call in format hh:mm:ss

AT^SLCK

AT^SLCK	Switch locks (including user-defined locks) on and off																																								
Test command AT^SLCK=?	Response: ^SLCK: (list of supported <fac>s) OK/ERROR/+CME ERROR Parameter: <fac>      See Test command of AT+CLCK																																								
Write command AT^SLCK = <fac>, <mode> [, <passwd>[, <class>]]	Response: <b>If &lt;mode&gt;=2 and command is successful</b> ^SLCK: <status>[, <class1>[<CR><LF> ^SLCK: <status>, class2....]] OK/ERROR/+CME ERROR Parameter: <table border="1"> <tr> <td>&lt;fac&gt;</td><td>See Test command of AT+CLCK</td></tr> <tr> <td>&lt;mode&gt;</td><td></td></tr> <tr> <td></td><td>0      Cancels lock</td></tr> <tr> <td></td><td>1      Activates lock</td></tr> <tr> <td></td><td>2      Queries lock status</td></tr> <tr> <td>&lt;passwd&gt;</td><td>Password</td></tr> <tr> <td>&lt;class&gt;</td><td></td></tr> <tr> <td></td><td>1      Voice</td></tr> <tr> <td></td><td>2      Data</td></tr> <tr> <td></td><td>4      Fax</td></tr> <tr> <td></td><td>7      Voice, Data and FAX (default)</td></tr> <tr> <td></td><td>8      SMS</td></tr> <tr> <td></td><td>16     data circuit sync</td></tr> <tr> <td></td><td>32     data circuit async</td></tr> <tr> <td></td><td>64     dedicated packet access</td></tr> <tr> <td></td><td>128    dedicated PAD access</td></tr> <tr> <td></td><td>X      combination of some of the above classes, e.g. 255          regroup all classes and 5 regroup Voice and FAX</td></tr> <tr> <td>&lt;status&gt;</td><td></td></tr> <tr> <td></td><td>0      Off</td></tr> <tr> <td></td><td>1      On</td></tr> </table>	<fac>	See Test command of AT+CLCK	<mode>			0      Cancels lock		1      Activates lock		2      Queries lock status	<passwd>	Password	<class>			1      Voice		2      Data		4      Fax		7      Voice, Data and FAX (default)		8      SMS		16     data circuit sync		32     data circuit async		64     dedicated packet access		128    dedicated PAD access		X      combination of some of the above classes, e.g. 255 regroup all classes and 5 regroup Voice and FAX	<status>			0      Off		1      On
<fac>	See Test command of AT+CLCK																																								
<mode>																																									
	0      Cancels lock																																								
	1      Activates lock																																								
	2      Queries lock status																																								
<passwd>	Password																																								
<class>																																									
	1      Voice																																								
	2      Data																																								
	4      Fax																																								
	7      Voice, Data and FAX (default)																																								
	8      SMS																																								
	16     data circuit sync																																								
	32     data circuit async																																								
	64     dedicated packet access																																								
	128    dedicated PAD access																																								
	X      combination of some of the above classes, e.g. 255 regroup all classes and 5 regroup Voice and FAX																																								
<status>																																									
	0      Off																																								
	1      On																																								

### AT^SLNG

AT^SLNG	Language settings
Test command AT^SLNG=?	Response: ^SLNG: (list of supported languages <lng>s) Parameter: <lng> Integer; language coded according to GSM 03.38 ( see [5]) or mobile-specific language (>100)
Read command AT^SLNG?	Response: ^SLNG: <lng>
Write command AT^SLNG=<lng>	Response: OK / ERROR / +CME ERROR

### AT^SMDR

AT^SMDR	Melody Duration
Test command AT^SMDR=?	Response: ^SMDR: (<index>s) , <time> OK Parameter: <index> Available indexes. <time> Integer value for the duration time of a Melody
<b>Note:</b> actually only melody duration index 0 is available	
Read command AT^SMDR?	Response: ^SMDR: <index> , <time> <CR><LF> ^SMDR: <index> , <time> <CR><LF> [[.]] OK / ERROR / +CMS ERROR
Write command AT^SMDR=<index> , <time>	Response: OK / ERROR / +CME ERROR

**AT^SMEL**

AT^SMEL	Melody values
Test command AT^SMEL=?	Response: ^SMEL:(< <a href="#">purpose</a> >s),(< <a href="#">mode</a> >s),(< <a href="#">volume</a> >s) OK Parameter: < <a href="#">purpose</a> >    values see section 5.2 "Enum E_AuMa_Purpose" < <a href="#">mode</a> >        0    OFF            Melody for the purpose off 1    ON            Melody for the purpose on 2    BEEP          only beep for the purpose 3    Ascend        Ascending Melody volume for < <a href="#">purpose</a> > < <a href="#">volume</a> >       manufacturer specific volume from 0 to 5
Read command AT^SMEL?	Response: ^SMEL:< <a href="#">purpose</a> >,< <a href="#">mode</a> >,< <a href="#">volume</a> > <CR><LF> ^SMEL:< <a href="#">purpose</a> >,< <a href="#">mode</a> >,< <a href="#">volume</a> > <CR><LF> [[..]] OK/ERROR/+CME ERROR Parameter: < <a href="#">purpose</a> >    See Test Command < <a href="#">mode</a> >        See Test Command < <a href="#">volume</a> >      See Test Command
Write command AT^SMEL = < <a href="#">purpose</a> >[,< <a href="#">mode</a> >][,< <a href="#">volume</a> >]	Response: OK/ERROR/+CME ERROR Default value for mode is ON and default value for volume is 3
Execute command AT^SMEL	Response: ^SMEL:< <a href="#">purpose</a> >,( < <a href="#">mode</a> >s) , ( < <a href="#">volume</a> >s) <CR><LF> ^SMEL:< <a href="#">purpose</a> >,( < <a href="#">mode</a> >s) , ( < <a href="#">volume</a> >s) <CR><LF> [[..]] OK/ERROR/+CME ERROR Parameter: < <a href="#">purpose</a> >    See Test Command < <a href="#">mode</a> >        See Test Command < <a href="#">volume</a> >      See Test Command
<b>Note:</b> The Execute command delivers the available range of < <a href="#">mode</a> > and < <a href="#">volume</a> > for every < <a href="#">purpose</a> >.	

## AT^SMGL

AT^SMGL	List SMS (without status change from <i>unread</i> to <i>read</i> ) Revision according to 3GPP TS 27.005															
Test command AT^SMGL=?	Response ^SMGL: (list of supported <a href="#">&lt;stat&gt;</a> s) Parameter: <a href="#">&lt;stat&gt;</a> <table><tr><td>0</td><td>REC UNREAD</td><td>received unread messages (default)</td></tr><tr><td>1</td><td>REC READ</td><td>received read messages</td></tr><tr><td>2</td><td>STO UNSENT</td><td>stored unsent messages</td></tr><tr><td>3</td><td>STO SENT</td><td>stored sent messages</td></tr><tr><td>4</td><td>ALL</td><td>all messages</td></tr></table>	0	REC UNREAD	received unread messages (default)	1	REC READ	received read messages	2	STO UNSENT	stored unsent messages	3	STO SENT	stored sent messages	4	ALL	all messages
0	REC UNREAD	received unread messages (default)														
1	REC READ	received read messages														
2	STO UNSENT	stored unsent messages														
3	STO SENT	stored sent messages														
4	ALL	all messages														
Write command AT^SMGL [=< <a href="#">stat</a> >]	Response: <b>If PDU mode (+CMGF=0) and command is successful:</b> ^SMGL: <a href="#">&lt;index&gt;</a> , <a href="#">&lt;stat&gt;</a> , [ <a href="#">&lt;alpha&gt;</a> ], <a href="#">&lt;length&gt;</a> <CR><LF>< <a href="#">pdu</a> > [<CR><LF>^SMGL: <a href="#">&lt;index&gt;</a> , <a href="#">&lt;stat&gt;</a> , [ <a href="#">&lt;alpha&gt;</a> ], <a href="#">&lt;length&gt;</a> <CR><LF>< <a href="#">pdu</a> > [...]] Parameter: <a href="#">&lt;stat&gt;</a> See Test command <a href="#">&lt;pdu&gt;</a> The PDU begins with the service-center address (according to GSM 04.11, see [9]), followed by the TPDU according to GSM 03.40 (see [3]) in hexadecimal format otherwise: +CMS ERROR: <a href="#">&lt;err&gt;</a>															

**AT^SMGO**

AT^SMGO	SMS overflow indicator
Test command AT^SMGO=?	Response: ^SMGO: (list of supported <n>s) OK/ERROR/+CMS ERROR Parameter: <n>            0    Disable 1    Enable
Read command AT^SMGO?	Response: ^SMGO: <n>,<mode> OK/ERROR/+CMS ERROR Parameter: <n>            See Test command <mode>        0    Space still available 1    SMS storage full (The "SM" and "ME" storages are full, i. e. the "MT" storage is full. See AT+CPMS command.) 2    A message is queued in the (network-based) Message Service Centre (MSC) to be forwarded/delivered to the mobile phone (e.g., a Class 2 message is queued but the "SM" storage is full; or any kind of message is queued but every storage is full )
Write command AT^SMGO=<n>	Response OK/ERROR/+CMS ERROR Parameter: <n>            See Test command <mode>        See Test command
Unsolicited result code: ^SMGO: <mode>	Parameter: <mode>        See Test command
<b>Note</b> Incoming short messages with message class 2 (refer <dcs> GSM 03.38, see [5]) will be stored in "SM" storage only. Therefore, AT^SMGO: 2 indication can occur without a preceding AT^SMGO: 1 indication.	



## AT^SMGR

AT^SMGR	Read SMS (without status change from <i>unread</i> to <i>read</i> ) <b>Syntax identical with</b> AT+CMGR															
Test command AT^SMGR=?	Response OK/ERROR/+CME ERROR															
Write command AT^SMGR=<index>	<p>Response:</p> <p><b>If PDU mode (+CMGF=0) and command are successful:</b></p> <p>AT^SMGR: &lt;stat&gt; , [ &lt;alpha&gt; ] , &lt;length&gt; &lt;CR&gt; &lt;LF&gt; &lt;pdu&gt;</p> <p>Parameter:</p> <p>&lt;pdu&gt;      The PDU begins with the service-center address (according to GSM 04.11, see [9]), followed by the TPDU according to GSM 03.40 (see [3]) in hexadecimal format otherwise: +CMS ERROR: &lt;err&gt;</p> <p>&lt;stat&gt;</p> <table><tr><td>0</td><td>REC UNREAD</td><td>received unread messages (default)</td></tr><tr><td>1</td><td>REC READ</td><td>received read messages</td></tr><tr><td>2</td><td>STO UNSENT</td><td>stored unsent messages</td></tr><tr><td>3</td><td>STO SENT</td><td>stored sent messages</td></tr><tr><td>4</td><td>ALL</td><td>all messages</td></tr></table> <p>&lt;length&gt;      See the AT+CMGL command otherwise: +CMS ERROR: &lt;err&gt;</p> <p>&lt;index&gt;      Index of message in memory selected by AT+CPMS</p>	0	REC UNREAD	received unread messages (default)	1	REC READ	received read messages	2	STO UNSENT	stored unsent messages	3	STO SENT	stored sent messages	4	ALL	all messages
0	REC UNREAD	received unread messages (default)														
1	REC READ	received read messages														
2	STO UNSENT	stored unsent messages														
3	STO SENT	stored sent messages														
4	ALL	all messages														

## AT^SMIB

AT^SMIB	Minute Beep								
Test command AT^SMIB=?	<div>Response: ^SMIB: (list of supported <a href="#">mode</a>&gt;s) OK / ERROR / +CME ERROR</div> <div>Parameter: <table><tr><td><a href="#">mode</a>&gt;</td><td>0</td><td>OFF</td><td>Minute Beep is deactivated</td></tr><tr><td></td><td><u>1</u></td><td><u>ON</u></td><td>Minute Beep is activated</td></tr></table></div>	<a href="#">mode</a> >	0	OFF	Minute Beep is deactivated		<u>1</u>	<u>ON</u>	Minute Beep is activated
<a href="#">mode</a> >	0	OFF	Minute Beep is deactivated						
	<u>1</u>	<u>ON</u>	Minute Beep is activated						
Read command AT^SMIB?	<div>Response: ^SMIB: <a href="#">mode</a>&gt; OK / ERROR / +CME ERROR The Read command returns the actual setting for the <a href="#">mode</a>&gt; parameter.</div> <div>Parameter: <a href="#">mode</a>&gt; See Test command</div>								
Write command AT^SMIB=[ <a href="#">mode</a> >]	<div>Response: OK / ERROR / +CME ERROR The Write command sets the Aout Time ON (default) or OFF</div> <div>Parameter: <a href="#">mode</a>&gt; See Test command</div>								

AT^SMPL

AT^SMPL	Media Player URC
Test command AT^SMPL=?	Response: ^SMPL: (list of supported <n>s) OK / ERROR / +CME ERROR Parameter: <n>            0    Disable the unsolicited result code from media player 1    Enable the unsolicited result code from media player
Read command AT^SMPL?	Response: ^SMPL: <n> OK / ERROR / +CME ERROR Parameter: <n>                      See Test command
Write command AT^SMPL =<n>	Response: OK / ERROR / +CME ERROR Parameter: <n>                      See Test command
Unsolicited result code ^SMPL: <type>, <info>	Parameter: <info>            The value of the media player depending on <type>. <type>            1    <info> is a string holding the title string 2    <info> has a number indication the play status (play, stop, etc) 3    <info> hold the position data of current title in seconds 4    <info> hold info if audio (0) or video (1) is currently playing

AT^SMSO

AT^SMSO	Switch device off
Test command AT^SMSO=?	Response: OK / ERROR / +CME ERROR
Execute command AT^SMSO	Response: ^SMSO: MS OFF    Device switches off OK
Write command AT^SMSO=<mode>	Parameter: <mode>            0    Response : ^SMSO: MS OFF OK 1    Response: ^SMSO: MS RESET OK

## AT^SNFS

AT^SNFS	Select NF hardware
Test command AT^SNFS=?	Response: ^SNFS: (list of supported <dev>s) OK / ERROR / +CME ERROR Parameter: <dev>            0    Cell phone mode 1    Handsfree 2    Bluetooth 3    Audio Stream
Read command AT^SNFS?	Response: ^SNFS: <dev> OK / ERROR / +CME ERROR Parameter: <dev>            See Test command and additionally 4    Idle
<b>Note:</b> Volume should be set to "0" temporarily before NF hardware is changed (see AT^SNFV command).	
Write command AT^SNFS=<dev>	Response: OK / ERROR / +CME ERROR Parameter: <dev>            See Test command
<b>Note:</b> NF hardware can only be selected when a Wire or Bluetooth connections exists.	

## AT^SNFV

AT^SNFV	Set the volume
Test command AT^SNFV=?	Response: ^SNFV: (list of supported <vol>s) Parameter: <vol>            Value range of volume (0 to 4) 0    Low volume 1 2 3 4    max. volume (approx. 3 dB/level)
Read command AT^SNFV?	Response: ^SNFV: <vol> Parameter: <vol>            See Test command
Write command AT^SNFV=<vol>	Response: OK / ERROR / +CME ERROR Parameter: <vol>            See Test command

AT^SOBX

AT^SOBX	Set OBEX Debug Level
Write command AT^SOBX=<level>	Response: OK/ERROR/+CME ERROR
	Parameter: <level> 0 .. 127 enables a specific level of tracing for OBEX debug information.

AT^SPBA

AT^SPBA	Query active phonebook book
Test command AT^SPBA=?	Response: ^SPBA: (list of supported <book>s) OK/ERROR/+CME ERROR
	Parameter: <book> Possible default books are: 0 Phonebook 1 Address book
Read command AT^SPBA?	Response: ^SPBA: <book> OK
	Parameter: <book> See Test command The read option returns the actual setting for the default book.

AT^SPBC

AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter
Test command AT^SPBC=?	Response: ^SPBC: (list of sorted telephone books supported <mem>s) See AT+CPBS / AT^SPBS OK/ERROR/+CME ERROR
Write command AT^SPBC=<char>	Response: ^SPBC: <index> OK/ERROR/+CME ERROR
	Parameter: <char> A .. Z First letter of desired entry Value range: capital letters only (if <char> is not capital letter, the index of the first entry beginning with a special character is displayed)
	<index> Index in the sorted telephone book (access via AT^SPBG)

### AT^SPBG

AT^SPBG	Read entry from the sorted telephone book via the sorted index
Test command AT^SPBG=?	Response ^SPBG: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR Parameter: <index> Location number <nlength> Max. length of telephone number <tlength> Max. length of the text corresponding to the number
Write command AT^SPBG=<index1>[, <index2>]	Response ^SPBG: <index1>, <number>, <type>, <text> [ <CR><CL> ^SPBG: <index2>, <number>, <type>, <text> ] [ ... ] OK/ERROR/+CME ERROR Parameter <index1> Location number where the read of the entry starts <index2> Location number where the read of the entry ends <number> Telephone number <type> Type of number <text> Text corresponding to the telephone number

### AT^SPBS

AT^SPBS	Select a telephone book (including BenQ-specific books)																												
Test command AT^SPBS=?	Response ^SPBS: (list of supported <sto>s) OK/ERROR/+CME ERROR Parameter <sto> <table> <tr><td>BL</td><td>Blacklist dialing numbers (barred numbers from remote)</td></tr> <tr><td>CD</td><td>Callback dialing numbers (answered calls)</td></tr> <tr><td>CS</td><td>Common sortable telephone book (sorted combination of "SM", "ME", "FD"; access only via ^SPBC, ^SPBG)</td></tr> <tr><td>DC</td><td>ME Dialed Calls List</td></tr> <tr><td>FD</td><td>SIM fix-dialing telephone book</td></tr> <tr><td>LD</td><td>SIM last dialing number</td></tr> <tr><td>MC</td><td>ME Missed Calls List</td></tr> <tr><td>MD</td><td>Last number redial memory in telephone device</td></tr> <tr><td>MS</td><td>Missed dialing numbers (unanswered calls)</td></tr> <tr><td>ON</td><td>Own telephone numbers</td></tr> <tr><td>OW</td><td>Own numbers</td></tr> <tr><td>RC</td><td>ME Received Calls List</td></tr> <tr><td>RD</td><td>Red book (all entries in "CS" whose name portions have an exclamation mark (!) as their final character)</td></tr> <tr><td>SD</td><td>Service dialing numbers</td></tr> </table>	BL	Blacklist dialing numbers (barred numbers from remote)	CD	Callback dialing numbers (answered calls)	CS	Common sortable telephone book (sorted combination of "SM", "ME", "FD"; access only via ^SPBC, ^SPBG)	DC	ME Dialed Calls List	FD	SIM fix-dialing telephone book	LD	SIM last dialing number	MC	ME Missed Calls List	MD	Last number redial memory in telephone device	MS	Missed dialing numbers (unanswered calls)	ON	Own telephone numbers	OW	Own numbers	RC	ME Received Calls List	RD	Red book (all entries in "CS" whose name portions have an exclamation mark (!) as their final character)	SD	Service dialing numbers
BL	Blacklist dialing numbers (barred numbers from remote)																												
CD	Callback dialing numbers (answered calls)																												
CS	Common sortable telephone book (sorted combination of "SM", "ME", "FD"; access only via ^SPBC, ^SPBG)																												
DC	ME Dialed Calls List																												
FD	SIM fix-dialing telephone book																												
LD	SIM last dialing number																												
MC	ME Missed Calls List																												
MD	Last number redial memory in telephone device																												
MS	Missed dialing numbers (unanswered calls)																												
ON	Own telephone numbers																												
OW	Own numbers																												
RC	ME Received Calls List																												
RD	Red book (all entries in "CS" whose name portions have an exclamation mark (!) as their final character)																												
SD	Service dialing numbers																												
<b>Note.</b> For detailed information on the telephone-book features see "Appendix A"																													
Read command AT^SPBS?	Response: ^SPBS: <sto> [ , <used> , <total> ] OK/ERROR/+CME ERROR																												

	Parameter:
	<sto> See Test command
	<used> integer type value indicating the number of used locations in selected memory
	<total> integer type value indicating the total number of locations in selected memory
Write command AT^SPBS=<sto>	Response OK / ERROR / +CME ERROR
	Parameter: <sto> See Test command

### AT^SPIC

AT^SPIC	Output PIN counter
Test command AT^SPIC=?	Response ^SPIC:(list of supported <fac>s) OK / ERROR / +CME ERROR Parameter: <fac> One of the following facilities: PS Phone locked to SIM (device code) PF Phone locked to very first inserted SIM SC SIM card (PIN) PN Network personalization (GSM 02.22, [3]) PC Corporate personalization (GSM 02.22, [3]) PP Service provider personalization (GSM 02.22, [3]) PU Network subset personalization (GSM 02.22, [3]) P2 PIN2
Write command AT^SPIC=<fac>	Response: ^SPIC: <pin_attempts>, <puk_attempts> OK / ERROR / +CME ERROR Parameter: <pin_attempts> Number of attempts left to enter the PIN password via AT+CLCK (or AT+CPIN, and more). <puk_attempts> Number of attempts still available to enter the PUK password
Read command AT^SPIC?	Response: ^SPIC: (<fac1>, <pin_attempts>, <puk_attempts>) [ , (<fac2>, <pin_attempts>, <puk_attempts>)] [, ...] OK / ERROR / +CME ERROR Parameter: <fac1> See Test command <puk_attempts> See Write command <pin_attempts> See Write command.
Execute command AT^SPIC	Response: ^SPIC: <n> OK / ERROR / +CME ERROR Parameter: <n> Number of attempts still available to enter the <passwd>. Use the AT+CPIN? command to check which password is being required.

### AT^SPLM

AT^SPLM	Read the PLMN list
Test command AT^SPLM=?	Response: OK/ERROR/+CME ERROR
Execute command: AT^SPLM	Response: ^SPLM: numeric <oper>, long alphanumeric <oper>[<CR><LF> ^SPLM: numeric <oper>, long alphanumeric <oper>[...]] OK/ERROR/+CME ERROR
	Parameter <oper> Network operator in numeric and alphanumeric notation

### AT^SPLR

AT^SPLR	Read an entry from the preferred-operator list
Test command AT^SPLR=?	Response ^SPLR: (list of supported <index>s) OK/ERROR/+CME ERROR
	Parameter <index> Location numbers
Write command AT^SPLR=<index1>[, <index2>]	Response: ^SPLR: <index1>, numeric <oper> ^SPLR: ..... ^SPLR: <index2>, numeric <oper> OK/ERROR/+CME ERROR
	Parameter <index1> Location number where the read of the entry starts <index2> Location number where the read of the entry ends <oper> Network operator in numeric form

### AT^SPLW

AT^SPLW	Write an entry to the preferred-operator list
Test command AT^SPLW=?	Response ^SPLW: (list of supported <index>s) OK/ERROR/+CME ERROR
	Parameter: <index> Location number at which the entry is written
Write command AT^SPLW=<index>[, <oper>]	Response: OK/ERROR/+CME ERROR
	Parameter: <index> See Test command <oper> Network operator in numeric form

**AT^SPRF**

AT^SPRF	Get / Set Active Profile
Test command AT^SPRF=?	Response: ^SPRF: <index> , <name> [ <CR><LF> ^SPRF: <index> , <name> [ <CR><LF> [ [ . . . ] ] ] OK / ERROR / +CME ERROR Parameter: <index>      Numeric index of profile <name>      Name of the profile (string type, character set according to setting of AT+CSCS)
Read command AT^SPRF?	Response: SPRF: <index> , <name> OK / ERROR / +CME ERROR Parameter: <index>      See Test command <name>      See Test command
Write command AT^SPRF=<index>	Response: OK / ERROR / +CME ERROR Parameter: <index>      See Test command. The index of the profile which should be set to active.

**AT^SPST**

AT^SPST	Play Signal Tone
Test command AT^SPST =?	Response: ^SPST: (list of supported <n>s) OK / ERROR / +CME ERROR
Write command AT^SPST =<n>,<m>	Response: OK / ERROR / +CME ERROR Parameter: <n>      Type of Signal Tone (st = self terminating) 0      Carkit PTT (st) 1      Carkit PTT long (st) 2      Carkit Crash (st) 3      Carkit Error (st) 4      Carkit Call Setup (st) <m>      Mode 0      Stop tone (not necessary for self terminating tones) 1      Play tone



## AT^SPTT

AT^SPTT	Push To Talk (for BT Headset)
Test command AT^SPTT =?	Response: OK / ERROR / +CME ERROR
Write command AT^SPTT =<n>	Response OK / ERROR / +CME ERROR
	Parameter: <n>      Key Press 0      Short key pressed 1      Long key pressed

## AT^SPWD

AT^SPWD	Change password to a lock (including user-defined locks)
Test command AT^SPWD=?	Response ^SPWD: list of supported (<fac>, <pwdlength>)s OK / ERROR / +CME ERROR
	Parameter. <fac>      P2      PIN2 PS      Phone locked to SIM (device code) SC      SIM card (PIN) AO      BAOC (bar all outgoing calls) OI      BOIC (bar outgoing international calls) OX      BOIC-exHC (bar outgoing international calls except to home country) AI      BAIC (bar all incoming calls) IR      BIC-Roam (bar incoming calls when roaming outside the home country) AB      All barring services AG      All outgoing barring services AC      All incoming barring services PN      Network personalization (GSM 02.22, [3]) PC      Corporate personalization (GSM 02.22, [3]) PU      Network subset personalization (GSM 02.22, [3]) PP      Service provider personalization (GSM 02.22, [3]) PF      Phone locked to very first inserted SIM
	<pwdlength>      Length of password
Write command AT^SPWD = <fac>, <oldpwd>, <newpwd>	Response: OK / ERROR / +CME ERROR
	Parameter <fac>      See Test command <oldpwd>      Old password <newpwd>      New password

AT^SQWE

AT^SQWE	Switch Mode for External Interface
Test command AT^SQWE=?	Response: ^SQWE: (list of supported <mode>s) OK / ERROR / +CME ERROR Parameter: <div> <div>&lt;mode&gt;</div> <div> <div>0</div> <div>RCCP</div> <div>AT command mode without CSD</div> </div> </div> <div> <div>1</div> <div>BFC</div> <div>BenQ specific data transfer mode</div> </div> <div> <div>2</div> <div>GIPSY</div> <div>Default mode, AT command mode with CSD</div> </div> <div> <div>3</div> <div>OBEX</div> <div>OBEX data transfer mode</div> </div> <div> <div>5</div> <div>LOOP</div> <div>For internal use only</div> </div>
Read command AT^SQWE?	Response: ^SQWE: <mode> OK The Read command returns the actual setting for the <mode> parameter.
Write command AT^SQWE=<mode>	Response: OK / ERROR The Write command sets the mode for this interface (e.g. BT, IrDA, Wire)
<b>Note:</b> The 'OK' message is issued before the switching of serial interface has started. The switching may take some time (approx. 500 ms).	

AT^SREM

AT^SREM	Get / Set Reminder state
Test command AT^SREM=?	Response: SREM: (list of supported <urc> s), (list of supported <reminder>s), (list of supported <state>s) OK / ERROR / +CME ERROR Parameter: <div> <div>&lt;urc&gt;</div> <div> <div>0</div> <div>Unsolicited Result Code ON</div> </div> </div> <div> <div>1</div> <div>Unsolicited Result Code OFF</div> </div> <div> <div>&lt;reminder&gt;</div> <div> <div>0</div> <div>Task/Appointment reminder</div> </div> </div> <div> <div>1</div> <div>Alarm clock Reminder</div> </div> <div> <div>&lt;state&gt;</div> <div> <div>0</div> <div>Set the reminder state to dismissed</div> </div> </div> <div> <div>1</div> <div>Set the reminder state to snoozed</div> </div> <div> <div>2</div> <div>reminder state is active (for read command only)</div> </div>
Read command AT^SREM?	Response: SREM: <urc> [ <reminder> , [ <Id> ] , <state> , [ <CR><LF> , [...]] OK / ERROR / +CME ERROR Parameter: <div> <div>&lt;urc&gt;</div> <div>See Test Command</div> </div> <div> <div>&lt;reminder&gt;</div> <div>See Test command</div> </div> <div> <div>&lt;Id&gt;</div> <div>Unique Id of the reminder (for PIM only)</div> </div> <div> <div>&lt;state&gt;</div> <div>See Test command</div> </div>
Write command AT^SREM=<urc>,<reminder>,<Id>,<state>,<snoozetime>	Response: OK / ERROR / +CME ERROR Parameter: <div> <div>&lt;urc&gt;</div> <div>See Test Command</div> </div> <div> <div>&lt;reminder&gt;</div> <div>See Test command</div> </div>

	< <a href="#">Id</a> >	See Read command
	< <a href="#">state</a> >	See Test command
	< <a href="#">snoozetime</a> >	Time to snooze (in minutes)
Unsolicited result code		
^SREM: <reminder>, <Id>< <a href="#">reminder</a> >, < <a href="#">Id</a> >		
	Parameter:	
	< <a href="#">reminder</a> >	See Test command
	< <a href="#">Id</a> >	See Read command

## AT^SRMP

AT^SRMP	Ring Melody Playback
Test command AT^SRMP=?	Response: ^SRMP: (list of supported < <a href="#">call_type</a> >s) , (list of supported < <a href="#">volume</a> >s) OK/ERROR/+CME ERROR
Read command AT^SRMP?	Response: ^SRMP: (< <a href="#">call_type</a> 1>, < <a href="#">volume</a> >s) [...] [ ^SRMP: (< <a href="#">call_type</a> x>, < <a href="#">volume</a> >s) ] OK/ERROR/+CME ERROR The Read command returns the volume set for each ring melody index.
Write command ^SRMP=< <a href="#">call_type</a> >[, < <a href="#">volume</a> >]	
	Response: ^SRMP: < <a href="#">call_type</a> > [ , < <a href="#">volume</a> > ] OK/ERROR/+CME ERROR
	Parameter:
	< <a href="#">call_type</a> > For details see Appendix 5.3
	< <a href="#">volume</a> > integer type parameter with manufacturer specific range
	The Write command starts playing the ring melody.
Execute command AT^SRMP	Response: OK/ERROR/+CME ERROR
<b>Note:</b> The Execute command stops the melody played. If an MTC is received during an active test ring, the test ring is switched off and the "normal" ring is switched on.	

## AT^SSAT

AT^SSAT	Set Auto Time (NITZ)
Test command AT^SSAT=?	Response: ^SSAT: (list of supported < <a href="#">mode</a> >s) OK/ERROR/+CME ERROR
	Parameter:
	< <a href="#">mode</a> >      0      OFF      Auto Time is OFF
	1      ON      Auto Time is ON
Read command AT^SSAT?	Response: ^SSAT: < <a href="#">mode</a> > OK/ERROR/+CME ERROR The Read command returns the current setting for the < <a href="#">mode</a> > parameter.
Write command AT^SSAT=[< <a href="#">mode</a> >]	
	Response: OK/ERROR/+CME ERROR The Write command sets Auto Time update from network via NITZ Feature ON or OFF



## AT^SSCL

AT^SSCL	Show Clock							
Test command AT^SSCL=?	Response: ^SSCL: (list of supported <a href="#">&lt;mode&gt;s</a> ) OK / ERROR / +CME ERROR							
	Parameter:							
	<table><tr><td><a href="#">&lt;mode&gt;</a></td><td>0</td><td>OFF</td><td>Clock is not visible</td></tr><tr><td></td><td><u>1</u></td><td><u>ON</u></td><td>Clock is visible</td></tr></table>	<a href="#">&lt;mode&gt;</a>	0	OFF	Clock is not visible		<u>1</u>	<u>ON</u>
<a href="#">&lt;mode&gt;</a>	0	OFF	Clock is not visible					
	<u>1</u>	<u>ON</u>	Clock is visible					
Read command AT^SSCL?	Response: ^SSCL: <a href="#">&lt;mode&gt;</a> OK The Read command returns the current setting for the <a href="#">&lt;mode&gt;</a> parameter.							
	Parameter							
	<a href="#">&lt;mode&gt;</a> See Test command							
Write command AT^SSCL=[ <a href="#">&lt;mode&gt;</a> ]	Response: OK / ERROR The Write command sets the visibility of the clock to ON (default) or OFF							
	Parameter:							
	<a href="#">&lt;mode&gt;</a> See Test command							

AT^SSET

AT^SSET Profile Settings Control (SET Melody and Picture settings in Mobile )																	
Test command AT^ SSET =?	<p>Response</p> <p>^SSET:( (list of &lt;action&gt;s), &lt;applicationX&gt;,(list of &lt;key&gt;s)),..., ((list of &lt;action&gt;s),&lt;applicationY&gt;,(list of &lt;key&gt;s))</p> <p>OK</p> <p>Parameter:</p> <table> <tr> <td>&lt;action&gt;</td><td>integer type value that lets you set, get or delete settings; the following values are defined:</td></tr> <tr> <td>0</td><td>Delete</td></tr> <tr> <td>1</td><td>Set</td></tr> <tr> <td>2</td><td>Get</td></tr> </table> <table> <tr> <td>&lt;application&gt;</td><td>integer type value; the following values are defined:</td></tr> <tr> <td>1</td><td>MMI Settings (Melody and Picture Settings)</td></tr> </table> <table> <tr> <td>&lt;key&gt;</td><td>integer type value indicating the feature related, e.g. incoming SMS ringer melody, background picture.</td></tr> <tr> <td>values</td><td>See Appendix enum E_RegistryHMIKeys</td></tr> </table>	<action>	integer type value that lets you set, get or delete settings; the following values are defined:	0	Delete	1	Set	2	Get	<application>	integer type value; the following values are defined:	1	MMI Settings (Melody and Picture Settings)	<key>	integer type value indicating the feature related, e.g. incoming SMS ringer melody, background picture.	values	See Appendix enum E_RegistryHMIKeys
<action>	integer type value that lets you set, get or delete settings; the following values are defined:																
0	Delete																
1	Set																
2	Get																
<application>	integer type value; the following values are defined:																
1	MMI Settings (Melody and Picture Settings)																
<key>	integer type value indicating the feature related, e.g. incoming SMS ringer melody, background picture.																
values	See Appendix enum E_RegistryHMIKeys																
Write command ^SSET=<action>[ , <application>[ , <key>[ , <fullname>] ] ]	<p>Response to Write and Delete Action</p> <p>OK/ERROR/+CME ERROR: &lt;err&gt;</p> <p>Response to Read Action with application and key parameters</p> <p>[ ^SSET: &lt;applicationX&gt; , &lt;keyY&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] [ ... ]</p> <p>OK/ERROR/+CME ERROR: &lt;err&gt;</p> <p>Response to Read Action with application parameter but without key parameter</p> <p>[ [ ^SSET: &lt;applicationX&gt; , &lt;key1&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] [ ... ]</p> <p>[ ^SSET: &lt;applicationX&gt; , &lt;keyN&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] ]</p> <p>OK/ERROR/+CME ERROR: &lt;err&gt;</p> <p>Response to Read Action without application and key parameters</p> <p>[ [ ^SSET: &lt;applicationX&gt; , &lt;key1&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] [ ... ]</p> <p>[ ^SSET: &lt;applicationX&gt; , &lt;keyN&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] [ ... ]</p> <p>[ ^SSET: &lt;applicationY&gt; , &lt;key1&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] [ ... ]</p> <p>[ ^SSET: &lt;applicationY&gt; , &lt;keyM&gt; , &lt;fullname&gt; &lt;CR&gt; &lt;LF&gt; ] ]</p> <p>OK/ERROR/+CME ERROR: &lt;err&gt;</p> <p>Parameter:</p> <table> <tr> <td>&lt;action&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;application&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;key&gt;</td><td>see Test command</td></tr> <tr> <td>&lt;fullname&gt;</td><td>String type parameter which contains the name of the file with extension</td></tr> </table>	<action>	see Test command	<application>	see Test command	<key>	see Test command	<fullname>	String type parameter which contains the name of the file with extension								
<action>	see Test command																
<application>	see Test command																
<key>	see Test command																
<fullname>	String type parameter which contains the name of the file with extension																
<b>Description:</b>	<p>The Test command returns a list of possible applications with its available actions and keys.</p> <p>The Write command is used to set, get or delete settings of the mobile.</p> <p>Delete Action If no parameters are provided, every setting will be deleted. If no &lt;key&gt; parameter is entered then all settings of this application are deleted. Otherwise just the setting corresponding to the key will be deleted.</p> <p>Set Action All parameters are mandatory.</p>																

	Get Action	Optional application and <a href="#">&lt;key&gt;</a> parameters If no <a href="#">&lt;key&gt;</a> parameter is entered then all settings of this application are retrieved, otherwise just the setting corresponding to the <a href="#">&lt;key&gt;</a> will be retrieved.
<b>Example Note:</b>	<p>The <a href="#">&lt;fullname&gt;</a> parameter should be specified according to the character setting defined in the AT+CSCS command.</p> <p>Example: "A:\Sounds\jump.mid"</p> <p>In GSM character set, this string is different to ANSI character set (standard) and thus the Backslash character must be passed as two characters: the extension table character and a slash. The extension table character has value 1B and the following character "r" has value 2F.</p> <p>In UCS2 character set, there is no problem since "\" is defined as value 005C.</p> <p><b>Note:</b> String case insensitive (Upper or Lower case)</p>	

### AT^SSTK

AT^SSTK	SIM Toolkit
Test command AT^SSTK=?	Response: ^SSTK: <a href="#">&lt;profile&gt;</a> Parameter: <a href="#">&lt;profile&gt;</a> ME profile according to GSM 11.14
Write command AT^SSTK= <a href="#">&lt;length&gt;</a> [, <a href="#">&lt;mode&gt;</a> ] <a href="#">&lt;CR&gt;</a> <b>PDU is given:</b> <a href="#">&lt;ctrl-Z/ESC&gt;</a>	Response: OK/ERROR/+CME ERROR Parameter: <a href="#">&lt;length&gt;</a> Length of PDU in bytes, with a maximum PDU length of 255 bytes <a href="#">&lt;mode&gt;</a> 0 Single command 1 Sequence of commands <a href="#">&lt;pdu&gt;</a> SIM Toolkit commands, see GSM 11.14
Unsolicited result code ^SSTK: <a href="#">&lt;data&gt;</a>	Parameter: <a href="#">&lt;data&gt;</a> Single command

**AT^STLN**

AT^STLN	T9 Language Selection
Test command AT^STLN=?	Response: ^STLN: (list of supported <action>s),(list of supported <index>s) OK / ERROR Parameter: <action> 0     Disable T9 input Language 1     Enable T9 input Language <index>       Index corresponding to a language
Read command AT^STLN?	Response ^STLN: <action> , <index> OK Parameter: <action>       See Test Command <index>        See Test Command
Write command AT^STLN=<action>[,<index>]	Response: OK / ERROR Parameter: <action>       See Test Command <index>        See Test Command

**AT^STTP**

AT^STTP	Test Tone Play
Test command AT^STTP=?	Response: ^STTP: (list of supported <tone>s), (list of supported <mode>s), (list of supported <volume>s), (list of supported <player>s), (list of supported <handsfree>s), (list of supported <asp>s), OK / ERROR / +CME ERROR Parameter: <tone>           Integer type value for the tone type to play <mode>           0   Stop tone 1   Play Tone <volume>       SEA_Volume enum value for the volume loudness <player>        0   PWM Player used 1   DSP Player used <handsfree>    0   Handsfree mode OFF 1   Handsfree mode ON <asp>           0   Acoustic shock protection OFF 1   Acoustic shock protection ON
Write command AT^STTP=<tone> , <mode> , <volume> , <player> , <handsfree> , <asp>	Response: OK / ERROR / +CME ERROR The Write command stops or plays the tone with the configured parameters <tone>           See Test Command <mode>           See Test Command <volume>        See Test Command <player>        See Test Command



<handsfree>	See Test Command
<asp>	See Test Command

### AT^STWL

AT^STWL	Get/Set T9 Wordlist s
Test command AT^STWL=?	Response: ^STWL:(list of supported <mode>s) OK Parameter: <mode>      Numeric index of action 0      Export T9 Wordlist to file 1      Append T9 words from the imported file to the T9 Wordlist
Read command AT^STWL?	Response: ^STWL: <fullname>] OK/ERROR/+CME_ERROOR Parameter: <fullname>      Name of the T9 Wordlist file (string type) See AT+CSCS
Write command AT^STWL=<mode>,<fullname>	Response: OK/ERROR/+CME: Error Parameter: <mode>      See Test Command <fullname>      See Read Command

### AT^SVIB

AT^SVIB	Vibrator mode
Test command AT^SVIB=?	Response: ^SVIB: (list of supported <mode>s) OK Parameter: <mode>      Vibrator modes 0      general disable vibration 1      general enable vibration 16 - 22      vibration settings for calls (STANDARD, HELICOPTER, UFO, SHOCK, MOSQUITO, TRAIN,OFF) 50 - 55      vibration settings for messages, see calls (no OFF) 56      disable general SMS vibration 57      enable general SMS vibration 58      disable general CBS vibration 59      enable general CBS vibration 100 - 106      vibration settings for instant messages values see calls 150 - 156      vibration settings for alarm clock, values see calls
Read command AT^SVIB?	Response: ^SVIB: <mode>,<mode>,<mode>,<mode>,<mode>,<mode>,<mode> current <mode>for every setting OK/ERROR/+CME ERROR Parameter: <mode>      See Test command

Write command AT^SVIB=<mode>	Response: OK / ERROR / +CME ERROR
	Parameter: <mode>     See Test command

**AT^SVID**

AT^SVID	Video Settings
Test command AT^SVID=?	Response: OK / ERROR / +CME ERROR
Read command AT^SVID?	Response: ^SVID: <name>, <rec>, <mic>, <wbalance> OK / ERROR / +CME ERROR
	Parameter:
	<name>     String indicating the default name of the image
	<rec>     Recording Time
	0     MMS-LOW
	1     MMS-HIGH
	2     Maximum (default)
	<mic>     Microphone
	0     OFF
	1     ON (default)
	<wbalance>     White Balance
	0     Auto (default)
	1     Indoor
	2     Outdoor
Write command AT^SVID=<name>, <rec>, <mic>, <wbalance>	
	Response: OK / ERROR The Write command sets the video default name
	Parameter:
	<name>     See Read Command
	<rec>     See Read Command
	<mic>     See Read Command
	<wbalance>     See Read Command

## 2.10 Developers' commands

The commands described in this section are developers' commands and may only be used by qualified personnel.

### AT^SAPO

AT^SAPO	APO Data Tracer
Test command AT^SAPO=?	Response: OK/ERROR/+CME Error
Write command AT^SAPO=<mode>[,<"submode">]	Response: OK/ERROR/+CME: Error
	Parameter: <mode>            Numeric index of mode The value and its range is out of scope of this document.
	<submode>       String type of submode The value and its range is out of scope of this document.

**Note:** This command is available for special SIM cards only.

### AT^SCHNULI

AT^SCHNULI	Bluetooth Data Tracer
Test command AT^SCHNULI=?	Response: OK/ERROR/+CME Error
Write command AT^SCHNULI=<mode>[,<"submode">]	Response: OK/ERROR/+CME: Error
	Parameter: <mode>            Numeric index of mode The value and its range is out of scope of this document.
	<submode>       String type of submode The value and its range is out of scope of this document.

**Note:** This command is available for special SIM cards only.

**AT^SCHOB**

AT^SCHOB	Gipsy Data Tracer
Test command AT^SCHOB=?	Response: OK/ERROR/+CME Error
Read command AT^SCHOB?	Response: ^SCHOB: <data> OK/ERROR/+CME Error Parameter: <data>            Numeric trace data. The value and its range is out of scope of this document.
Write command AT^SCHOB=<"tracemode">]	Response: OK/ERROR/+CME: Error Parameter: <tracemode>    Numeric index in string format of trace mode The value and its range is out of scope of this document.

**AT^STRC**

AT^STRC	Data Tracer
Test command AT^STRC=?	Response: OK/ERROR/+CME Error
Write command AT^STRC=<protocol>[,<serial>]	Response: OK/ERROR/+CME: Error Parameter: <protocol>        Numeric index of protocol The value and its range is out of scope of this document. <serial>            Numeric index of serial interface The value and its range is out of scope of this document.

**Note:** This command is available for special SIM cards only.

## 2.12 List of all Unsolicited result codes

Unsolicited result codes indicate that processing of actions currently running is aborted due to an unforeseen event. Table 2-10 lists all unsolicited result codes defined, together with their meaning:

Message	Meaning
+CBM: <length><CR><LF><pdu>	Direct output of the broadcast message. For an explanation of parameters see the AT+CNMI command
+CCCM:<ccm>	Indication that the <ccm> value has changed but no more than every 10 seconds
+CCWA: <num>,<type>,<class>,<cli validity>,<alpha>,<line>	Call waiting indication For an explanation of parameters see AT+CCWA
+CDS: <length><CR><LF><pdu>	Direct output of the status report For an explanation of parameters see AT+CNMI
+CDSI: <mem>,<index>	Displays the status report index and memory For an explanation of parameters see the AT+CNMI command
+CGEV: ME CLASS <class>	The mobile equipment has forced a change of MS class For an explanation of parameters see AT+CGEREP
+CGEV: ME DEACT <PDP_type>, <PDP_addr>	The mobile equipment has forced a context deactivation For an explanation of parameters see AT+CGEREP
+CGEV: ME DETACH	The mobile equipment has forced a GPRS detach For an explanation of parameters see AT+CGEREP
+CGEV: NW CLASS <class>	The network has forced a change of MS class For an explanation of parameters see AT+CGEREP
+CGEV: NW DEACT <PDP_type>, <PDP_addr>	The network has forced context deactivation For an explanation of parameters see AT+CGEREP
+CGEV: NW DETACH	The network has forced a GPRS detach For an explanation of parameters see AT+CGEREP
+CGEV: NW REACT <PDP_type>, <PDP_addr>	The network has requested a context reactivation For an explanation of parameters see AT+CGEREP
+CGEV: REJECT <PDP_type>, <PDP_addr>	A network request for PDP context activation occurred when the MT was unable to report it and was automatically rejected For an explanation of parameters see

	AT+CGEREP
+CGREG: <stat>	GPRS Network registration For an explanation of parameters see AT+CGREG
+CRING: <type>	For an explanation of parameters see AT+CRC
+CIEV: <ind>,<value>	Indicator event reporting For an explanation of parameters see AT+CMER
+CKEV: <key>,<press>	For an explanation of parameters see AT+CMER
+CLIP: <num>,<type>,,,<alpha>,<CLI validity>	Telephone number of caller For an explanation of parameters see AT+CLIP
+CMT: <length><CR><LF><pdu>	Direct output of the short message For an explanation of parameters see AT+CNMI
+CMTI: <mem>,<index>	Indication that a new message has arrived For an explanation of parameters see AT+CNMI
+COLP: <num>,<type>,,,<alpha>	Telephone number of called line For an explanation of parameters see AT+COLP
+CREG: <stat>	Network registration For an explanation of parameters see AT+CREG
+CSSI: <code1>[, [<index>][,<number>]] +CSSU: <code2>[, [<index>][,<number>]]	Supplementary service intermediate/unsolicited result code For an explanation of parameters see AT+CSSN
+CTZV: <tz>	Time Zone Changed indication For an explanation of parameters see AT+CTZR
+CUSD: <m>[, <str>,<dc>]	For Unstructured supplementary service data see AT+CUSD
^SABD: <data>	For an explanation of parameters see AT^SABD
^SACD: <data>	For an explanation of parameters see AT^SACD
^SACM: <m>	Message indicating if ACM has reached the maximum value ACMmax For an explanation of parameters see AT^SACM
^SCKS: <m>	Message indicating whether card has been removed or inserted For an explanation of parameters see AT^SCKS
^SMGO: <mode>	SMS overflow indicator For an explanation of parameters see AT^SMGO
^SREM: <reminder>,<ld>	For an explanation of parameters see AT^SREM
^SSTK: <data>	The user has selected a menu entry from a menu created by means of AT^SSTK

---

+VGS: <gain>	Speaker Volume indication used in Headset and Handsfree(Carkit) Bluetooth Profile For an explanation of parameters see AT+VGS
--------------	--

**Table 2-10: List of unexpected messages**

---

## 3 Appendix A

### 3.1 Factory settings made by AT&F

Reset pending locks (Phone Pin/Puk, Pin2/Puk2 ...)  
which are given as answer to AT+CPIN?

ATS0=0

ATS3=13

ATS4=10

ATS5=8

ATS7=60

ATV1

ATE1

ATQ0

AT\Q3

AT&C1

AT&D2

ATX0

AT+VTD=1

AT+CSCS="GSM"

AT+CMEE=0

AT+CLIP=0

AT+COLP=0

AT+CPBS=SM (if available)

AT^SCKS=0

AT^SACM=0

AT+CRC=0

AT+CAOC=1

AT+CCWA=0

AT+CSSN=0,0

AT+CPOL=,2

AT+CMER=0,0,0,0,0

AT+CREG=0

AT+CMEC=0,0,0

AT+CRC=0

AT+COPS=0,0

The extended error report (AT+CEER) will be reset (0,0).

AT+CNMI=0,0,0,0,1

AT+CMPS=SM,SM,SM

AT^SMGO=0

AT+CSMS=0

AT+CSCB=0

If GPRS is supported, the following GPRS commands are affected as well:

AT+CGAUTO=0

AT+CR=0

AT+CGEREP=0,0

AT+CGREG=0

AT^SABD=0

AT^SACD=0



### 3.2 Features of the Telephone book memory

Table 3-1 lists the features supported by the telephone book memory.

Name	Description	Category	Access	Write allowed ?	How to delete completely
FD	Fix-dialing number (SIM fix-dialing telephone book)	3GPP TS 27.007	AT+CPBS or AT^SPBS	PIN2 required	
SM	Abbreviate dialing number (SIM telephone book)	3GPP TS 27.007	AT+CPBS or AT^SPBS	device code required if FDN replacement is active	
DC (MD)	Mobile last dialing number (last number redial memory; only if "LD" is not available)	3GPP TS 27.007	AT+CPBS or AT^SPBS	-	AT^SDLD
ON (OW)	Own Numbers (SIM own telephone numbers)	3GPP TS 27.007 (BenQ)	AT+CPBS (historical)	x	
LD	SIM last dialing number (last number redial memory on SIM)	3GPP TS 27.007	AT+CPBS or AT^SPBS	-	AT^SDLD
ME	Mobile-equipment telephone book (ME dialing numbers)	3GPP TS 27.007	AT+CPBS or AT^SPBS	device code required if FDN replacement is active	
BD	Barred dialing numbers (blocked numbers)	BenQ	AT^SPBS	-	
SD	Service dialing numbers (Service numbers)	BenQ	AT^SPBS	-	
MC (MS)	Missed dialing numbers (unanswered calls)	3GPP TS 27.007 (BenQ)	AT+CPBS, AT^SPBS	-	
RC (CD)	Callback dialing numbers (answered calls)	3GPP TS 27.007 (BenQ)	AT+CPBS, AT^SPBS	-	
BL	Blacklist of dialing numbers (numbers that are blocked for a certain time in order to prevent continuous accesses from remote control)	BenQ	AT^SPBS	-	
MB	Mailbox dialing numbers (network-operator mailbox)	BenQ	AT^SPBS	-	
CS	Common sortable numbers (sorted combination of SM, ME, FD)	BenQ	AT^SPBS, AT^SPBC, AT^SPBG	-	
RD	Red book numbers (CS entries with ! at the end of the name portion)	BenQ	AT^SPBS, AT^SPBC, AT^SPBG	-	

**Table 3-1: Features of the telephone book memory**

### 3.3 Writing to the FDN Phonebook / FDN Replacement

Writing to the fixed-dialing number phonebook is protected by PIN2. A sample Write sequence (to e.g. record 5) is provided below:

AT Command	Comment
AT+CMEE=2 OK	Activate expanded error message
AT+CPBS=? +CPBS: ("FD","SM","LD") OK	Listing of available telephone books
AT+CPBS="FD","12345678" OK	Selection of the FDN telephone book and provide PIN2 with the same command
AT+CPBW=5,"1234",,"test" +CME ERROR: SIM PIN2 REQUIRED	A Write to record 5 is attempted PIN2 is required for this purpose
AT+CPIN? +CPIN: SIM PIN2	Query of the PIN status PIN2 is to be entered
AT+CPIN="12345678" OK	Input of PIN2
AT+CPBW=5,"1234",,"test" OK	A Write to record 5 is attempted... PIN2 remains active as long as you use the commands AT+CPIN, AT+CPBS, AT+CPBR, AT+CPBW, AT+CACM, AT+CAMM, AT+CPUC or AT^SPIC, AT^SPBS, AT^SPBC, AT^SPBG, : If you use other commands or if none of the above commands are executed within five minutes, PIN2 is no longer valid.
AT+CPBW=6,"5678",,"new test" OK	A Write to record 6 is attempted...

In addition, if there is no FDN phonebook available on the SIM, it is possible to activate a feature which activates an FDN-like behavior for the "SM" and "ME" phonebooks (FDN replacement). (Currently this feature can only be activated via the MMI lock/device lock/excluding telephone book.)

In this case, the Write to the "SM" and "ME" phonebooks is ensured by the device code (PH-SIM PIN and PH-SIM PUK, respectively).

The sequence for entering the device code is analogous to the above example.

### 3.4 How to use special characters in certain commands ( e. g., AT+CPBW)

String parameters like <text> in certain commands (like, for instance, AT+CPBW) should be entered using quotation marks "" (Ascii=Windows=GSM =0x22), since the following problems may occur if the quotation marks are omitted:

- SPACES (Space, Blank, Ascii=Windows=GSM =0x20) are skipped.  
E.g.           at+cpbw=1,"123",,K. H.           results in "K.H."           ☹  
              at+cpbw=1,"123",,"K. H."spaces are retained           ☺
- Commas (',') (Ascii=Windows=GSM =0x2C) and semicolons (';')(Ascii=Windows=GSM =0x3B) are prohibited and must not be used in <text>, because they are used as separators between parameters and commands.  
E.g.           at+cpbw=1,"123",,Kurz,Helmur   results in ERROR           ☹  
              at+cpbw=1,"123",,"Kurz,Helmur"           ☺

To be able, however, to enter quotation marks (and some other special characters) in string parameters you will have to use the Escape character (hex value 0x5c). While “0x5c” denotes the backslash (‘\’) in the ASCII character set (Ascii=Windows=0x5C), in the GSM character set “0x5C” denotes the ‘Ö’ character.

The escape sequence thus has the following structure:

- The sequence begins with the escape character 0x5C  
(ASCII=Windows=‘\’, GSM =‘Ö’)
- The special character follows and is entered as a 2 Byte representation of the GSM character set value .  
e.g. the 2 Byte representation of the ‘@’ (GSM =0x00) is ‘00’

Table 3-2 lists the special characters that should be entered using the escape sequence:

GSM Char	GSM hex value	ASCII char.	3 byte esc. seq.(hex)	Note
Ö	0x5C	\	0x5C 0x35 0x43	Backslash
"	0x22	"	0x5C 0x32 0x32	String delimiter
ò	0x08	BSP	0x5C 0x30 0x38	Backspace
@	0x00	NULL	0x5C 0x30 0x30	GSM NULL

**Table 3-2: Using escape characters in commands**

Examples of using escape characters in GSM commands are listed in Table 3-3:

Desired phonebook entry	<text> in AT+CPBW command (hex)
Ölhändler	0x22 0x5C 0x35 0x43 0x6C 0x68 0x7B 0x6E 0x64 0x6C 0x65 0x72 0x22
"Eddi" Kurz	0x22 0x5C 0x32 0x32 0x45 0x64 0x64 0x69 0x5C 0x32 0x32 0x20 0x4B 0x75 0x72 0x7A 0x22
Oòo	0x22 0x4F 0x5C 0x30 0x38 0x6F 0x22
@Adr.	0x22 0x5C 0x30 0x30 0x41 0x64 0x72 0x2E 0x22 [no problems with strlen()]
	22 00 41 64 72 2E 22 (may cause problems with strlen() in application)

**Table 3-3: Using escape characters in GSM commands**

Note:

When reading phonebook records, there is NO replacement. Every character will appear in normal GSM character set notation (like the left column in the example above).

### 3.5 S Registers

This section provides the meanings of S registers used in the modem:

S Register	Function (default values in bold type)		
S 0	The number of rings before the call is answered default: 0 (i. e. does not answer)		
S 3	Command termination character and first character of response trailer ( <b>CR</b> )		
S 4	Second character of response trailer ( <b>LF</b> )		
S 5	Editing character; erases the previous character ( <b>BS</b> )		
S 6	Escape character		
S 7	Wait for carrier after dialing (in seconds). default: 60		
S 8 + S 9	No action		
S 10	Delay between Lost Carrier and Hang up in 0.1 sec. (Default 2 = 200ms)		
S 11 .. S17	No action		
S 18	Bit 0	0	No GSM exit cause
		1	With GSM exit cause
	Bit 1	0	No SMS indication "+C"
		1	With incoming SMS indication "+C"
S 19 ... S99	No action		

**Table 3-4: S-Registers**

Only the following S registers can be modified by means of the corresponding ATSn=x command (where n denotes the number of the register): S0, S3, S5, S6, S7, S8, S10; S18.

All the other S registers are used internally and thus read-only.

The contents of a single S register can be displayed via the ATSn? command (where n denotes the number of the register). It is not possible to have the contents of multiple registers displayed at the same time.

### 3.6 Circuit assignments

The following circuits are assigned at the mobile connector to support the exchange of data:

Name:	Direction	Function	ITU V24 Circuit
SG		Signal Ground	102
TxD	DTE to DCE	Transmitted Data	103
RxD	DCE to DTE	Received Data	104
CTS	DCE to DTE	Clear To Send	106
DCD	DCE to DTE	Data Carrier Detect	109

## 4 Appendix B

### 4.1 Example for creating / retrieving an organizer entry

**-vcs object which has to be uploaded:**

```
BEGIN:VCALENDAR
VERSION:1.0
BEGIN:VEVENT
CATEGORIES:ANNIVERSARY
DTSTART:19991213T100000
DESCRIPTION:W. von BenQ
END:VEVENT
END:VCALENDAR
```

**-hexadecimal representation of this object:**

```
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F524945533A414E4E49564552534152590D0A445453544152543A31393939313231335431
30303030300D0A4445534352495054494F4E3A572E20766F6E205369656D656E730D0A454E443A56455645
4E540D0A454E443A5643414C454E4441520D0A
```

**-upload of an entry on record 20**

```
at^sbnw="vcs",20,1,3<CR>
<CR><LF> > <Space>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F<Ctrl-Z>
<CR><LF>OK<CR><LF>

at^sbnw="vcs",20,2,3<CR>
<CR><LF> > <Space>
524945533A414E4E49564552534152590D0A445453544152543A3139393931323133543130303030300D0A4
4455343524950<Ctrl-Z>
<CR><LF>OK<CR><LF>

at^sbnw="vcs",20,3,3<CR>
<CR><LF> > <Space>
54494F4E3A572E20766F6E205369656D656E730D0A454E443A564556454E540D0A454E443A5643414C454
E4441520D0A<Ctrl-Z>
<CR><LF>OK<CR><LF>
```

All characters are answered with an echo. Echoing can be switched off via „ATE0“.

In this example the organizer entry is uploaded in 50-byte packets (100 input characters in every PDU).

Characters in blue characterize the responses of the mobile.

### -interrogation of the current <type>,<subtype>,<actNumber>,<maxNumber>

```
at^sbnw?<CR>
<CR><LF>^SBNW: "vcs",20,2,3<CR><LF>
<CR><LF>OK<CR><LF>
```

description: The current object which is uploaded is an VCS object.  
It has to be stored on record 20.  
2 of 3 packets have already been uploaded.

### -deleting of record 20

```
at^sbnw="vcs",20,0<CR>
<CR><LF>OK<CR><LF>
```

### -download entry from record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>^SBNR: <space>"vcs",20,1,1<CR><LF>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F524945533A414E4E49564552534152590D0A445453544152543A31393939313231335431
30303030300D0A4445534352495054494F4E3A572E20766F6E205369656D656E730D0A454E443A56455645
4E540D0A454E443A5643414C454E4441520D0A<CR><LF>
<CR><LF>OK<CR><LF>
```

The mobile divides the record entry into packets of 176 byte (=176\*2 characters).

### -Download of an empty record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>OK<CR><LF>
```

### -Test command of AT^SBNW

```
at^sbnw=?<CR>
<CR><LF>^SBNW: ("bmp",(0)),(,mid“(0)),(,vcs“(1-30)) <CR><LF>
<CR><LF>OK<CR><LF>
```

description: The mobile supports bitmaps of subtype 0, midi objects of subtype 0 and vcs objects of the subtypes 1 to 30.

## 4.2 Examples and hints for using GPRS commands

### 4.2.1 Defining and using a Context Definition Id (CID):

Whenever a CID is used as a parameter for a GPRS command the CID has to be defined first via the AT+CGDCONT or, for secondary contexts, AT+CGDSCONT command.  
To retrieve the parameter of a CID the AT+CGDCONT/AT+CGDSCONT read option must be used.  
If the response of AT+CGDCONT/AT+CGDSCONT? is OK only, no CID is defined.

```
AT+CGDCONT?
OK // no CID defined
```

All parameters of the CID are initiated by NULL or non-existing values, and the CID itself is set to undefined.  
To define a CID use the AT+CGDCONT command with at least one CID parameter.

The present version of the mobile software supports CID 1, CID 2 and CID 3 by using the AT+CGDCONT and the AT+CGDSCONT command.

All three CIDs could be defined as a primary or a secondary context.

Furthermore the CIDs are global within the mobile. That means that it is possible to define and activate a context using the cable and to deactivate and reset this context using another interface (e.g the IrDa).

e.g. for primary context definition and activation

```
AT+CGDCONT=1,IP
```

```
OK // defines CID 1 and sets the PDP type to IP
// access point name and IP address aren't set
```

```
AT+CGDCONT=2,IPV6, "APN", 111.222.123.234, 111.222.123.234, 111.222.123.234, 111.222.123.234
```

```
OK // defines CID 2 and sets PDP type IP version 6 , APN and IP addr
```

```
AT+CGDCONT=2,IP, "internet.t-d1.gprs", 111.222.123.234, 1, 1
```

```
OK // defines and overwrites CID 2 and sets PDP type, APN and IP addr and
// manufacturer preferred compression for header and data
```

A subsequent read command will return

```
AT+CGDCONT?
```

```
+CGDCONT: 1,"IP","", "",0,0
```

```
+CGDCONT:2,"IP","internet.t-d1.gprs","111.222.123.234",1,1
```

```
OK
```

```
AT+CGDCONT=1
```

```
OK // sets the CID 1 to be undefined
```

A subsequent read command will return

```
AT+CGDCONT?
```

```
+CGDCONT:2,"IP","internet.t-d1.gprs","111.222.123.234",1,1
```

```
OK
```

For secondary context definition and activation

// precondition: define and activate a primary context first

```
AT+CGDCONT=1,IP, "internet.t-d1.gprs", 111.222.123.234
```

```
OK // defines CID 1 as primary
```

```
AT+CGACT=1,1 // activate primary context
```

```
OK
```

```
AT+CGDSCONT=2,1,0,0// define CID 2 as a secondary context of CID 1
```

```
OK // without header and without data compression
```

```
AT+CGACT=1,2 // activates the CID 2 (secondary)
```

```
OK
```

The activation of a secondary context depends on network support.



#### 4.2.2 Defining Quality of service for a CID

Quality of Service (QoS) is a special parameter of a CID which again consists of several parameters. The QoS consists of

- the precedence class
- the delay class
- the reliability class
- the peak throughput class
- the mean throughput class

and is subdivided into "requested QoS" and "minimum acceptable QoS".

All parameters of the QoS are initiated by default to the "network subscribed value (= 0)", but the QoS itself is set to undefined. Use the AT+CGQREQ or AT+CGQMIN command to define a QoS.  
e.g.:

```
AT+CGQREQ=1,2
OK           // overwrites the precedence class of QoS of CID 1 and sets
              // the QoS of CID 1 to be present

A following read command will response
AT+CGQREQ?
+CGQREQ: 1,2,0,0,0,0
OK           // all QoS values of CID 1 are set to network subscribed
              // except precedence class which is set to 2

AT+CGQREQ=1
OK           // set the QoS of CID 1 to not present
```

The commands

AT+CGEQMIN and AT+CGEQREQ (Minimum and Requested 3G Quality of Service Profile) have to be used in the same manner and have the same behaviour. The 3G-QoS consists of the following parameters:

- Traffic class
- Maximum bitrate UL
- Maximum bitrate DL
- Guaranteed bitrate UL
- Guaranteed bitrate DL
- Delivery order
- Maximum SDU size
- SDU error ratio
- Residual bit error ratio
- Delivery of erroneous SDUs
- Transfer delay
- Traffic handling priority

It is possible to define a 3G-QoS in addition to an already defined QoS (older release).

```
AT+CGEQREQ=1,4,8640,0,63,576,2,1520,"2E1","5E7",3,4000
OK // defines a 3G-QoS using all parameters
```

After defining a CID and its QoS it could be activated. To activate a CID use

```
AT+CGACT=1,2
OK // activate CID 2
```

If the CID is already active, the mobile immediately returns OK.

If no CID is given, all CIDs defined will be activated by means of

```
AT+CGACT = // NO CID and NO STATE given
OK // all defined CIDs will be activated
```

If no CID is defined the mobile returns +CME ERROR: invalid index

Remark: If the mobile is NOT attached via AT+CGATT=1 before activating, the attach is automatically done by means of the AT+CGACT command.

After a CID has been defined and activated, it can be used using AT commands as in the following example:

```
AT+CGDATA=PPP,1
CONNECT // the mobile is connected using the parameters of CID 1
```

```
AT+CDATA=
CONNECT // the mobile is connected using default parameter
```

The mobile supports Layer 2 Protocol (L2P) PPP only.

Remark: If the mobile is NOT attached by means of AT+CGATT=1 and if the CID is NOT activated before connecting, the attach and activate is automatically done by means of the AT+CGDATA command.

Example to define a TFT for a CID

The handling and behaviour of a TFT is similar to the QoS, the only difference is that the CID has to be defined before the TFT:

Here are some examples to define a TFT:

```
AT+CGDCONT=1,IP, "internet.t-d1.gprs"
```

OK // define the context first

AT+CGTFT=1 // reset all TFT packet filter of CID 1

OK

AT+CGTFT=1,2,1 // set TFT filter 2 with eval. precedence index 2 for CID 1

OK

// set TFT filter 3 with all parameter of an IPv4 CID 1

AT+CGTFT=1,3,1,"123.124.125.126.233.234.235.236",1,"2.655","0.65534","ABCDEF","0.255"

OK

Remark: It is possible to change the QoS and TFT parameter while a context is active or online. The new values are temporary stored in the ME and take effect if the context is activated next time or using the AT+CGCMOD command.

### 4.3 The GPRS dial command ATD

For more detailed information see [2].

As an alternative to using the GPRS-AT commands it is possible to connect to a GPRS network by using the dial command "atD".

There are two GPRS Service Codes for the ATD command. Values 98 and 99.  
e. g.:

```
ATD*99#  
CONNECT          // establish a connection via service code 99
```

```
ATD*99*123.124.125.126*PPP*1#  
CONNECT          // establish a connection via service code 99, IP address 123...  
                  //and L2P = PPP and using CID 1.  
                  // The CID has to be defined by means of AT+CGDCONT
```

```
ATD*99**PPP#  
CONNECT          // establish a connection via service code 99 and L2P = PPP
```

```
ATD*99***1#  
CONNECT          // establish a connection via service code 99 and using CID 1
```

```
ATD*99*PPP*1#  
CONNECT          // establish a connection via service code 99 and L2P = PPP and  
                  // using CID 1. The CID has to be defined by means of AT+CGDCONT
```

```
ATD*98#  
CONNECT          // establish an IP connection via service code 98
```

```
ATD*98*1#  
CONNECT          // establish an IP connection via service code 98 using CID 1  
                  // The CID has to be defined by means of AT+CGDCONT
```

## 5 Appendix C

### 5.1 Enum E\_RegistryHMIKeys

```
typedef enum
{
    eRegSkin_Start = 0,

    // - Color Skin -----
    eRegSkin_ColorControls,          ///< Index 1: Color scheme (only text colors)
    eRegSkin_HeadlineFullscreenBgImage, ///< Index 3: Headline background picture (full-screen)
    eRegSkin_HeadlineStandardBgImage,  ///< Index 4: Headline background picture (default)
    eRegSkin_BodyStandardBgImage,      ///< Index 5: Body background picture (default)
    eRegSkin_BodyTabBgImage,           ///< Index 6: Body background picture (tabulator)
    eRegSkin_BottomFullscreenBgImage,  ///< Index 7: Bottom background picture (full-screen)
    eRegSkin_BottomStandardBgImage,    ///< Index 8: Bottom background picture (default)
    eRegSkin_PopupFeedbackBgImage,     ///< Index 10: Popup background picture (feedback)
    eRegSkin_PopupOptionsBgImage,      ///< Index 11: Popup background picture (options)
    eRegSkin_Selection1LineBgImage,    ///< Index 12: Selection background picture (1 line)
    eRegSkin_Selection2LineBgImage,    ///< Index 13: Selection background picture (2 line)
    eRegSkin_Selection3LineBgImage,    ///< Index 14: Selection background picture (3 line)
    eRegSkin_SelectionIconOnlyBgImage,  ///< Index 15: Selection background picture (icon only)
    eRegSkin_PopupSearchLineBgImage,   ///< Index 16: Search field line popup background picture
    eRegSkin_PopupQuickAccessFieldBgImage, ///< Index 17: Quick access field popup background picture
    eRegSkin_ProgressStatusbarImage,   ///< Index 18: Progress/status bar picture
    eRegSkin_TabSelectedBgImage,       ///< Index 19: Tabulator background picture (selected)
    eRegSkin_TabUnselectedBgImage,     ///< Index 20: Tabulator background picture (unselected)
    eRegSkin_ExternalDisplayBgImage,   ///< Index 21: External display background picture
    eRegSkin_End,                      ///< Index 22

    // - Animations/Images (Graphics), which are available by setup menu (partly not) -----
    eRegGraph_Start = 100,
    eRegGraph_Wallpaper,              ///< Index 101: Wallpaper
    eRegGraph_Logo,                   ///< Index 102: Provider-Logo
    eRegGraph_Startup,                ///< Index 103: Mobile startup animation
    eRegGraph_Shutdown,               ///< Index 104: Mobile shutdown animation
    eRegGraph_NetSearch,              ///< Index 105: Net search animation
    eRegGraph_Preview,                ///< Index 106: Preview animation
    eRegGraph_InsertSim,              ///< Index 107: Insert Sim animation
    eRegGraph_Wait,                   ///< Index 108: Wait animation
    eRegGraph_PinInput,               ///< Index 109: Pin input animation
    eRegGraph_Screensaver,            ///< Index 110: Screensaver
    eRegGraph_ScreensaverType,        ///< Index 111: Screensaver type
    eRegGraph_Distinctive_Face,       ///< Index 112: Calling face no Group
    eRegGraph_Distinctive1_Face,      ///< Index 113: Calling face Group 1
    eRegGraph_Distinctive2_Face,      ///< Index 114: Calling face Group 2
    eRegGraph_Distinctive3_Face,      ///< Index 115: Calling face Group 3
    eRegGraph_Distinctive4_Face,      ///< Index 116: Calling face Group 4
    eRegGraph_Distinctive5_Face,      ///< Index 117: Calling face Group 5
    eRegGraph_Distinctive6_Face,      ///< Index 118: Calling face Group 6
    eRegGraph_Distinctive7_Face,      ///< Index 119: Calling face Group 7
    eRegGraph_Distinctive8_Face,      ///< Index 120: Calling face Group 8
    eRegGraph_Distinctive9_Face,      ///< Index 121: Calling face Group 9
    eRegGraph_Distinctive_Video,      ///< Index 122: Calling video no Group
    eRegGraph_Distinctive1_Video,     ///< Index 123: Calling video Group 1
    eRegGraph_Distinctive2_Video,     ///< Index 124: Calling video Group 2
    eRegGraph_Distinctive3_Video,     ///< Index 125: Calling video Group 3
}
```

Document No.:	A30880-A10-A001-75-D376
Revision:	Master R75
Revision Date:	10.February, 2006

```
eRegGraph_Distinctive4_Video,    ///< Index 126: Calling video Group 4
eRegGraph_Distinctive5_Video,    ///< Index 127: Calling video Group 5
eRegGraph_Distinctive6_Video,    ///< Index 128: Calling video Group 6
eRegGraph_Distinctive7_Video,    ///< Index 129: Calling video Group 7
eRegGraph_Distinctive8_Video,    ///< Index 130: Calling video Group 8
eRegGraph_Distinctive9_Video,    ///< Index 131: Calling video Group 9
eRegGraph_End,                  ///< Index 132
```

// - Sounds (Audio), which are available by setup menu -----

```
eRegAudio_Start = 200,
eRegAudio_Calls,                ///< Index 201: Ring tone Calls
eRegAudio_Distinctive,          ///< Index 202: Ring tone Calls no Group
eRegAudio_Distinctive1,         ///< Index 203: Ring tone Calls Group 1
eRegAudio_Distinctive2,         ///< Index 204: Ring tone Calls Group 2
eRegAudio_Distinctive3,         ///< Index 205: Ring tone Calls Group 3
eRegAudio_Distinctive4,         ///< Index 206: Ring tone Calls Group 4
eRegAudio_Distinctive5,         ///< Index 207: Ring tone Calls Group 5
eRegAudio_Distinctive6,         ///< Index 208: Ring tone Calls Group 6
eRegAudio_Distinctive7,         ///< Index 209: Ring tone Calls Group 7
eRegAudio_Distinctive8,         ///< Index 210: Ring tone Calls Group 8
eRegAudio_Distinctive9,         ///< Index 211: Ring tone Calls Group 9
eRegAudio_Appointments,         ///< Index 212: Ring tone Appointments
eRegAudio_Messages,             ///< Index 213: Ring tone Messages
eRegAudio_AlarmClock,           ///< Index 214: Ring tone Alarm Clock
eRegAudio_InstantMessaging,     ///< Index 215: Ring tone Instant Messaging
eRegAudio_Games,                ///< Index 216: Ring tone Games
eRegAudio_Startup,              ///< Index 217: Ring tone mobile startup
eRegAudio_Shutdown,             ///< Index 218: Ring tone mobile shutdown
eRegAudio_OpenSlider,           ///< Index 219: Ring tone Open Slider
eRegAudio_CloseSlider,          ///< Index 220: Ring tone Close Slider
eRegAudio_CallLine1,            ///< Index 221: Ring tone unknown incoming call (for primary number)
eRegAudio_CallLine2,            ///< Index 222: Ring tone unknown incoming call for secondary number (E-Plus only)
eRegAudio_PTTRingTone,          ///< Index 223: Ring tone Push to talk Over Cellular
eRegAudio_OpenClamshell,        ///< Index 224: Ring tone Open Clamshell
eRegAudio_CloseClamshell,       ///< Index 225: Ring tone Close Clamshell
eRegAudio_End,                  ///< Index 226
```

// - Special key words, which are not available by setup menu -----

```
eRegSpecial_Start = 300,
eRegSpecial_CameraClick,        ///< Index 301: Ring tone Camera Click
eRegSpecial_BrowserBookmarks,   ///< Index 302: Browser bookmarks
eRegSpecial_MainMenuConfiguration, ///< Index 303: Main menu configuration
eRegSpecial_MainMenu1Icon,       ///< Index 304: Main menu 1 icon
eRegSpecial_MainMenu2Icon,       ///< Index 305: Main menu 2 icon
eRegSpecial_MainMenu3Icon,       ///< Index 306: Main menu 3 icon
eRegSpecial_MainMenu4Icon,       ///< Index 307: Main menu 4 icon
eRegSpecial_MainMenu5Icon,       ///< Index 308: Main menu 5 icon
eRegSpecial_MainMenu6Icon,       ///< Index 309: Main menu 6 icon
eRegSpecial_MainMenu7Icon,       ///< Index 310: Main menu 7 icon
eRegSpecial_MainMenu8Icon,       ///< Index 311: Main menu 8 icon
eRegSpecial_MainMenu9Icon,       ///< Index 312: Main menu 9 icon
eRegSpecial_MainMenu10Icon,      ///< Index 313: Main menu 10 icon
eRegSpecial_MainMenu11Icon,      ///< Index 314: Main menu 11 icon
eRegSpecial_MainMenu12Icon,      ///< Index 315: Main menu 12 icon
eRegSpecial_MainMenu1Animation,   ///< Index 316: Main menu 1 animation
eRegSpecial_MainMenu2Animation,   ///< Index 317: Main menu 2 animation
eRegSpecial_MainMenu3Animation,   ///< Index 318: Main menu 3 animation
eRegSpecial_MainMenu4Animation,   ///< Index 319: Main menu 4 animation
eRegSpecial_MainMenu5Animation,   ///< Index 320: Main menu 5 animation
eRegSpecial_MainMenu6Animation,   ///< Index 321: Main menu 6 animation
eRegSpecial_MainMenu7Animation,   ///< Index 322: Main menu 7 animation
eRegSpecial_MainMenu8Animation,   ///< Index 323: Main menu 8 animation
```

---

```

eRegSpecial_MainMenu9Animation,    ///< Index 324: Main menu 9 animation
eRegSpecial_MainMenu10Animation,    ///< Index 325: Main menu 10 animation
eRegSpecial_MainMenu11Animation,    ///< Index 326: Main menu 11 animation
eRegSpecial_MainMenu12Animation,    ///< Index 327: Main menu 12 animation
eRegSpecial_PositiveFeedbackIcon,    ///< Index 328: Positive feedback icon
eRegSpecial_NegativeFeedbackIcon,    ///< Index 329: Negative feedback icon
eRegSpecial_QuestionFeedbackIcon,    ///< Index 330: Question feedback icon
eRegSpecial_WarningFeedbackIcon,    ///< Index 331: Warning feedback icon
eRegSpecial_HintFeedbackIcon,        ///< Index 332: Hint feedback icon
eRegSpecial_ApplicationGame,        ///< Index 333: Application/Game
eRegSpecial_ThumbnailIcon,          ///< Index 334: Thumbnail icon
eRegSpecial_LargeFont,              ///< Index 335: Large font
eRegSpecial_MediumFont,             ///< Index 336: Medium font
eRegSpecial_SmallFont,              ///< Index 337: Small font
eRegSpecial_LargeDigitFont,         ///< Index 338: Large digit font
eRegSpecial_SendAnimation,          ///< Index 339: Send animation
eRegSpecial_ReceiveAnimation,        ///< Index 340: Receive animation
eRegSpecial_SendReceiveAnimation,    ///< Index 341: Send - Receive animation
eRegSpecial_End,                    ///< Index 342

```

```

// - Theme -----
eRegTheme_Start = 400,
eRegTheme,          ///< Index 401: Name of the active theme
eRegTheme_InstallPath,    ///< Index 402: Installation path of the active theme
eRegTheme_End,          ///< Index 403

```

```

// - Avatar -----
eRegAvatar_Start = 500,
eRegAvatar,          ///< Index 501: Name of the active avatar
eRegAvatar_InstallPath,    ///< Index 502: Installation path of the active avatar
eRegAvatar_Idle1,        ///< Index 503: Idle1
eRegAvatar_Idle2,        ///< Index 504: Idle2
eRegAvatar_Idle3,        ///< Index 505: Idle3
eRegAvatar_Idle4,        ///< Index 506: Idle4
eRegAvatar_Idle5,        ///< Index 507: Idle5
eRegAvatar_Positive_Feedback,    ///< Index 508: Positive_Feedback
eRegAvatar_Negative_Feedback,    ///< Index 509: Negative_Feedback
eRegAvatar_Info_Feedback,    ///< Index 510: Info_Feedback
eRegAvatar_Question_Feedback,    ///< Index 511: Question_Feedback
eRegAvatar_Cross_Feedback,    ///< Index 512: Cross_Feedback
eRegAvatar_Help,          ///< Index 513: Help
eRegAvatar_Help_Search,    ///< Index 514: Help_Search
eRegAvatar_Question_Name,    ///< Index 515: Question_Name
eRegAvatar_Question_Bday,    ///< Index 516: Question_Bday
eRegAvatar_PIN_Prompt,    ///< Index 517: PIN_Prompt
eRegAvatar_PIN_Confirmation,    ///< Index 518: PIN_Confirmation
eRegAvatar_Switch_On,    ///< Index 519: Switch_On
eRegAvatar_Switch_Off,    ///< Index 520: Switch_Off
eRegAvatar_Screen_Saver1,    ///< Index 521: Screen_Saver1
eRegAvatar_Screen_Saver2,    ///< Index 522: Screen_Saver2
eRegAvatar_VIP_Cultivation,    ///< Index 523: VIP_Cultivation
eRegAvatar_Phone_Feature,    ///< Index 524: Phone_Feature
eRegAvatar_Christmas,    ///< Index 525: Christmas
eRegAvatar_Santa_Claus,    ///< Index 526: Santa_Claus
eRegAvatar_Valentine_Day,    ///< Index 527: Valentine_Day
eRegAvatar_Halloween,    ///< Index 528: Halloween
eRegAvatar_Chinese_New_Year,    ///< Index 529: Chinese_New_Year
eRegAvatar_Birthday,    ///< Index 530: Birthday
eRegAvatar_Users_Birthday,    ///< Index 531: Users_Birthday
eRegAvatar_Memo,    ///< Index 532: Memo
eRegAvatar_Voice_Memo,    ///< Index 533: Voice_Memo
eRegAvatar_Call_Reminder,    ///< Index 534: Call_Reminder
eRegAvatar_Meeting,    ///< Index 535: Meeting

```

---

Document No.:	A30880-A10-A001-75-D376
Revision:	Master R75
Revision Date:	10.February, 2006

```

eRegAvatar_SMS,          ///< Index 536: SMS
eRegAvatar_MMS,          ///< Index 537: MMS
eRegAvatar_Alarm_Clock,  ///< Index 538: Alarm_Clock
eRegAvatar_Battery_Charging, ///< Index 539: Battery_Charging
eRegAvatar_Battery_Low,  ///< Index 540: Battery_Low
eRegAvatar_Holiday,      ///< Index 541: Holiday
eRegAvatar_Mute_Sound,   ///< Index 542: Mute_Sound
eRegAvatar_Keypad_Lock,  ///< Index 543: Keypad_Lock
eRegAvatar_Spare_1,      ///< Index 544: Spare_1
eRegAvatar_Spare_2,      ///< Index 545: Spare_2
eRegAvatar_Spare_3,      ///< Index 546: Spare_3
eRegAvatar_Spare_4,      ///< Index 547: Spare_4
eRegAvatar_Spare_5,      ///< Index 548: Spare_5
eRegAvatar_Spare_6,      ///< Index 549: Spare_6
eRegAvatar_Spare_7,      ///< Index 550: Spare_7
eRegAvatar_Spare_8,      ///< Index 551: Spare_8
eRegAvatar_Spare_9,      ///< Index 552: Spare_9
eRegAvatar_Spare_10,     ///< Index 553: Spare_10

// -----
eRegAvatar_End           ///< Index 554
} E_RegistryHMIKeys;

```

## 5.2 Enum E\_AuMa\_Purpose

```

typedef enum tag_AuMa_Purpose
{
    E_AUMA_PURPOSE_MINITEM=-1,          ///

```

Document No.: A30880-A10-A001-75-D376  
 Revision: Master R75  
 Revision Date: 10. February, 2006



```

E_AUMA_PURPOSE_PTT_SIGNAL,    ///

```

## 5.3 typedef enum SAE\_Event\_definitions

### 5.3.1 Enums for S75, SL75, S68

```

typedef enum SAE_Event_definitions
{
    E_SAE_EVENT_DUMMY_MIN = INT_MIN, ///< Dummy value to force the size of
                                     ///< this enum to the size of int, like
                                     ///< ANSI-C.

    E_SAE_EVENT_MTC_START_MARKER = 0, ///< Dummy value to mark the starting of MTC events
    E_SAE_EVENT_MTC_LINE1 = E_SAE_EVENT_MTC_START_MARKER, ///< Call on line 1
    E_SAE_EVENT_MTC_LINE2,    ///< Call on line 2
    E_SAE_EVENT_MTC_PB,       ///< Phone/Addressbook call
    E_SAE_EVENT_MTC_AB_DISTINCTIVE1, ///< Call adressbook group 1
    E_SAE_EVENT_MTC_AB_DISTINCTIVE2, ///< Call adressbook group 2
    E_SAE_EVENT_MTC_AB_DISTINCTIVE3, ///< Call adressbook group 3
    E_SAE_EVENT_MTC_AB_DISTINCTIVE4, ///< Call adressbook group 4
    E_SAE_EVENT_MTC_AB_DISTINCTIVE5, ///< Call adressbook group 5
    E_SAE_EVENT_MTC_AB_DISTINCTIVE6, ///< Call adressbook group 6
    E_SAE_EVENT_MTC_AB_DISTINCTIVE7, ///< Call adressbook group 7
    E_SAE_EVENT_MTC_AB_DISTINCTIVE8, ///< Call adressbook group 8

```

Document No.:	A30880-A10-A001-75-D376
Revision:	Master R75
Revision Date:	10.February, 2006

---

```

E_SAE_EVENT_MTC_AB_DISTINCTIVE9, ///< Call addressbook group 9
E_SAE_EVENT_RING_ONLY,           ///< MTC with sound only
E_SAE_EVENT_SILENT_MTC,          ///< MTC effect for vibra and light
E_SAE_EVENT_MTC_END_MARKER = E_SAE_EVENT_SILENT_MTC, ///< Dummy value to mark the ending of MTC events
E_SAE_EVENT_MMS,                 ///< Incoming MMS
E_SAE_EVENT_SMS,                 ///< Incoming SMS
E_SAE_EVENT_CBS,                 ///< Incoming CBS
E_SAE_EVENT_ALARM_CLOCK,         ///< Expired Alarm Clock
E_SAE_EVENT_ORG_ALARM,           ///< Expired Organizer Alarm
E_SAE_EVENT_POC_RINGER,          ///< Push to talk alarm
E_SAE_EVENT_IMPS,                ///< Chat Client , IMPS
E_SAE_EVENT_EMAIL,               ///< Incoming Email
E_SAE_EVENT_STARTUP,             ///< Mobile startup event
E_SAE_EVENT_SHUTDOWN,            ///< Mobile shutdown event
E_SAE_EVENT_FAX_DATA,            ///< Fax Data
E_SAE_EVENT_FAX_ALERT,           ///< Fax Alert
E_SAE_EVENT_SLIDER_OPEN,         ///< Slider open (if supported)
E_SAE_EVENT_SLIDER_CLOSE,        ///< Slider close (if supported)
E_SAE_EVENT_CAMERAClick,         ///< Cameraclick
E_SAE_EVENT_VIDEOCLICK,          ///< Videoclick
E_SAE_EVENT_LOWBAT,              ///< LowBat event
E_SAE_EVENT_COUNTDOWN_EXPIRED,   ///< Countdown expired event
E_SAE_EVENT_MISSED_EVENTS,        ///< When any missed event is indicated in idle mode
E_SAE_EVENT_NET_SEARCH,           ///< When device is searching for a network
E_SAE_EVENT_MEDIAPLAYER,          ///< When Media Player plays sound
E_SAE_EVENT_CALL_WAITING,         ///< Used for Call waiting as an seperate event
E_SAE_EVENT_WAP_PUSH_AUDIO,       ///< WAP PUSH event only audio
E_SAE_EVENT_WAP_PUSH_EFFECT,      ///< WAP PUSH event only effect
E_SAE_EVENT_SMS_RING_ONLY,        ///< SMS ringing only
E_SAE_EVENT_LOWBAT_INDICATION,    ///< LowBat Indecation, comes as an warning tone
E_SAE_EVENT_UNKNOWN,              ///< Unknown event
E_SAE_EVENT_DUMMY_MAX = INT_MAX  ///< Dummy value to force the size of this enum to size of int, like
                                  ///< ANSI-C.
} E_SAE_Event;

```

### 5.3.2 Enums for EL71

```

typedef enum SAE_Event_definitions
{
    E_SAE_EVENT_DUMMY_MIN = INT_MIN, ///< Dummy value to force the size of
                                     ///< this enum to the size of int, like
                                     ///< ANSI-C.

    E_SAE_EVENT_MTC_START_MARKER = 0, ///< Dummy value to mark the starting of MTC events
    E_SAE_EVENT_MTC_LINE1 = E_SAE_EVENT_MTC_START_MARKER, ///< Call on line 1
    E_SAE_EVENT_MTC_LINE2,           ///< Call on line 2
    E_SAE_EVENT_MTC_PB,               ///< Phone/Addressbook call
    E_SAE_EVENT_MTC_AB_DISTINCTIVE1, ///< Call addressbook group 1
    E_SAE_EVENT_MTC_AB_DISTINCTIVE2, ///< Call addressbook group 2
    E_SAE_EVENT_MTC_AB_DISTINCTIVE3, ///< Call addressbook group 3
    E_SAE_EVENT_MTC_AB_DISTINCTIVE4, ///< Call addressbook group 4
    E_SAE_EVENT_MTC_AB_DISTINCTIVE5, ///< Call addressbook group 5
    E_SAE_EVENT_MTC_AB_DISTINCTIVE6, ///< Call addressbook group 6
    E_SAE_EVENT_MTC_AB_DISTINCTIVE7, ///< Call addressbook group 7
    E_SAE_EVENT_MTC_AB_DISTINCTIVE8, ///< Call addressbook group 8
    E_SAE_EVENT_MTC_AB_DISTINCTIVE9, ///< Call addressbook group 9
    E_SAE_EVENT_MTC_DISTRIBUTION_LIST, ///< Distributioun list
    E_SAE_EVENT_RING_ONLY,             ///< MTC with sound only
    E_SAE_EVENT_SILENT_MTC,            ///< MTC effect for vibra and light
    E_SAE_EVENT_MTC_END_MARKER = E_SAE_EVENT_SILENT_MTC, ///< Dummy value to mark the ending of MTC events
    E_SAE_EVENT_MMS,                   ///< Incoming MMS
    E_SAE_EVENT_SMS,                   ///< Incoming SMS
    E_SAE_EVENT_CBS,                   ///< Incoming CBS
    E_SAE_EVENT_ALARM_CLOCK,           ///< Expired Alarm Clock
    E_SAE_EVENT_ORG_ALARM,             ///< Expired Organizer Alarm
    E_SAE_EVENT_POC_RINGER,            ///< Push to talk alarm
    E_SAE_EVENT_IMPS,                 ///< Chat Client , IMPS

```

---

Document No.: A30880-A10-A001-75-D376  
 Revision: Master R75  
 Revision Date: 10. February, 2006

```

E_SAE_EVENT_EMAIL,          ///< Incoming Email
E_SAE_EVENT_STARTUP,        ///< Mobile startup event
E_SAE_EVENT_SHUTDOWN,       ///< Mobile shutdown event
E_SAE_EVENT_FAX_DATA,       ///< Fax Data
E_SAE_EVENT_FAX_ALERT,      ///< Fax Alert
E_SAE_EVENT_SLIDER_OPEN,    ///< Slider open (if supported)
E_SAE_EVENT_SLIDER_CLOSE,   ///< Slider close (if supported)
E_SAE_EVENT_CAMERAClick,    ///< Camera click
E_SAE_EVENT_VIDEOCLICK,     ///< Videoclick
E_SAE_EVENT_LOWBAT,         ///< LowBat event
E_SAE_EVENT_COUNTDOWN_EXPIRED, ///< Countdown expired event
E_SAE_EVENT_MISSED_EVENTS,   ///< When any missed event is indicated in idle mode
E_SAE_EVENT_NET_SEARCH,      ///< When device is searching for a network
E_SAE_EVENT_MEDIAPLAYER,     ///< When Media Player plays sound
E_SAE_EVENT_CALL_WAITING,    ///< Used for Call waiting as an separate event
E_SAE_EVENT_WAP_PUSH_AUDIO,  ///< WAP PUSH event only audio
E_SAE_EVENT_WAP_PUSH_EFFECT, ///< WAP PUSH event only effect
E_SAE_EVENT_SMS_RING_ONLY,   ///< SMS ringing only
E_SAE_EVENT_LOWBAT_INDICATION, ///< LowBat Indecation, comes as an warning tone
E_SAE_EVENT_UNKNOWN,        ///< Unknown event
E_SAE_EVENT_DUMMY_MAX = INT_MAX ///< Dummy value to force the size of this enum to size of int, like
                                ///< ANSI-C.
} E_SAE_Event;

```

## 6 Errors and Messages

This section provides information on the final result code of a command execution (+CMS ERROR: <err>) and indicates an error related to mobile equipment or network.

### 6.1 Summary of CME ERRORS (+CME ERROR) related to 3GPP TS 27.007

Table 6-1 lists the numbers and meaning of CME errors (+CMS ERROR: <err>) related to 3GPP TS 27.007 [15].

**Note:** Values smaller than 256 are reserved.

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adapter link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	invalid index
22	not found
23	Memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	Network timeout
32	Network not allowed emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
100	Unknown

103	Illegal MS (#3) (Values in parentheses are GSM 04.08 cause codes, see [8].)
106	Illegal ME (#6)
107	GPRS services not allowed (#7)
111	PLMN not allowed (#11)
112	Location area not allowed (#12)
113	Roaming not allowed in this location area (#13)
132	service option not supported (#32)
133	requested service option not subscribed (#33)
134	service option temporarily out of order (#34)
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class
256	Operation temporarily not allowed
257	call barred
258	phone is busy
259	user abort
260	invalid dial string
261	Supplementary service not executed
262	SIM blocked
263	Supplementary service rejected

Table 6-1: CME ERRORS related to 3GPP TS 27.007

## 6.2 Summary of CMS ERRORS (+CMS ERROR) related to 3GPP TS 27.005

Table 6-2 lists the numbers and meaning of CMS errors related to 3GPP TS 27.005 [14].

<err> code	Meaning
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported

129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be executed
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	D0 SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
255	Unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode parameter
305	Invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
331	no network service
332	Network timeout
340	NO +CNMA ACK EXPECTED
500	Unknown error
512	User abort

Table 6-2: CMS ERRORS related to 3GPP TS 27.005

### 6.3 GSM return values issued by AT+CEER

Table 6-7 lists the GSM return values issued by the AT+CEER command in the form <x> , <y>, where x indicates the type of the value returned and y denotes the reason why the call was terminated. Table 6-7 provides the values for the applications handled by AT+CEER (x values). For more detailed information on meaning of the y values see tables Table 6-8 through Table 6-13:

Value	Meaning
2	GSM values for Radio Resource (see section 6.3.1)
4	GSM values for Mobility Manager (see section 6.3.2)
8	GSM values for Call Control (see section 6.3.3)

**Table 6-3 GSM return values issued by AT+CEER**

#### 6.3.1 Return values issued by AT+CEER for Radio Resource

Value	Meaning
0	NORMAL EVENT
1	ABNORMAL RELEASE, UNSPECIFIED
2	ABNORMAL RELEASE, CHANNEL UNACCEPTABLE
3	ABNORMAL RELEASE, TIMER EXPIRED
4	ABNORMAL RELEASE, NO ACTIVITY ON RADIO PATH
5	PREEMPTIVE RELEASE
6	PREEMPTIVE RELEASE
8	HANDOVER IMPOSSIBLE, TA OUT OF RANGE
9	CHANNEL MODE UNACCEPTABLE
10	FREQUENCY NOT IMPLEMENTED
12	LOWER LAYER FAILURE
65	CALL ALREADY CLEARED
95	SEMANTICALLY INCORRECT MESSAGE
96	INVALID MANDATORY INFORMATION
97	MESSAGE TYPE NOT IMPLEMENTED
98	MESSAGE NOT COMP W. STATE
99	IE NOT IMPLMENTED
100	CONDITIONAL IE ERROR
101	NO CELL ALLOCATION AVAILABLE
111	PROTOCOL ERROR UNSPECIFIED

**Table 6-4: Radio Resource return values issued by AT+CEER**

#### 6.3.2 Return values issued by AT+CEER for Mobility Manager

Value	Meaning
2	IMSI UNKNOWN IN HLR
3	ILLEGAL MS
4	IMSI UNKNOWN IN VLR
5	IMEI NOT ACCEPTED
6	ILLEGAL ME
11	PLMN NOT ALLOWED
12	LA NOT ALLOWED
13	ROAMING N. ALL. in this LA
15	NO SUITABLE CELLS in this LA

17	NETWORK FAILURE
20	MAC FAILURE (sent to network)
21	SYNCH FAILURE (sent to network)
22	CONGESTION
23	GSM auth. Unaccept. (sent to network, UMTS only)
32	SERVICE OPT. NOT SUPPORTED
33	REQ. SERVICE NOT SUBSCRIBED
34	SERV. TEMPOR. OUT OF ORDER
38	CALL CANNOT BE IDENTIFIED
95	SEMANTICALLY INCORRECT MESSAGE
96	INVALID MANDATORY INFORMATION

**Table 6-5: Mobility Manager return values issued by AT+CEER**

### 6.3.3 Return values issued by AT+CEER for Call Control

Value	Meaning
1	UNASSIGNED NUMBER
3	NO ROUTE TO DESTINATION
6	CHANNEL UNACCEPTABLE
8	OPERATOR DETERMINED BARRING
16	NORMAL CLEARING
17	USER BUSY
18	NO USER RESPONDING
19	USER ALERTING, NO ANSWER
21	CALL REJECTED
22	NUMBER CHANGED
25	PRE-EMPTION (sent to network)
26	NON SELECTED USER CLEARING
27	DESTINATION OUT OF ORDER
28	INCOMPLETE NUMBER
29	FACILITY REJECTED
30	RESPONSE TO STATUS ENQUIRY
31	NORMAL, UNSPECIFIED
34	NO CIRCUIT/CHANNEL AVAILABLE
38	NETWORK OUT OF ORDER
41	TEMPORARY FAILURE
42	SWITCHING EQUIPMENT CONGESTION
43	ACCESS INFORMATION DISCARDED
44	REQUESTED CHANNEL NOT AVAIL.
47	RESOURCES UNAVAILABLE, UNSPEC
49	QUALITY OF SERVICE UNAVAILABLE
50	REQ. FACILITY NOT SUBSCRIBED
55	INCOMING CALLS BARRED IN CUG
57	BEARER CAPABILITY NOT AUTH.
58	BEARER CAP. NOT PRES.AVAIL.
63	SERVICE OR OPTION NOT AVAIL.
65	BEARER SERVICE NOT IMPL.
68	ACM EQUAL OR GREATER ACM-MAX
69	REQ. FACILITY NOT IMPLEMENTED
70	ONLY RESTRICTED DIGITAL INFORMATION BEARER CAP. AVAIL.
79	SERVICE OR OPTION NOT IMPL.



81	INVALID TI
87	USER NOT MEMBER OF CUG
88	INCOMPATIBLE DESTINATION
91	INVALID TRANSIT NETWORK SELECTION
95	SEMANTICALLY INCORRECT MESSAGE
96	INVALID MANDATORY INFORMATION
97	MESSAGE TYPE NOT IMPLEMENTED
98	MESSAGE NOT COMP W. CC STATE
99	IE NOT IMPLMENTED
100	CONDITIONAL IE ERROR
101	MESSAGE NOT COMP W. CC STATE
102	RECOVERY ON TIMER EXPIRY
111	PROTOCOL ERROR, UNSPECIFIED
127	INTERWORKING, UNSPECIFIED

**Table 6-6: Call control return values issued by AT+CEER**

## 6.4 GPRS return values issued by AT+CEER

Table 6-7 lists the GPRS return values issued by the AT+CEER command in the form <x> , <y>, where x indicates the type of the value returned and y denotes the reason why the call was terminated. Table 6-7 provides the values for the applications handled by AT+CEER (x values). For more detailed information on meaning of the y values see tables Table 6-8 through Table 6-13:

Value	Meaning
48	GPRS Layer 3 Mobility Management (see section 6.4.1)
50	GSM values of Session Manager (see section 6.4.2)
51	Internal values of Session Manager (see section 6.4.3)
241	Internal values of GAPI (see section 6.4.4)
242	Internal values of Link Manager (see section 6.4.5)
243	Internal values of IP stack (see section 6.4.6)

**Table 6-7 GPRS return values**

### 6.4.1 Return values issued by AT+CEER for GPRS Layer 3 Mobility Management

Value	Meaning
2	IMSI is unknown in HLR
3	MS is illegal
6	ME is illegal
7	GPRS services not allowed
8	GPRS services not allowed in combination with non-GPRS services
9	MS cannot be identified
10	Implicit detachment
11	PLMN not allowed
12	Location area not allowed
13	Roaming not allowed in current location area
14	GPRS services not allowed in current PLMN
16	MSC temporarily unreachable
17	Network failure
22	Congestion
48 – 63	Retry upon entry into new cell low – high

95	Message semantically incorrect
96	Mandatory information invalid
97	Message type does not exist or is not implemented
98	Message type incompatible with protocol state
99	Information element does not exist or is not implemented
100	Conditional error
101	Message incompatible with protocol state
111	Unspecified protocol error

**Table 6-8: Return values issued by AT+CEER for GPRS Layer 3 Mobility Management****6.4.2 GSM return values issued by AT+CEER for Session Manager**

Value	Meaning
25	LLC or SNDTCP failure
26	Insufficient resources
27	Missing or unknown APN
28	PDP address or type unknown
29	User authentication failed
30	Activation rejected by GGSN
31	Activation rejected for unspecified reason
32	Service option not supported
33	Requested service option not subscribed
34	Service option temporarily out of order
35	NSAPI already used
36	Regular deactivation
37	QoS not accepted
38	Network failure
39	Reactivation required
81	Invalid transaction identifier value
95	Message semantically incorrect
96	Mandatory information invalid
97	Message type does not exist or is not implemented
98	Message type incompatible with protocol state
99	Information element does not exist or is not implemented
100	Conditional IE error
101	Message incompatible with protocol state
111	Unspecified protocol error

**Table 6-9: GMM return values issued by AT+CEER****6.4.3 Internal values of Session Manager issued by AT+CEER**

Value	Meaning
3	T3380 timer expired
4	DeactAct
5	DeactActReject
6	DeactActStaticPDPAddressCollision
7	Unspecified protocol error

**Table 6-10: Internal values of Session Manager issued by AT+CEER**

#### 6.4.4 Internal values GAPI issued by AT+CEER

Value	Meaning
0	Regular deactivation of the call
1	Action temporarily not allowed
2	Wrong connection type
3	Specified data service profile invalid
4	PDP type or address is unknown
255	Undefined

Table 6-11: GAPI values issued by AT+CEER

#### 6.4.5 Internal values of Link Manager issued by AT+CEER

Value	Meaning
0	Regular call deactivation
1	Action temporarily not allowed
2	Bearer invalid
3	Specified data service profile invalid
4	GPRS profile invalid
5	CSD profile invalid
17	Modem in use
18	Modem not responding
19	Modem error
20	Timeout while waiting for modem
21	Modem nocarrier
22	Modem no dialtone
23	Modem busy
24	Modem dial timeout
25	Modem call lost
255	Undefined

Table 6-12: LMAN return values issued by AT+CEER

#### 6.4.6 Internal values of IP stack issued by AT+CEER (ENIP\_LOC\_OWN)

Value	Meaning
0	Regular call deactivation
1	LCP stopped
255	Undefined

Table 6-13: ENIP return values issued by AT+CEER

### 6.5 List of keys implemented for AT+CKPD / AT^SKPD

The following keys are implemented for the AT+CKPD and AT^SKPD commands:

Character (AT+CKPD)	key value (dec) (AT^SKPD)	Comment
#	35	Hash (number sign)

%	37	Percent sign
*	42	asterisk
0..9	48 .. 57	number keys
:		Colon; escape character for manufacturer specific keys
<	61	Left arrow
>	62	Right arrow
C/c	10	clear display (C/CLR)
E/e	12	connection end (END)
F/f	26	Navi centre
S/s	11	connection start (SEND)
V/v	14	Down arrow
W/w		pause character
Y/y	9	delete last character (C)
[	1	soft key 1
]	4	soft key 2
^	59	Up arrow
<b>BenQ specific keys</b>		
+		side key up with + sign
-		side key down with - sign
M		right side key
O/o		short / operator key (planet with two arrows around)
X/x		Hexanumeric string of all BenQ Keys

## 6.6 Use of BenQ specific Key O/o

“.” following the CKPD command indicates the use of manufacturer specific keys. The new BenQ key O/o is defined to use the short key which is sometimes used in R65 e.g. the key under the navi in the S65 model.

A command could look like.

- AT+CKPD=:O <cr>
- AT+CKPD=:”O”<cr>
- AT+CKPD=:o <cr>
- AT+CKPD=:”o”<cr>

The short key will normally call the browser menu by default but this behavior can be changed by the user

## 6.7 Use of BenQ specific Key X/x

“.” following the CKPD command indicates the use of manufacturer specific keys. The subsequent X states a that a string may be appended, which can include all BenQ keys in hexadecimal format. Otherwise an error will be indicated.

A command could look like.

- AT+CKPD=:X4142434445 <cr>
- AT+CKPD=:”X4142434445”<cr>
- AT+CKPD=:x4142434445 <cr>
- AT+CKPD=:”x4142434445”<cr>

Both will result in sending the keys 41 , 42 , 43 , 44 and 45 to the mobil, which will generate different keys depending on the language settings of the mobile. In case of an English version this would be a,b,c,d and e.

The application must handle the state of the mobile, because not all keys behave the same way in different states. So no characters result an effect, when neo is not in crossed mode for example. This will not be indicated in by an error.

Keys not useable in the current mode are just ignored. Some modes can be set by keys, as for example crossing mode by 0x17 and 0x18. For detailed key information see keypad.h All BenQ key stated there can be used , too.

## 6.8 List of Commands related to CSCS / UCS2

The following commands relate to the AT+CSCS command and UCS2:

- AT+CNUM
- AT+CPBR
- AT+CPBW
- AT+CPUC
- AT^SDBR
- AT^SSET

## 6.9 Result codes

Table 6-14 lists the numbers of result codes and provides their meaning:

Indication	Numeric	Meaning
OK	0	Command executed, no errors, Wake up after reset
CONNECT	1	Link established
RING	2	Ring detected
NO CARRIER	3	Link not established or disconnected
ERROR	4	Invalid command or command line too long
NO DIALTONE	6	No dial tone, dialling impossible, wrong mode
BUSY	7	Remote station busy
CONNECT 2400	10	Link with 2400 bps
CONNECT 4800	30	Link with 4800 bps
CONNECT 9600	32	Link with 9600 bps
CONNECT 14400	33	Link with 14400 bps
CONNECT 2400/RLP	47	Link with 2400 bps and Radio Link Protocol
CONNECT 4800/RLP	48	Link with 4800 bps and Radio Link Protocol
CONNECT 9600/RLP	49	Link with 9600 bps and Radio Link Protocol
CONNECT 14400/RLP	50	Link with 14400 bps and Radio Link Protocol

**Table 6-14: Result codes**

For detailed information on uncollected result codes issued by Remote Control-related calls see [2].

## 6.10 List of \*# codes

The commands listed in Table 6-15 can be used with ATD (only for voice calls):

*# code	Functionality	Possible response(s)
*#06#	Query IMEI:	<IMEI> / OK
**04[2]*oldPin*newPin[2]*newPin[2]#	Change SIM pwd:	+CME ERROR/ OK
**05[2]*unblKey*newPin[2]*newPin[2]#	Change/Unblocking SIM pwd:	
*[*]03*[ZZ]*oldPw*newPw*newPw#	Registration of network password:	
*#30#	Interrogation CLIP	AT+CLIP / OK
*#31#	Interrogation CLIR	AT+CLIR : <n>,<m> OK
*#76#	Interrogation COLP	AT+COLP : 0,<m> OK
*#77#	Interrogation COLR (Connection line interpretation restriction)	+COLR : 0,<m> OK
(choice of *,#,*,*,##)21*DN*BS#	Act/deact/int/reg/eras CFU	AT+CCFC
(choice of *,#,*,*,##)67*DN*BS#	Act/deact/int/reg/eras CF busy	
(choice of *,#,*,*,##)61*DN*BS*T#	Act/deact/int/reg/eras CF no reply	
(choice of *,#,*,*,##)62*DN*BS#	Act/deact/int/reg/eras CF no reach	
(choice of *,#,*,*,##)002*DN*BS*T#	Act/deact/int/reg/eras CF all	
(choice of *,#,*,*,##)004*DN*BS*T#	Act/deact/int/reg/eras CF all cond.	
(choice of *,#,*,*)43*BS#	Activation/deactivation/int WAIT	AT+CCWA
(choice of *,#,*,*)33*Pw*BS#	Act/deact/int BAOC	AT+CLCK
(choice of *,#,*,*)331*Pw*BS#	Act/deact/int BAOIC	
(choice of *,#,*,*)332*Pw*BS#	Act/deact/int BAOIC exc.home	
(choice of *,#,*,*)35*Pw*BS#	Act/deact/int. BAIC	
(choice of *,#,*,*)351*Pw*BS#	Act/deact/int BAIC roaming	
#330*Pw*BS#	Deact. All Barring Services	
#333*Pw*BS#	Deact. All Outg.Barring Services	
#353*Pw*BS#	Deactivation. All Inc.Barring Services	

Table 6-15: List of \*# codes

The abbreviations used in Table 6-15 have the following meaning:

ZZ	type of supplementary services	330	Barring services
ZZ		----	All services
DN	dialling number	0-9	string of digits
BS	basic service:Voice	11	Voice
		16	Sms
		13	Fax
		12	Sms+fax
		19	Voice+fax
		10	Voice+SMS+fax
		25	Data circuit asynchron
		24	Data circuit synchron
		27	PAD
		26	packet
		21	data circuit async.+PAD
		22	data circuit sync.+packet
		20	data circ.Async+sync.+PAD+ packet
		----	all services
T	time in seconds		
Pw	network password		



## 7 Index

AT12		AT^SPBS	135
AT&C	13	AT^SPIC	136
AT&D	13	AT^SPLM	137
AT&F	14	AT^SPLR	137
AT^S KPD	124	AT^SPLW	137
AT^SABD	105	AT^SPRF	138
AT^SACD	105	AT^SPST	138
AT^SACM	106	AT^SPTT	139
AT^SAKA	107	AT^SPWD	139
AT^SAOF	107	AT^SQWE	140
AT^SAPO	149	AT^SRMP	141
AT^SBAC	108	AT^SSAT	141
AT^SBIG	108	AT^SSCL	143
AT^SBLK	108	AT^SSET	144
AT^SBMH	109	AT^SSTK	145
AT^SBNR	110	AT^STLN	146
AT^SBNW	112	AT^STRC	150
AT^SCAM	113	AT^STTP	146
AT^SCCM	114	AT^STWL	147
AT^SCHNULLI	149	AT^SVIB	147
AT^SCHOBI	150	AT^SVID	148
AT^SCID	114	AT+BINP	101
AT^SCKA	114	AT+BLDN	101
AT^SCKH	115	AT+BRSF	101
AT^SCKS	115	AT+CACM	35
AT^SCNI	116	AT+CALM	35
AT^SCRE	117	AT+CAMM	36
AT^SDBR	117	AT+CAOC	23
AT^SDLD	118	AT+CBC	36
AT^SDLY	118	AT+CBST	86
AT^SGAUTH	118	AT+CCFC	23
AT^SGDCONT	119	AT+CCLK	36
AT^SGDI	120	AT+CCWA	24
AT^SGDV	120	AT+CEER	21, 177, 179
AT^SGND	121	AT+CGACT	55
AT^SGRT	49	AT+CGANS	55
AT^SHFR	122	AT+CGATT	56
AT^SICO	123	AT+CGAUTO	56
AT^SIFS	123	AT+CGCLASS	57
AT^SILL	123	AT+CGCMOD	57
AT^SINT	124	AT+CGDATA	57
AT^SJAV	124	AT+CGDCONT	58
AT^SKYT	125	AT+CGDSCONT	59
AT^SLCK	126	AT+CGEQMIN	60
AT^SLDC	125	AT+CGEQREQ	62
AT^SLNG	127	AT+CGEREP	65
AT^SMDR	127	AT+CGMI	18
AT^SMEL	128	AT+CGMM	18
AT^SMGL	129	AT+CGMR	19, 121
AT^SMGO	130	AT+CGPADDR	69
AT^SMGR	131	AT+CGQMIN	66
AT^SMIB	131	AT+CGQREQ	68
AT^SMPL	132	AT+CGREG	69
AT^SMSO	132	AT+CGSMS	70
AT^SNFS	133	AT+CGSN	19
AT^SNFV	133	AT+CGTFT	71
AT^SOBX	134	AT+CHLD	25
AT^SPBA	134	AT+CHUP	21
AT^SPBC	134	AT+CIMI	19
AT^SPBG	135	AT+CKPD	19

AT+CLCC .....	25	AT+FCQ .....	91
AT+CLCK .....	26	AT+FCR .....	92
AT+CLIP .....	27	AT+FDCC .....	92
AT+CLIR .....	28	AT+FDFFC .....	93
AT+CLVL .....	39	AT+FDIS .....	93
AT+CMEC .....	39	AT+FDR .....	95
AT+CMEE .....	74	AT+FDT .....	95
AT+CMER .....	40	AT+FECM .....	88
AT+CMGC .....	76	AT+FET .....	96
AT+CMGD .....	76	AT+FK .....	96
AT+CMGF .....	77	AT+FLID .....	96
AT+CMGL .....	77	AT+FLNFC .....	88
AT+CMGR .....	78	AT+FLPL .....	88
AT+CMGS .....	78	AT+FMDL .....	97
AT+CMGW .....	79	AT+FMFR .....	97
AT+CMMS .....	79	AT+FMINS .....	88
AT+CMSS .....	80	AT+FOPT .....	97
AT+CMUT .....	41	AT+FPHCTO .....	97
AT+CMUX .....	80	AT+FRBC .....	88
AT+CNMA .....	80	AT+FREL .....	88
AT+CNMI .....	81	AT+FREV .....	98
AT+CNUM .....	29	AT+FRH .....	98
AT+COLP .....	30	AT+FRM .....	98
AT+COPN .....	30	AT+FRS .....	99
AT+COPS .....	31	AT+FSPL .....	88
AT+CPAS .....	42	AT+FTBC .....	88
AT+CPBF .....	42	AT+FTH .....	99
AT+CPBR .....	43	AT+FTM .....	99
AT+CPBS .....	44	AT+FTS .....	100
AT+CPBW .....	44	AT+FVRFC .....	100
AT+CPIN .....	45	AT+FWDFC .....	88
AT+CPMS .....	83	AT+GCAP .....	104
AT+CPOL .....	32	AT+GSN .....	20
AT+CPUC .....	47	AT+IPR .....	104
AT+CPWD .....	32	AT+NREC .....	102
AT+CR .....	21	AT+VGS .....	103
AT+CRC .....	22	AT+VTD .....	74
AT+CREG .....	33	AT+VTS .....	74
AT+CRLP .....	86	AT+WS46 .....	20
AT+CRMP .....	47	ATA .....	12
AT+CRSL .....	48	ATB .....	12
AT+CRSM .....	48	ATD .....	12, 15, 54
AT+CSCA .....	84	ATDL .....	15, 16
AT+CSCB .....	84	ATH .....	12
AT+CSCS .....	20	ATI .....	12
AT+CSDF .....	49	ATL .....	13
AT+CSMS .....	85	ATM .....	13
AT+CSQ .....	50	ATN .....	14
AT+CSSN .....	34	ATO .....	13, 18, 54
AT+CSTF .....	50	ATQ .....	14
AT+CSVM .....	51	ATQ .....	13
AT+CTZR .....	51	ATS .....	13, 54
AT+CTZU .....	52	ATSREM .....	140
AT+CVIB .....	53	ATV .....	14
AT+FAA .....	88	ATV .....	13
AT+FBADLIN .....	89	ATX .....	13
AT+FBADMUL .....	89	ATZ .....	13
AT+FBOR .....	90	command, developers' .....	149
AT+FCIG .....	90	developers' commands .....	149
AT+FCCLASS .....	91		