

Repair Movies

- mechanical –



Xperia XA1 Plus

G3412, G3416, G3221, G3223, G3226

CONTENTS

1	Disassembly Movie	3
1.1	Disassembly	3
2	Reassembly Movie	4
2.1	Reassembly	4
3	Revision History	5

To view the embedded repair movies in this document, video play back application such as Media Player is required.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.

In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

The movie is based on using G3426 model, the design differences between G3412, G3416, G3421, G3423 and G3426 are minor, therefore please refer to the Working Instruction for detailed instruction.

1 Disassembly Movie

1.1 Disassembly

- | | |
|---|--|
| 1. Cap Tray | 10. RF Cable |
| 2. Battery Cover Assy | 11. Sub PBA Assy |
| 3. Sub Antenna | 12. Battery and Adhesive Battery |
| 4. Main Camera | 13. Side Panel Keys, FP Module Assy and Keys |
| 5. Main PBA | 14. Sidekey FPC Assy |
| 6. CU Label Tray | 15. Side Panel SIM/SD |
| 7. Bracket Main Camera | 16. Display Cover Assy |
| 8. Ear Speaker and Adhesive Ear Speaker | |
| 9. Main Antenna Speaker Box | |

Double click the icon to play back the movie. →



2 Reassembly Movie

2.1 Reassembly

- | | |
|---|----------------------------------|
| 1. Display Cover Assy | 10. Sub Antenna |
| 2. Side Panel SIM/SD | 11. Sub PBA Assy |
| 3. Sidekey FPC Assy | 12. RF Cable |
| 4. Side Panel Keys, FP Module Assy and Keys | 13. Main Antenna Speaker Box |
| 5. Adhesive Ear Speaker and Ear Speaker | 14. Battery and Adhesive Battery |
| 6. Bracket Main Camera | 15. Battery Cover Assy |
| 7. CU Label Tray | 16. Cap Tray |
| 8. Main PBA | |
| 9. Main Camera | |

Double click the icon to play back the movie. →



3 Revision History

Rev.	Date	Changes / Comments
1	2017-Sept-22	Initial release