

Part List - mechanical -



Xperia XA2 Ultra

H32 12, H3223, H42 13, H4223

CONTENTS

1	Part List	3
2	Revision History	12


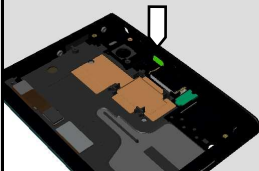 
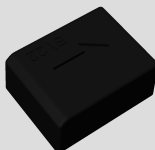 
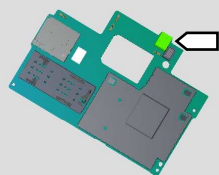 



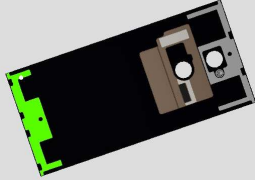 
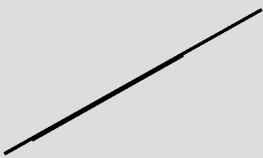 
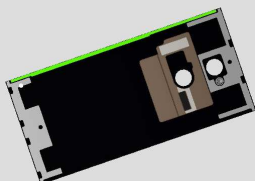 
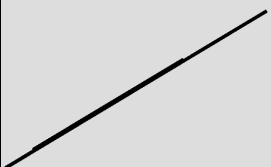 
1 Part List

The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

RLC, Reversed Logistic Classification column for replaced part handling, See the Spare part handling chapter in Mechanical/Generic Repair Manual (1220-1333).

Designation	Part No.	RLC	Part	Location
2nd Mic Mesh	306M24S0B00	C		
2nd Mic Rubber	302A24Q0100	C		
Adhesive Audio Jack	XXCQ100247W	C		
Adhesive Battery Cover Bottom	306Q24Q0900	C		
Adhesive Battery Cover Left	306Q24Q0600	C		
Adhesive Battery Cover Right	306Q24Q0700	C		


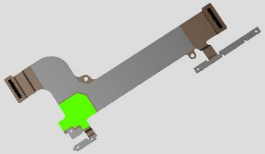 

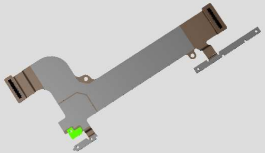 

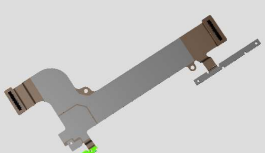 

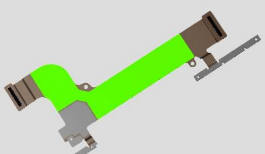 

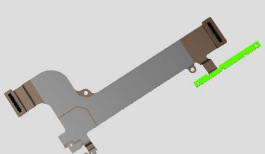 

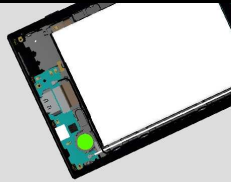 
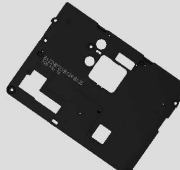 
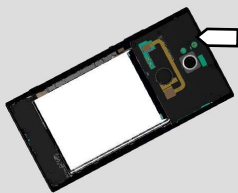 
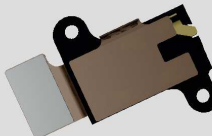 
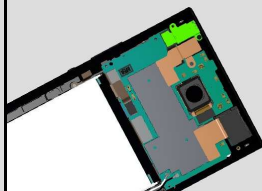 
SONY

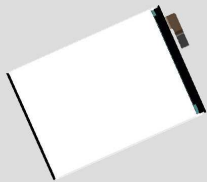 
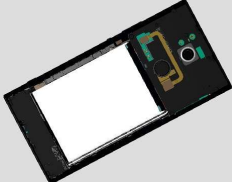 




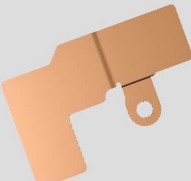 
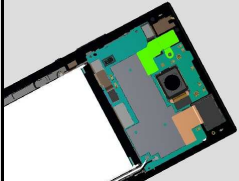 
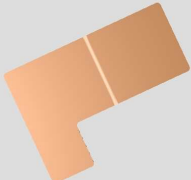 
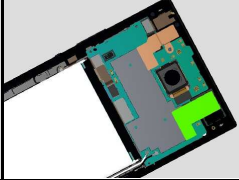 



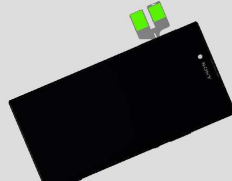 


Part List (mech)

Designation	Part No.	RLC	Part	Location
Adhesive Battery Cover Top	306Q24Q0800	C		
Adhesive Battery Left	306Q24Q0A00	C		
Adhesive Battery Right	306Q24Q0L00	C		
Adhesive Ear Speaker	306M24S0600	C		
Adhesive FP Module	XXCQ100248W	C		
Adhesive Front LED PCB	306Q24Q0500	C		
Adhesive NFC A	XXCQ100254W	C		
Adhesive NFC B	XXCQ100255W	C		

SONY

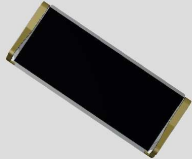 


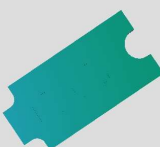 
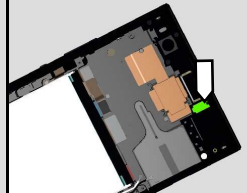 

Part List (mech)

Designation	Part No.	RLC	Part	Location
Adhesive Side Key FPC B	XXCQ100215W	C		
Adhesive Side Key FPC C	XXCQ100216W	C		
Adhesive Side Key FPC Camera Key	XXCQ100213W	C		
Adhesive Side Key FPC Main	XXCQ100214W	C		
Adhesive Side Key FPC Volume Key	XXCQ100212W	C		
Adhesive Vibrator	XXCQ100243W	C		
Antenna Box Assy BT/Wi-Fi	23A1BY22100	B		
Audio Jack FPC	21BY2201600	C		

Designation	Part No.	RLC	Part	Location
Battery	1308-3586	B		
<u>Battery Cover Assy</u> Battery Cover Assy Black Battery Cover Assy Blue Battery Cover Assy Gold Battery Cover Assy Silver	78PC2500020 78PC2500030 78PC2500040 78PC2500010	B		
<u>Cap Tray Assy</u> Cap Tray Assy Dual Black Cap Tray Assy Dual Blue Cap Tray Assy Dual Gold Cap Tray Assy Dual Silver Cap Tray Assy Single Black Cap Tray Assy Single Blue Cap Tray Assy Single Gold Cap Tray Assy Single Silver	306J24Q0800 306J24Q0900 306J24Q0A00 306J24Q0400 306J24Q0500 306J24Q0600 306J24Q0700 306J24Q0200	C		
Conductive Tape Front Camera	306F24Q0200	C		
Conductive Tape Wide-angle Front Camera	306F24Q0100	C		
Conductive Tape Sub Antenna	306A24S0200	C		
CU Label	XXKS100968W	C		
CU Label Tray	306L24Q0300	C		

SONY


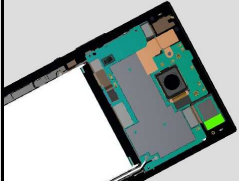 

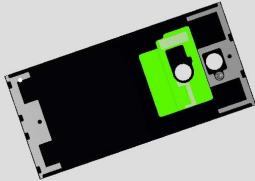 

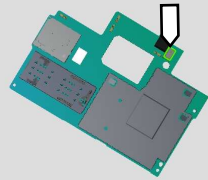 

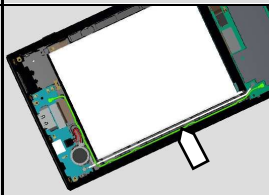 

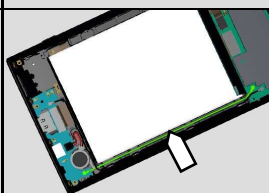 

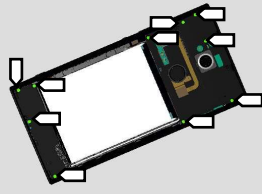 
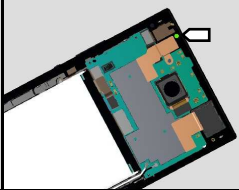 

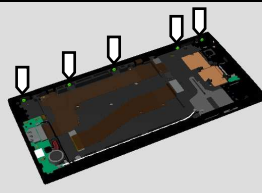 
Part List (mech)

Designation	Part No.	RLC	Part	Location
Ear Speaker	C/22400001600	C		
<u>FP Module Assy</u> FP Module Assy Black FP Module Assy Blue FP Module Assy Gold FP Module Assy Silver	C/76730003600 76730003A00 C/76730003900 C/76730003300	B		
Front Camera	C/76510003100	B		
Wide-angle Front Camera	C/76510003400	B		
<u>Front Cover Assy</u> Front Cover Assy Black Front Cover Assy Blue Front Cover Assy Gold Front Cover Assy Silver	78PC2300020 78PC2300030 78PC2300040 78PC2300010	B		
Front Flash LED PCB	76520000R00	C		
Gasket BtB Audio Jack	303M24Q0400	C		
Gasket BtB Display FPC	303M24Q0900	C		

SONY

Part List (mech)


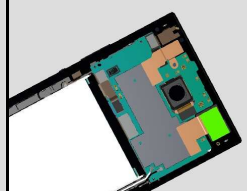 
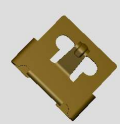 
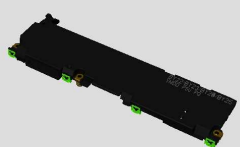 
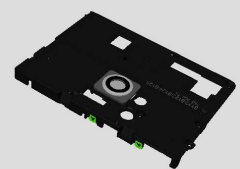 
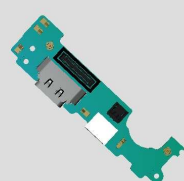 
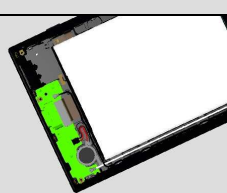 
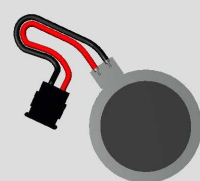 
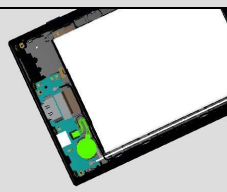 

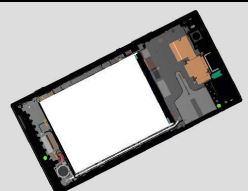 
Designation	Part No.	RLC	Part	Location
Gasket BtB FP Module	303M24S0600	C		
Gasket BtB Wide-angle Front Camera	303M24Q0300	C		
Gasket BtB Side Key FPC	303M24S0500	C		
Gasket BtB Sub PBA	303M24Q0500	C		
<u>Main Antenna & Speaker Box Assy</u> Main Antenna & Speaker Box Assy H3213/H4213/H3223 Main Antenna & Speaker Box Assy H4233	78PC2700010 78PC2700020	B		
Main Camera	C/76510002300	B		
<u>Main Camera Shielding</u> Main Camera Shielding Black Main Camera Shielding Gold Main Camera Shielding Silver	78PC2400060 78PC2400070 78PC2400010	C		
Mylar Battery FPC	306L24Q0200	C		

Designation	Part No.	RLC	Part	Location
Mylar Wide-angle Front Camera	306L24Q0100	C		
NFC Antenna Assy	78PC2600010	C		
P-Sensor Rubber	302A24Q0400	C		
RF Cable Black	73200001U00	C		
RF Cable White	73200001T00	C		
Screw Cross	27000008D00	C		
				
Screw T5	27000008E00	C		

SONY

Part List (mech)

Designation	Part No.	RLC	Part	Location
Screw T5	27000008E00	C		
Side Key FPC Assy	78PC2200010	B		
<u>Side Panel Cap</u> Side Panel Cap Black Side Panel Cap Blue Side Panel Cap Gold Side Panel Cap Silver	254F24Q0G00 254F24Q0I00 254F24Q0J00 254F24Q0200	C		
<u>Side Panel Keys Assy</u> Side Panel Keys Assy Black Side Panel Keys Assy Blue Side Panel Keys Assy Gold Side Panel Keys Assy Silver	78PC2400030 78PC2400040 78PC2400050 78PC2400020	B		
Speaker box Mesh	306M24Q0200	C		
<u>Speaker Mesh</u> Speaker Mesh Black Speaker Mesh Blue Speaker Mesh Gold Speaker Mesh Sliver	254F24Q1A00 254F24Q1B00 254F24Q1C00 254F24Q0900	C		
Sponge Battery BtB	303M24Q0A00	C		
Sponge Front Assy Cap Side	306Q24Q0100	C		

Designation	Part No.	RLC	Part	Location
Sponge Front Assy Key Side	306Q24Q0200	C		
Sponge Wide-angle Front Camera Back Side	303M24Q0B0	C		
Spring Antenna	305524S0300	C		
				
<u>Sub PBA</u> Sub PBA H3213/H4213 Sub PBA H3223 Sub PBA H4233	78PC2100010 78PC3100010 78PC2100020	B		
Vibrator	29300001E00	C		
Water Intrusion Label	82KB600001W	C		

2 Revision History

Rev.	Date	Changes / Comments
1	2018-Jan-12	Release