

Repair Movies

- mechanical -



Xperia™ E-Dual, C1605, C1604

Xperia™ E, C1505, C1504

CONTENTS

1 Movies 3

1.1 Disassembly 3

1.2 Reassembly 3

2 Revision History 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies

1.1 Disassembly

- Battery Cover
- Battery
- Battery Lower Cover
- Rear Cover Sub Assembly
- TP LCM FPC Mylar
- Front Cover Assembly
- RF Cable (a) & Main PBA (b)



1.2 Reassembly

- Main PBA (a) & RF Cable (b)
- Front Cover Assembly
- TP LCM FPC Mylar
- Rear Cover Sub Assembly
- Battery Lower Cover
- Battery
- Battery Cover



2 Revision History

Rev.	Date	Changes / Comments
1	2013-Jan-11	Initial release
2	2013-Feb-11	Update the commercial name