

Part List

- mechanical -



Xperia™ ZL

C6502, C6503, C6506 & L35h

CONTENTS

1	Part List	3
2	Revision History	9



1 Part List

The following parts are available for order in 'E-star'.

The 'E-star' name of a part may often be complex and even confusing, so the name of certain parts mentioned in the Working Instructions, Repair Movies and Troubleshooting Guide are often referred to by a simple descriptive name for better understanding.

Both names (designations) will in that case be included in this Part List, where the name being used in the documents mentioned above is underlined, e.g. Battery Cover.

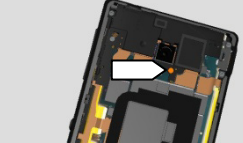 

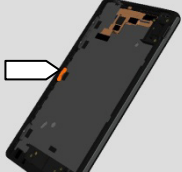 
RLC, Reversed Logistic Classification column for replaced part handling, (See the Spare Part Handling chapter in Mechanical/Generic Repair Manual 1220-1333).



Designation	Part No.	RLC	Part	Location
Adhesive Backcover	1267-3073	C		
Adhesive Battery	1267-3738	C		
Adhesive Label	1266-7336	C		
Adhesive NFC	1271-7128	C		
Adhesive Vibrator	1270-2598	C		
Adhesive Vibrator Wire	1267-5758	C		
Ant NFC	1264-7334	C		
Attachment Power Key	1266-7093	C		

Designation	Part No.	RLC	Part	Location
1.1.1.1 Back Cover Back Cover Assy Black Back Cover Assy Red Back Cover Assy White	1266-7038 1270-2408 1269-2915	C		
Battery 2300 mAh	1264-3476	B		
Battery Grounding	1270-9062	C		
Camera 13 MP	1264-5459	C		
Camera 2.2 MP	1268-6092	C		
1.1.1.2 Carrier Antenna Carrier Antenna Carrier Antenna RoW	1270-2128 1266-7018	C		
Carrier Sidekey	1266-7017	C		
1.1.1.3 Carrier Spbox Carrier Spbox Carrier Spbox RoW	1270-2131 1266-7016	C		
Carrier Ear Piece Holder	1267-6153	C		
Clip USB	1267-3000	C		

Designation	Part No.	RLC	Part	Location
1.1.1.4 Cover Card Cover Card Black Cover Card Red Cover Card White	1266-7027 1270-2413 1269-2914	C		
1.1.1.5 Earspeaker Ear Speaker 12.0 Rectangular	1244-5343	C		
FPC AVP	1261-9755	C		
FPC Camera key PBA	1265-3974	C		
FPC Side Key	1261-9757	C		
1.1.1.6 Front Assy Front Assy Black Front Assy Red Front Assy White	1267-5458 1270-2378 1269-2880	A		
Gasket Battery FPC Support	1267-6223	C		
Gasket Proximity	1270-6928	C		
Gasket Vibrator	1270-2596	C		
Grommet AVP	1266-7051	C		

Designation	Part No.	RLC	Part	Location
1.1.1.7 Key Camera Key Camera Black Key Camera Red Key Camera White	1266-7101 1270-2395 1269-3864	C		
Key Power	1266-7091	C		
1.1.1.8 Key Volume Key Volume Black Key Volume Red Key Volume White	1266-7098 1270-2394 1269-3866	C		
Label Mobile Phone	1266-7039	C		
Mic Protection Tape	1272-4636	C		
1.1.1.9 Panel Bottom Panel Bottom Black Panel Bottom Red Panel Bottom White	1266-7078 1270-2392 1269-3861	C		
1.1.1.10 Panel Side Left Panel Side Left Black Panel Side Left Red Panel Side Left White	1266-7087 1270-2393 1269-3862	C		
1.1.1.11 Panel Side Right 1 Panel Side Right 1 Black Panel Side Right 1 Red Panel Side Right 1 White	1266-7065 1270-2388 1269-3858	C		
1.1.1.12 Panel Side Right 2 Panel Side Right 2 Black Panel Side Right 2 Red Panel Side Right 2 White	1266-7070 1270-2390 1269-3859	C		
1.1.1.13 Panel Top Panel Top Black Panel Top Red Panel Top White	1266-7073 1270-2391 1269-3860	C		

Designation	Part No.	RLC	Part	Location
1.1.1.14 Screw 1.6 Screw Other Len:1.6 Diam:1.4	1223-5057	C		
1.1.1.15 Screw 3.0 Screw Phillips Len:3.0 Diam:1.4	1232-2921	C		
1.1.1.16 Screw 3.5 Screw M1.4x3.5	1204-8506	C		
Shield Can Chat Camera	1267-6264	C		
Silicon Camera Key	1266-7102	C		
Silicon Power Key	1266-7097	C		
Silicon Volume Key	1266-7099	C		
1.1.1.17 WI Bottom Water Indicator	1239-5490	C		
1.1.1.18 WI Top Water Indicator	1201-4047	C		

Designation	Part No.	RLC	Part	Location
Vibrator	1264-7699	C		

2 Revision History

Rev.	Date	Changes / Comments
1	2013-Feb-26	Initial release
2	2013-Jul-16	RLC column added