


SONY

make.believe

Repair Movies

- mechanical -

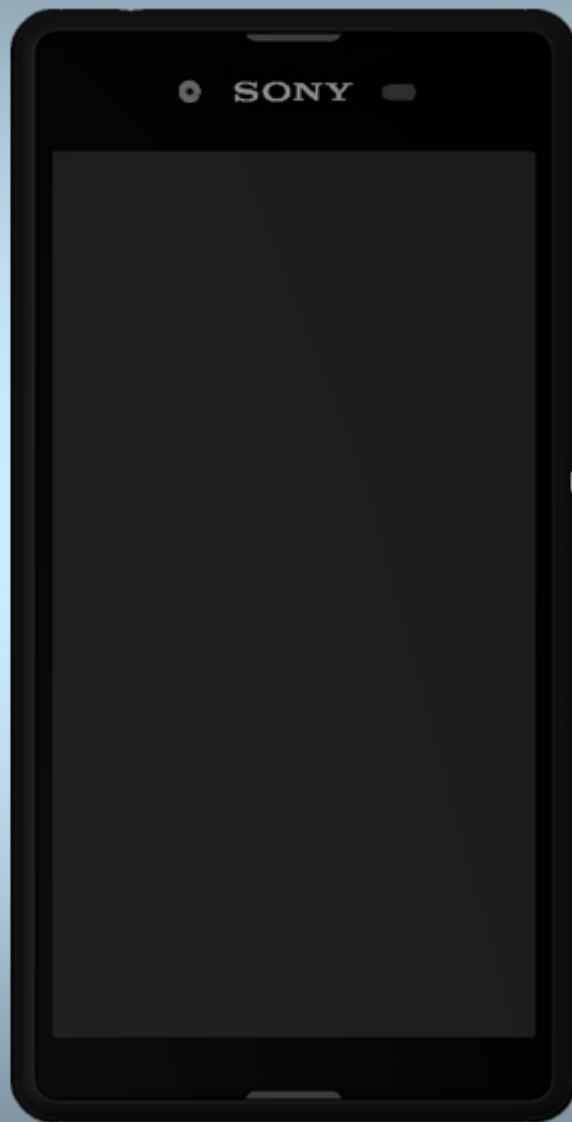

Xperia™ E3

D2202, D2203, D2206, D2212, D2243

CONTENTS

1 Movies 3

1.1 Disassembly 3

1.2 Reassembly 3

2 Revision History 4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader. To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.

If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow. In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.

For general information about repair movies, refer to 1220-1333: Generic Repair Manual - mechanical

1 Movies

 
1.1 Disassembly

- Battery Cover
- Rubber Corner & Screw 1.6mm x 3.2mm
- Rear Cover Assy
- Camera Main
- Main PBA
- Sub PBA
- Battery 2300 mAh & Front Cover Assy



1.2 Reassembly

- Battery 2300 mAh & Front Cover Assy
- Sub PBA
- Main PBA
- Camera Main
- Rear Cover Assy
- Rubber Corner & Screw 1.6mm x 3.2mm
- Battery Cover



SONY

make.believe

Repair Movie Repair Instruction Mechanical/

2 Revision History

Rev.	Date	Changes / Comments
1	2014-Sep-09	Released
2	2014-Oct-01	Model D2243 Added