



Sony Ericsson

Repair Movies

- mechanical -



Xperia™ X10 mini

E10a, E10i

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies


1.1 Disassembly

1. Cover Back
2. Cap Battery
3. Antenna Main
4. Inner Frame
5. Cover Front
6. Support LCD
7. Main PBA



1.2 Reassembly

1. Support LCD
2. Main PBA
3. Cover Front
4. Inner Frame
5. Antenna Main
6. Cap Battery
7. Cover Back

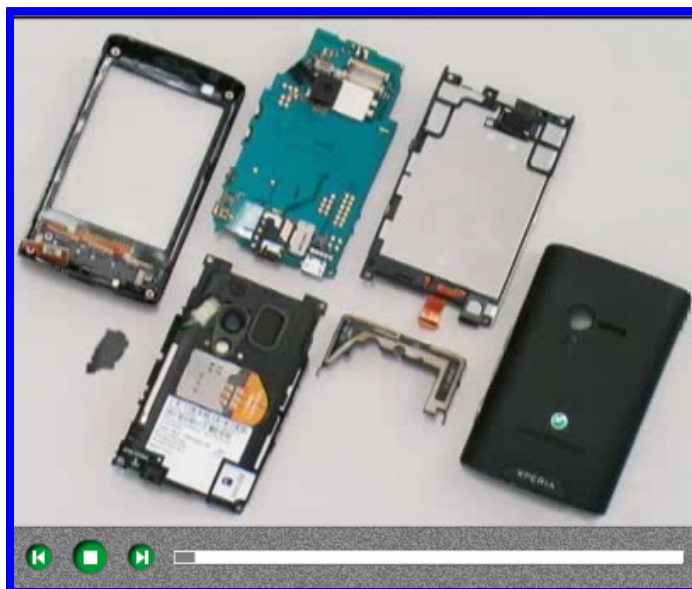



2 Revision History

Rev.	Date	Changes / Comments
1	2010-May-28	Initial release
2	2010-May-28	Insufficient subtitles has been removed