



Sony Ericsson

Repair Movies

- mechanical -



Xperia™ X8

E15i, E15a, E16i, E16a

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Movies

1.1 Disassembly

1. Cover Rear
2. Inner Frame
3. Main PBA
4. Cover Front assy
5. Carrier LCM
6. Display 3.0 TFT



1.2 Reassembly

1. Display 3.0 TFT
2. Carrier LCM
3. Cover Front assy
4. Main PBA
5. Inner frame
6. Cover Rear





2 Revision History

Rev.	Date	Changes / Comments
1	2010-Sept-27	Initial release
2	2011-May-16	Two new commercial models included