

# Part List, Mechanical

Applicable for F305

 





## CONTENTS

<b>1</b>	<b>General .....</b>	<b>2</b>
<b>2</b>	<b>Parts .....</b>	<b>3</b>
<b>3</b>	<b>Label Part List.....</b>	<b>15</b>
<b>4</b>	<b>Revision History .....</b>	<b>16</b>

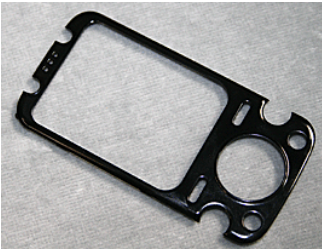

 

# 1 General

This Part List includes all parts possible to replace by using the Mechanical Repair Process.  
Parts available to order will be found in the Web Shop.

 



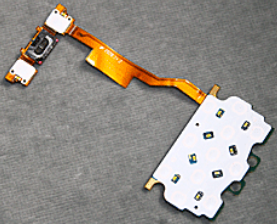 



## 2 Parts

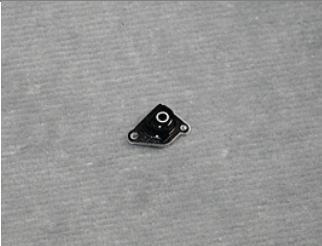Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Style upper cover	Style upper cover, White Style upper cover, Black Style upper cover Raspberry Style upper cover Tectonic Style upper cover, Éclair quicksilver Style upper cover, Jeremy quicksilver Style upper cover, Hello Kitty/White	1206-7321 1204-8484 1223-0610 1223-0612 1001-8186 1001-8182 1001-6638	
		Upper front screw	Upper front screw	1211-6915	
		Navi key	Navi key, Black Navi key, White Navi key, Raspberry Navi key, Tectonic	1204-8480 1206-7310 1223-0601 1223-0602	

## Parts *continue*

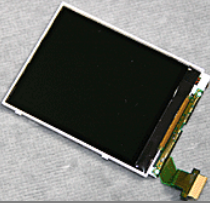
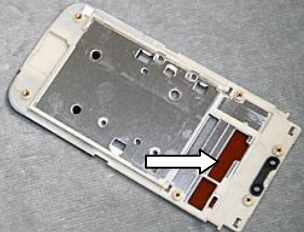 

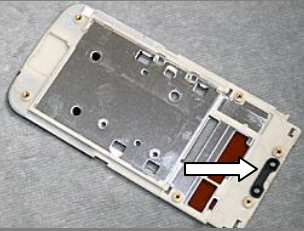 


 
 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Upper Front Cover	Upper Front Cover Black Upper Front Cover White Upper Front Cover T-Mobile EU Black Upper Front Cover Assy Orange Black Upper Front Cover Assy Orange White Upper Front Cover Assy Movistar Black Upper Front Cover Assy Movistar White Upper Front Cover Generic Rasberry Upper Front Cover Generic Tectonic Upper Front Cover Assy FIFA Tectonic Upper Front Cover Assy FIFA Rasberry	1207-7289 1207-7958 1210-5354 1210-5359 1210-5879 1216-4291 1216-4295 1226-3404 1226-3419 1226-3433 1226-3431	
		A Key	A Key, Black A Key, White A Key, Rasberry A Key, Tectonic	1204-8482 1206-7311 1223-0603 1223-0604	

## Parts *continued*




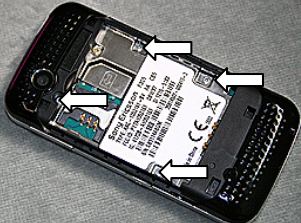 

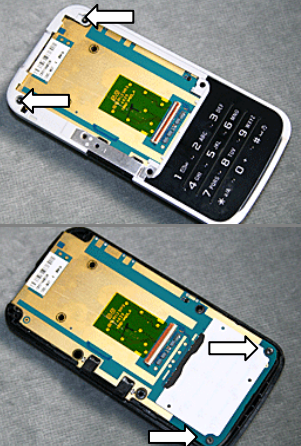 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		LCD	LCD TFT 2.0	1204-6980	
		B Key	B Key, Black B Key, White B Key, Rasberry B Key, Tectonic	1204-8483 1206-7312 1223-0605 1223-0606	
		Keyboard PBA Assy	Keyboard PBA Assy	1204-6964	
		Screw M1.4x1.5	Screw M1.4x1.5	1204-8502	



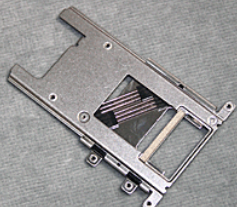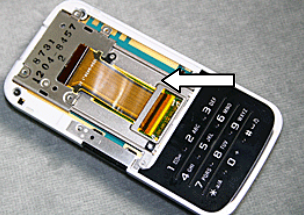


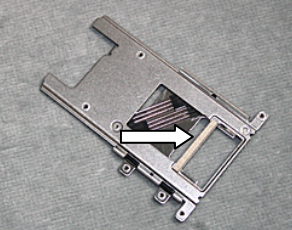 

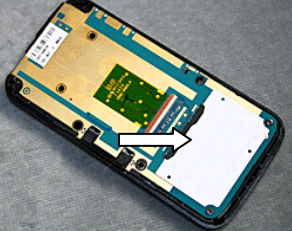 
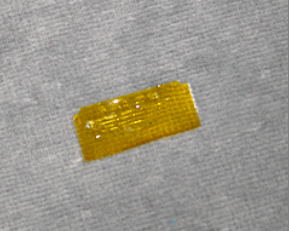 

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Insulation Tape	Insulation Tape	1204-6935	
		Cushion	Cushion	1205-3669	
		Upper Rear Cover	Upper Rear Cover Upper rear assy Raspberry Upper rear assy Tectonic	1204-7315 1223-0308 1223-0349	For Black and White
		Hinge assy	Hinge assy	1204-8457	

## Parts *continued*



Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Screw M1.4x2.8	Screw M1.4x2.8	1204-8503	
		Screw M1.4x3.5	Screw M1.4x3.5	1204-8506	
		Screw M1.7x5	Screw Torx Len:5.0 Diam:1.7	1200-2455	

## Parts *continued*


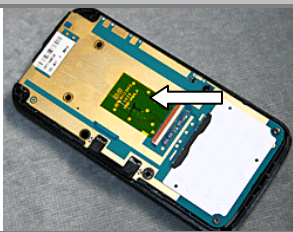 
 
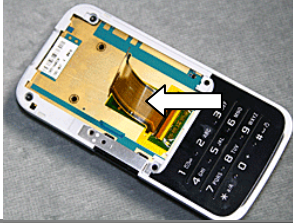 




Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Lower front Cover	Lower front Cover Lower front assy Raspberry Lower front assy Tectonic	1204-7356 1223-0353 1223-0354	For Black and White
		Conductive gasket for HH FPC	Conductive gasket for HH FPC	1204-7429	
		Main key dome assy	Main key dome assy	1204-6942	
		Protection Foil for connector	Protection Foil for connector	1217-0046	



 



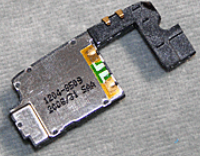 



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Keypad	Keypad Black Latin	1204-8479	
			Keypad White Latin	1206-7316	
			Keypad Black Chinese	1210-4601	
			Keypad White Chinese	1210-4617	
			Keypad Black Hebrew	1210-4610	
			Keypad White Hebrew	1210-4619	
			Keypad Black Arabic	1210-4611	
			Keypad White Arabic	1210-4620	
			Keypad Black Thai	1210-4612	
			Keypad White Thai	1210-4621	
			Keypad Black Cyrillic	1210-4615	
			Keypad White Cyrillic	1210-4622	
			Keypad Black Hindi	1210-4616	
			Keypad White Hindi	1210-4623	
			Keypad Latin Rasberry	1223-0607	
			Keypad Latin Tectonic	1223-0609	
			Keypad Arabic Rasberry	1223-8322	
			Keypad Bopomofo Rasberry	1223-8323	
			Keypad Cyrillic Rasberry	1223-8324	
			Keypad Hebrew Rasberry	1223-8325	
			Keypad Stroke Rasberry	1223-8327	
			Keypad Thai Rasberry	1223-8328	
			Keypad Arabic Tectonic	1223-8329	
			Keypad Bopomofo Tectonic	1223-8330	
			Keypad Cyrillic Tectonic	1223-8333	
			Keypad Hebrew Tectonic	1223-8334	
			Keypad Stroke Tectonic	1223-8336	
			Keypad Thai Tectonic	1223-8337	

## Parts *continued*

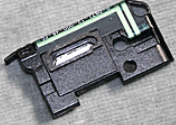





Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Protection Foil for test point	Protection Foil for test point	1217-0494	
		H-H FPC	H-H FPC	1204-8458	
		M2 cover	M2 cover M2 cover Rasberry M2 cover Tectonic	1204-7375 1223-0592 1223-0593	For Black and White
		Camera key	Camera key Camera key Rasberry Camera key Tectonic	1204-8455 1223-0589 1223-0590	For Black and White

## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Main Antenna & Speaker assy	Main Antenna & Speaker assy	1204-7003	
		Vibrator	Vibrator	BKE90337/2 R1	
		BT Antenna & Speaker assy	BT Antenna & Speaker assy	1204-8509	
		Double-side receiver adhesive	Double-side receiver adhesive	1206-6433	


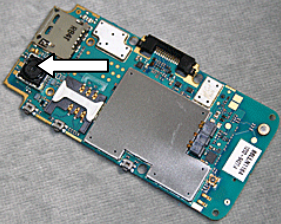 

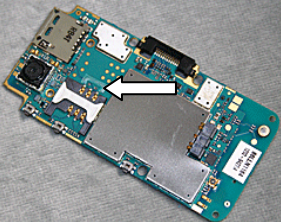 



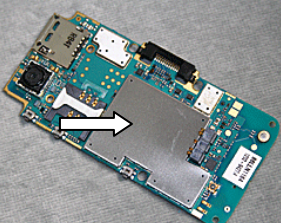 


## Parts *continued*

 
 
Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Lower rear cover	Lower rear cover , Black Lower rear cover , White Lower rear assy Raspberry Lower rear assy Tectonic	1204-7391 1206-7300 1223-0580 1223-0581	
		RF cap	RF cap White RF cap Black RF cap Raspberry RF cap Tectonic	1206-6431 1204-8489 1223-0617 1223-0618	
		Battery Cover	Battery Cover, Black Battery Cover, White Battery cover assy Raspberry Battery cover assy Tectonic Battery cover assy, Éclair quicksilver Battery cover assy, Jeremy quicksilver Battery cover assy Hello Kitty/White	1204-8485 1206-7325 1223-0613 1223-0614 1001-8188 1001-8184 1001-6640	



## Parts *continued*

Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Camera	2MP Camera Module	1204-4555	
		Spacer cover	Spacer cover	1209-2400	
		Volume key	Volume key Volume key Raspberry Volume key Tectonic	1204-7432 1223-0587 1223-0588	For Black and White
		BB Shielding can lid	BB Shielding can lid	1204-6937	

## Parts *continued*

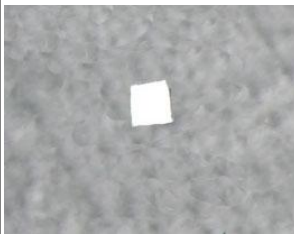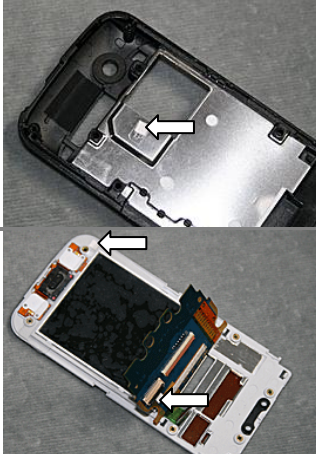Part	Part Location on Phone	Working Instruction Description	Webshop Description	Part Number	Comments
		Water Indicator	Liquid Intrusion Indicator	SXA1094884 R1	

### 3 Label Part List

Pos.	Description	Part Number	Comments
	KRH Label F305	1204-6954	

## 4 Revision History

Rev.	Date	Changes / Comments
1	2008-10-10	1 <sup>st</sup> release
2	2008-12-31	Add 1206-6433
3	2009-01-14	Add Keypad
4	2009-04-24	Add parts for Rasberry(Red) and Tectornic(Grey)
5	2009-07-31	Add Style upper cover, Battery Cover and Upper Front Cover.
7	2011-10-18	Modify screw description