

## Repair Movies - mechanical -



*Xperia™ X Compact*  
*F5321*

## CONTENTS

<b>1</b>	<b>Movies .....</b>	<b>3</b>
1.1	Disassembly .....	3
1.2	Reassembly .....	4
<b>2</b>	<b>Revision History .....</b>	<b>5</b>

***To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.***

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.  
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.***

***In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to  
1220-1333: Generic Repair Manual - mechanical***

## 1 Movies

### 1.1 Disassembly

1	Cap Tray Assy	13	Vibrator
2	Cover Rear	14	Liquid Indicator
3	Sheet Slider MOP	15	PBA
4	Ant NFC Flex	16	USB FPC Module
5	Battery	17	Jack FPC Module
6	Holder FPC Sensor	18	Key FPC
7	Sensor FPC	19	Fingerprint Sensor
8	Frame Main	20	Loudspeaker
9	Main Camera	21	Panel Top
10	Relay FPC	22	Panel Bottom
11	Chat Camera	23	Front Assy
12	Speaker Box		



## 1.2 Reassembly

1	Loudspeaker	13	Frame Main
2	Fingerprint Sensor	14	Sensor FPC
3	Key FPC	15	Holder FPC Sensor
4	Jack FPC Module	16	Battery
5	USB FPC Module	17	Ant NFC Flex
6	PBA	18	Sheet Slider MOP
7	Vibrator	19	Cover Rear
8	Speaker Box	20	Cap Tray Assy
9	Chat Camera	21	Panel Top
10	Main Camera	22	Panel Bottom
11	Relay FPC	23	Front Assy
12	Liquid Indicator		





## 2 Revision History

Rev.	Date	Changes / Comments
1	2016-Sep-01	Initial release