



Repair Movies

- mechanical -



Cedar
J108i, J108a

CONTENTS

1	Movies	3
1.1	Disassembly	3
1.2	Reassembly	3
2	Revision History	4

To view the embedded repair movies in this document, Acrobat Reader version 8 (or later) and Flash Player version 8 (or later) must be installed on your computer.

***For best picture quality, select “Actual size” or “100%” as zoom level in Acrobat Reader.
To magnify while keeping an acceptable picture quality, increase the zoom level to 200%.***

***If the movies appear to be jerky or blurred when viewing on-line, this is probably caused by the connection speed being too slow.
In that case, right-click with the mouse on the document name and select Save Target As to download the repair movie document for off-line viewing.***

***For general information about repair movies, refer to
1220-1333: Generic Repair Manual - mechanical***

1 Movies

1.1 Disassembly

- Battery Cover
- Battery
- Front Cover Assy
- Frame Assy
- LCD Metal Assy
- LCD Connector Protective Foil, Display & PBA



1.2 Reassembly

- LCD Connector Protective Foil, Display & PBA
- LCD Metal Assy
- Frame Assy
- Front Cover Assy
- Battery
- Battery Cover Assy





2 Revision History

Rev.	Date	Changes / Comments
1	2010-Sep-24	Initial release