



Trouble Shooting Guide, Electrical

Applicable for T700

Contents

1	General	2
2	Repair Actions for Manual Test Failures	3
2.1	Power On/Off	3
2.2	Network problems	4
2.3	Software Flash	4
2.4	Charging	4
2.5	Hands-Free connection	4
2.6	SIM	4
2.7	Charging indicator (RED LED).....	5
2.8	Display	5
2.9	Display Illumination	5
2.10	Keypad LEDs	5
2.11	Keypad Keys	5
2.12	Tally LED	5
2.13	Volume Up Key	5
2.14	Volume Down Key	5
2.15	Camera Button	5
2.16	Real Time clock.....	5
2.17	Polyphonic Speaker (Loudspeaker, Bas Speaker).....	5
2.18	Hands-Free (PHF) Aux Earphone	5
2.19	Microphone	5
2.20	Hands-Free (PHF) Aux Microphone	5
2.21	Camera	5
2.22	Opto Sensor	5
2.23	Flash LED / Video light	5
2.24	Memory Card	6
2.25	Bluetooth	6
2.26	Fm Radio	6
2.27	Vibrator	6
3	Repair Actions for Go/No Go Test Failures.....	7
4	Repair Actions for Calibration Routine Failures.....	7
5	Revision History.....	8






1 General

The purpose of this document is to indicate the electrical level repair actions associated with the different failure symptoms.

For symptoms that have multiple repair actions, the repair actions are listed in order of their probability of creating a successful repair. The first action has the highest probability, and subsequent actions have lower probabilities. The intention is for the repair technician to implement the first repair action and then retest the phone. If the phone continues to fail the same test, then the technician should continue to the second repair action. If the phone continues to fail the same test after all of the repair actions are exhausted, then the phone will be considered not repairable at this level.

This document should be used only after the actions from the Mechanical Trouble Shooting Guide have been exhausted for the specific symptom.

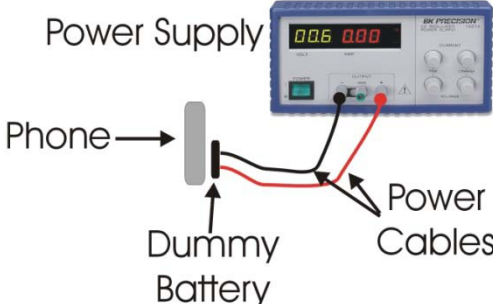Voltage, current, and resistance information is provided for some symptoms to enable faster repairs. Perform current measurements using a dummy battery and power supply with digital current display. The phone should be fully assembled. Perform voltage and resistance measurements with a multimeter. Purchasing this equipment and performing these measurements is optional but recommended.



<p>Measure Current in Milliamps (mA)</p>  <p>Power Supply</p> <p>Phone</p> <p>Dummy Battery</p> <p>Power Cables</p>	<p>Perform current measurements using a dummy battery and power supply with digital current display. The phone should be fully assembled.</p>
<p>Measure Diode Voltage (VDC →)</p>  <p>Multimeter</p>	<p>Perform voltage measurements with a multimeter.</p>
<p>Measure Resistance in Ohms (Ω)</p>  <p>Multimeter</p>	<p>Perform resistance measurements with a multimeter.</p>



2 Repair Actions for Manual Test Failures

Failure	Failure Symptom	Repair Action
2.1 Power On/Off	<i>Current draw greater than 300 mAmps</i>	<ul style="list-style-type: none">• N1230• N1380
	<i>Current draw when powered off</i>	<ul style="list-style-type: none">• N1230• N1380
	<i>Using no current when On/Off button is pressed and will not start</i>	<ul style="list-style-type: none">• X2401 if damaged
	<i>Hangs at gray display. Constant vibration. Will not power off</i>	<ul style="list-style-type: none">• B2100
	<i>Draws current when pushing On/Off key, returns to zero</i>	<ul style="list-style-type: none">• N2202• L2200• N1200• B1260
	<i>Will not power off</i>	<ul style="list-style-type: none">• V2402
	<i>Other symptoms</i>	<ul style="list-style-type: none">• X2200 if damaged

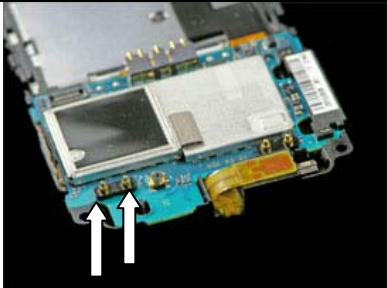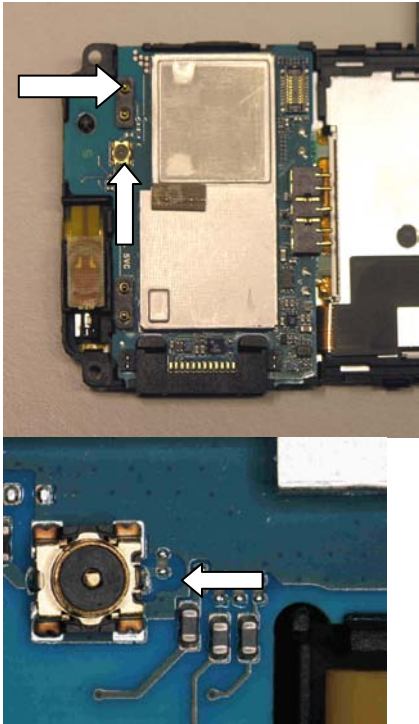

Failure	Failure Symptom	Repair Action
2.2 Network Problems	Check the resistance between the Antenna pogopins . If it is higher than 3 Ohm, go to next measurement.	
	Measure the resistance between the Antenna pogopin, (note which connector) and Conn Antenna output – If the value is more than 1 ohm, replace the Conn Antenna, RPT 799 47 (X1100) If the resistance is below 1 Ohm replace the FEM component, 1200-0169 (Z1230) if not under fill	
		<ul style="list-style-type: none"> • X2400 if damaged • N2424 • D2400
2.4 Charging	Charging from power outlet	<ul style="list-style-type: none"> • X2400 if damaged • L2405 If more than 1 Ohm • L2406 if more than 1 Ohm • V2202
	Charging from computer via USB	<ul style="list-style-type: none"> • X2400 if damaged • N2402
2.5 Hands-Free connection	Phone stuck in PHF mode when PHF is not attached	<ul style="list-style-type: none"> • V2420 if short circuit • N2400 • V2405
2.6 SIM		<ul style="list-style-type: none"> • X2402 if damaged



Failure	Failure Symptom	Repair Action
2.7 Charging indicator (RED LED)		<ul style="list-style-type: none"> • X4300
2.8 Display		<ul style="list-style-type: none"> • X4201 if damaged • Z4200 • Z4201 • Z4202
2.9 Display Illumination		<ul style="list-style-type: none"> • X4201 if damaged • L4201 if more than 1 Ohm • N4201
2.10 Keypad LEDs		<ul style="list-style-type: none"> • X2401 if damaged
2.11 Keypad Keys		<ul style="list-style-type: none"> • X2401 if damaged
2.12 Tally LED		<ul style="list-style-type: none"> • X4300
2.13 Volume Up Key		<ul style="list-style-type: none"> • X4300
2.14 Volume Down Key		<ul style="list-style-type: none"> • X4300
2.15 Camera Button		<ul style="list-style-type: none"> • X2401
2.16 Real Time clock	The clock has to be set after the battery has been detached	<ul style="list-style-type: none"> • X2402
2.17 Polyphonic Speaker (Loudspeaker, Bas Speaker)		<ul style="list-style-type: none"> • X4300 if damaged • N3100
2.18 Hands-Free (PHF) Aux Earphone		<ul style="list-style-type: none"> • X2400 if damaged • L2403 if more than 1 Ohm • L2404 if more than 1 Ohm • N3101
2.19 Microphone		<ul style="list-style-type: none"> • B3100
2.20 Hands-Free (PHF) Aux Microphone		<ul style="list-style-type: none"> • X2400 if damaged • L2401 if more than 1 Ohm • L2402 if more than 1 Ohm • L2407 if more than 1 Ohm • L2408 if more than 1 Ohm • N3101
2.21 Camera		<ul style="list-style-type: none"> • X4300 if damaged • N2203 • N2204
2.22 Opto Sensor		<ul style="list-style-type: none"> • N2201 • X4300
2.23 Flash LED / Video light		<ul style="list-style-type: none"> • X4300 if damaged



Failure	Failure Symptom	Repair Action
2.24 Memory Card		<ul style="list-style-type: none">• <i>X2402 if damaged</i>
2.25 Bluetooth		<ul style="list-style-type: none">• <i>X1400 if damaged</i>• <i>N1400</i>• <i>D2105</i>
2.26 Fm Radio		<ul style="list-style-type: none">• <i>X2400 if damaged</i>• <i>N1400</i>• <i>D2105</i>
2.27 Vibrator		<ul style="list-style-type: none">• <i>X2401</i>



3 Repair Actions for Go/No Go Test Failures

Failure	Repair Action
<i>Fails any part of Go/No Go testing</i>	<ul style="list-style-type: none"> • Replace X1100 if damaged • Run the calibration routine
<i>Fails Go/No Go test, but passes calibration</i>	<ul style="list-style-type: none"> • Replace the antenna • Check X1000 and X1203 for damage and replace it necessary • Rerun the phone through Go/No Go testing
<i>Fails Go/No Go test after passing calibration</i>	<ul style="list-style-type: none"> • Change X1100 and retest

4 Repair Actions for Calibration Routine Failures

Calibration is required after any of the parts in this section are reworked.

Failure	Repair Action
<i>TX OutputPowerCheck</i>	<ul style="list-style-type: none"> • X1100 if damaged • Z1230 if not under fill • N1230 • N1200
<i>MdBitCalibration</i>	<ul style="list-style-type: none"> • N1200
<i>CVCOCalibrationRX</i>	<ul style="list-style-type: none"> • N1200
<i>CVCOCalibrationRX</i>	<ul style="list-style-type: none"> • N1200
<i>LoopBandwithCalibration</i>	<ul style="list-style-type: none"> • N1200
<i>RFVcxoCalibration</i>	<ul style="list-style-type: none"> • B1260 • N1200
<i>TXPowerCalRF2001</i>	<ul style="list-style-type: none"> • Z1230 if not under fill • N1230
<i>RSSICalibration</i>	<ul style="list-style-type: none"> • N1200
<i>Fails any part of the calibration routine UMTS</i>	<ul style="list-style-type: none"> • Z1230 if not under fill • N1380 • N1300 • N2205



5 Revision History

Rev.	Date	Changes / Comments
1	2008-10-01	Initial Release
2	2009-10-29	Z1230 <i>if not under fill</i> added to Network problems
3	2009-11-23	L4201 added to 2.9 Display Illumination