

This is the track you need to cut (no need desolder CPU this picture is just to give you an imagination of where is the track). Use a needle (if you do not know what is it – use a dictionary) to scratch the track lightly to cut it off.


ATTENTION! THIS IS FOR C55 C56 AND A55 PHONES ONLY!

THE TRACK ON THIS PICTURE IS ALREADY CUTTED OFF SO YOU CAN SEE WHITE DOT HERE, IN NEW PCB THERE IS ONLY AN IRON TRACK WITH ROUND END LIKE THIS!

Max

[max@gsmhacking.com.ua](mailto:max@gsmhacking.com.ua)

[www.gsmhacking.com.ua](http://www.gsmhacking.com.ua) ©

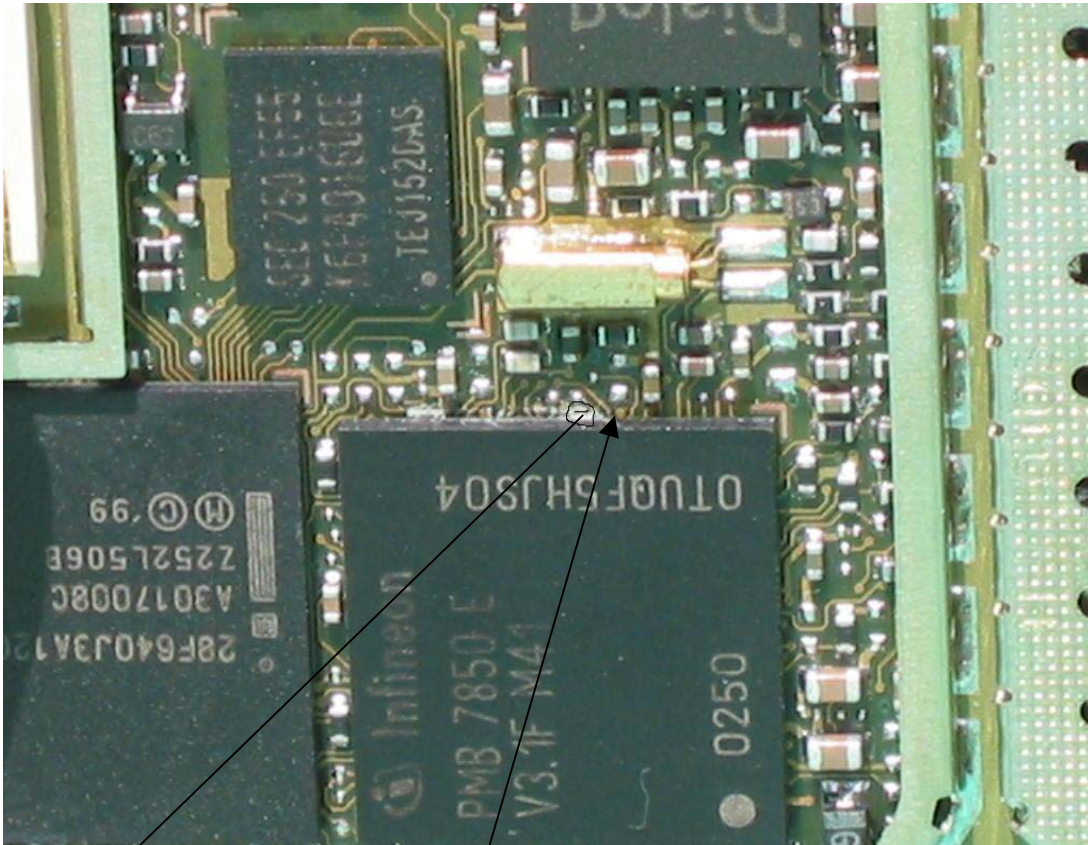

This is how I did it. I used a needle and scratched the track lightly to remove all ironing from the point. The point is possible to see with eyes, so you cannot cut a wrong track. But be careful anyway. I am not responsible for any damage of your phone and whatever else. If you are not agreeing – do not use this way.

ATTENTION! THIS IS FOR C55 C56 AND A55 PHONES ONLY!

THE TRACK ON THIS PICTURE IS ALREADY CUTTED OFF SO YOU CAN SEE WHITE DOT HERE, IN NEW PCB THERE IS ONLY AN IRON TRACK WITH ROUND END LIKE THIS!

Max

[max@gsmhacking.com.ua](mailto:max@gsmhacking.com.ua)

[www.gsmhacking.com.ua](http://www.gsmhacking.com.ua) ©