



## **Schematics, Electrical**


Applicable for Yendo/Yizo, W150/W150i/W150a

## Revision History


Rev.	Date	Changes / Comments
1	2010-Nov-08	1 <sup>st</sup> release


[illegible]

# Secondary side

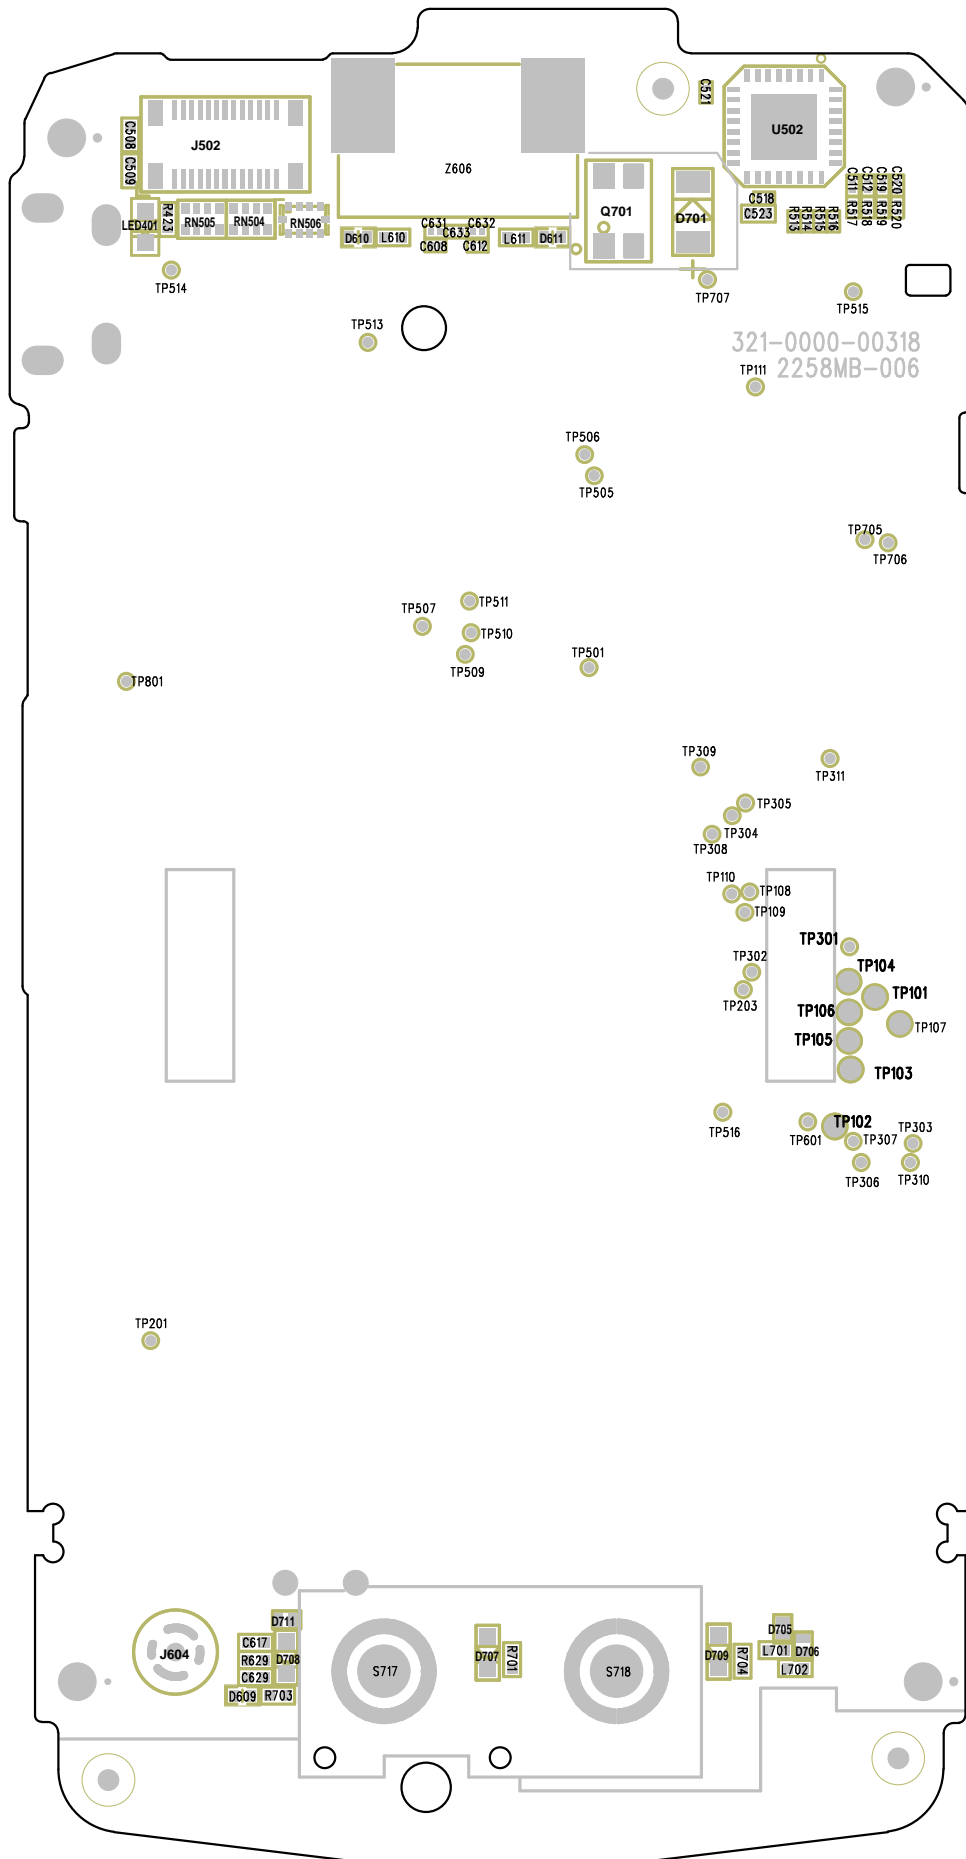


# Block Diagram

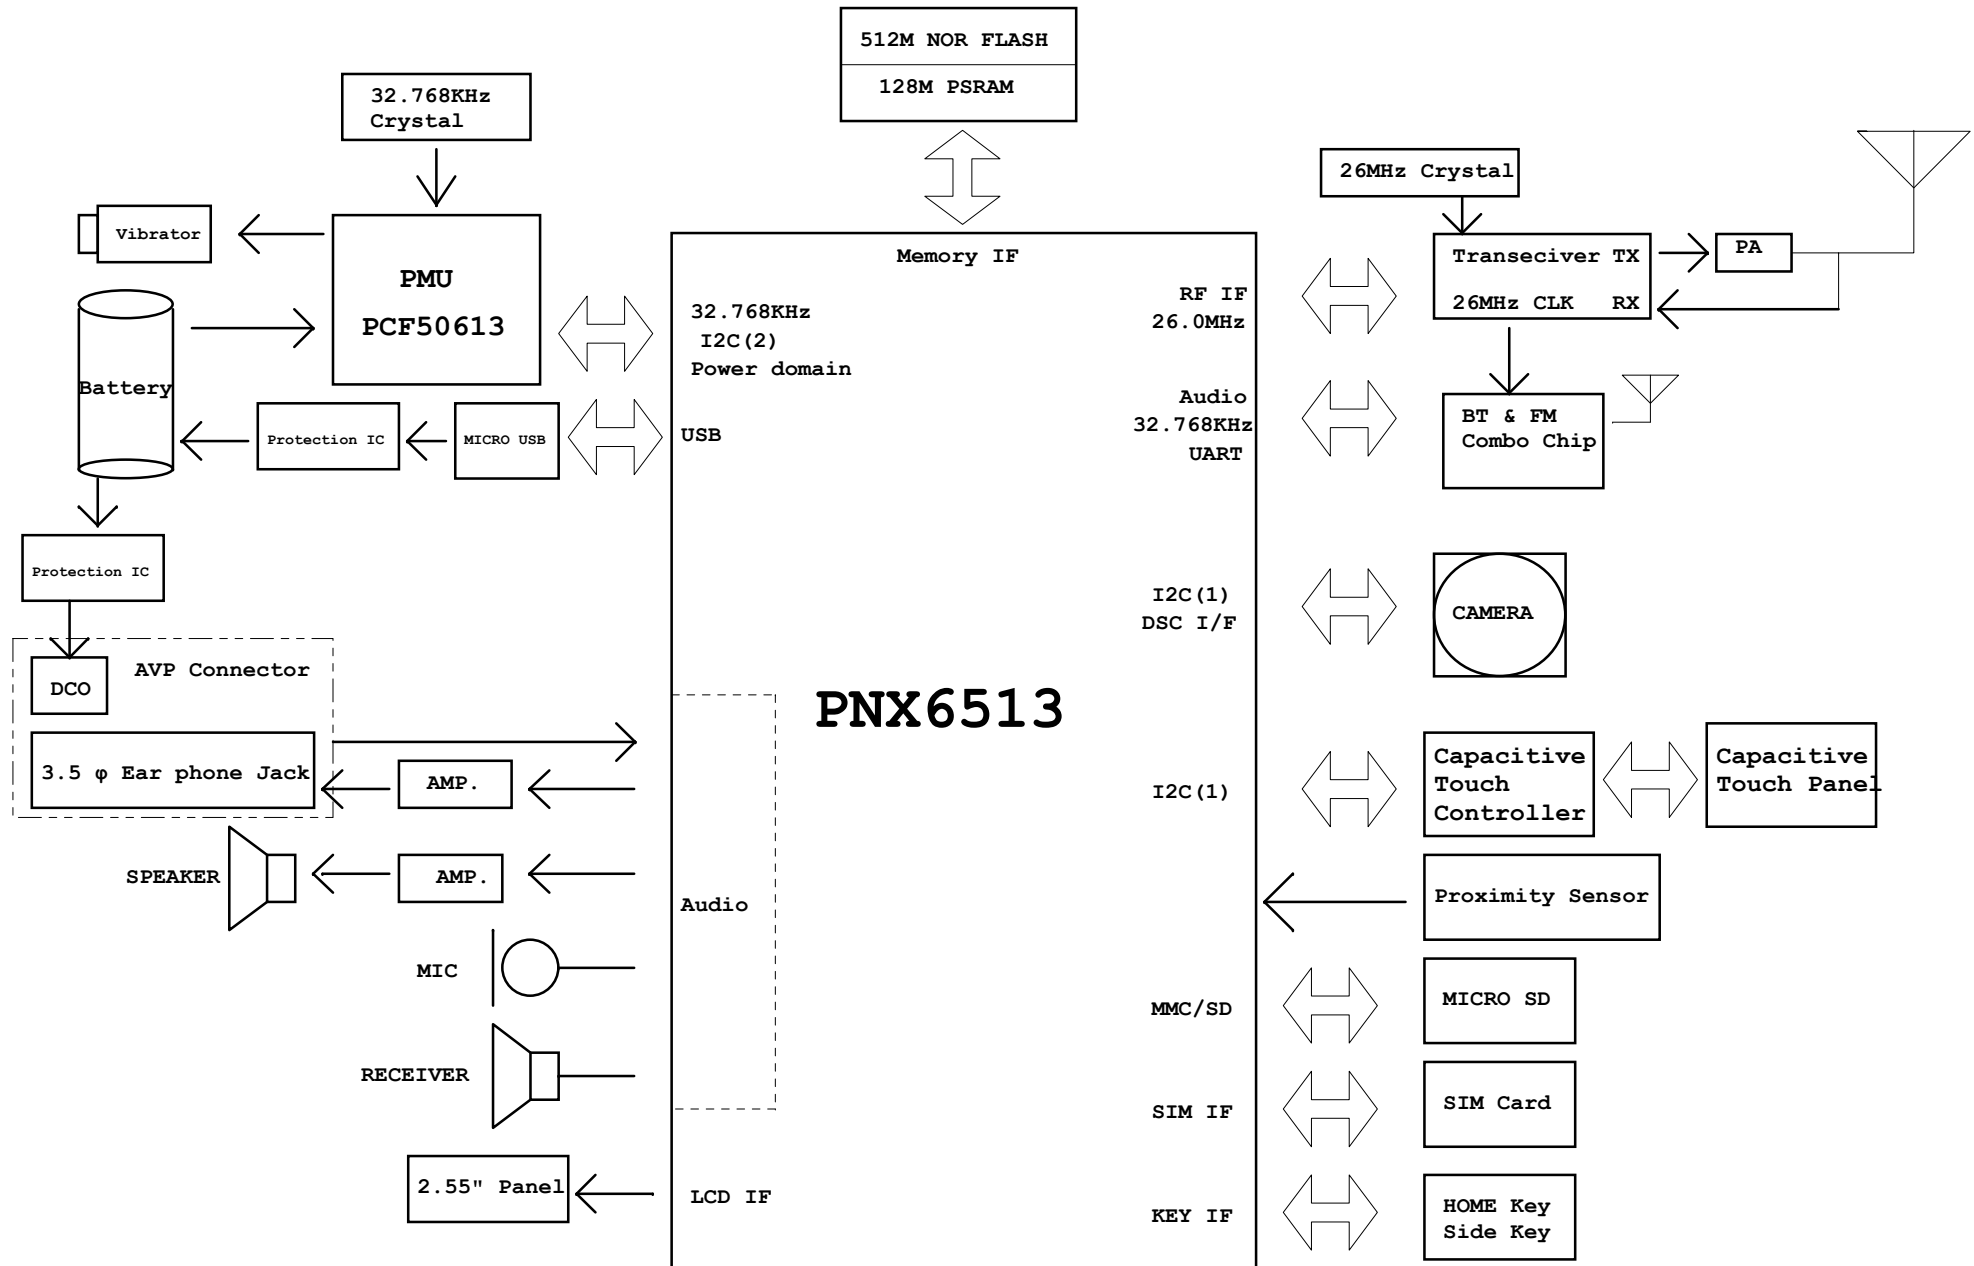

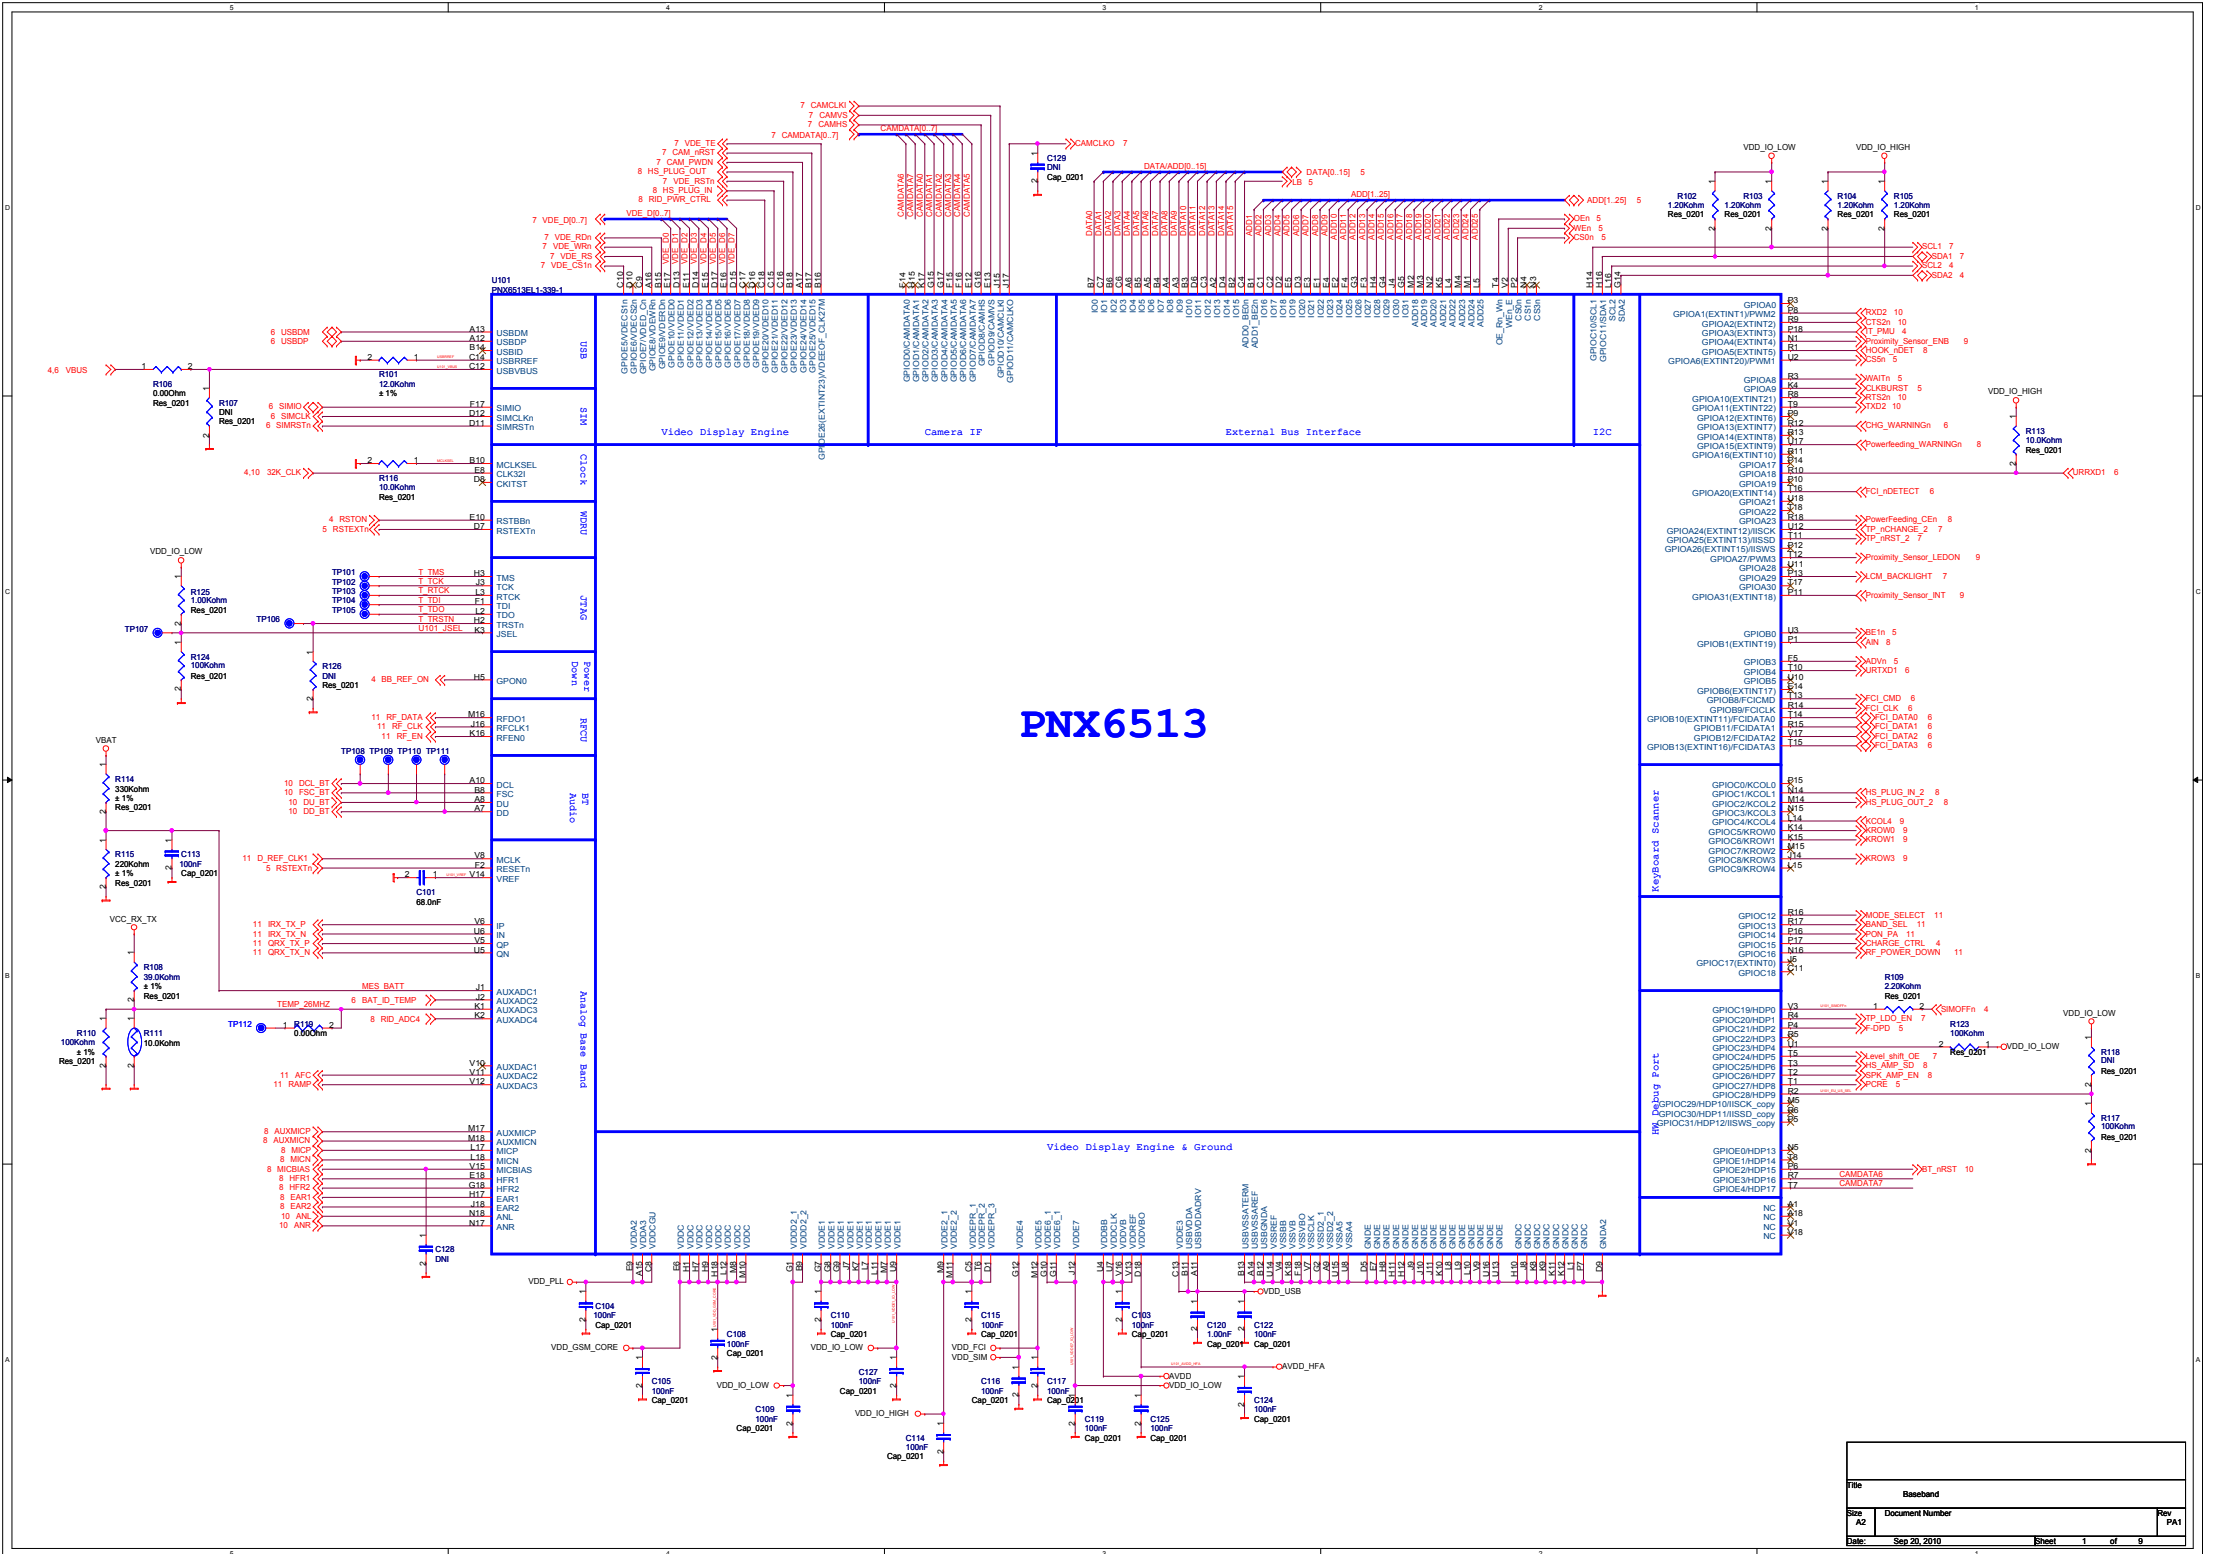



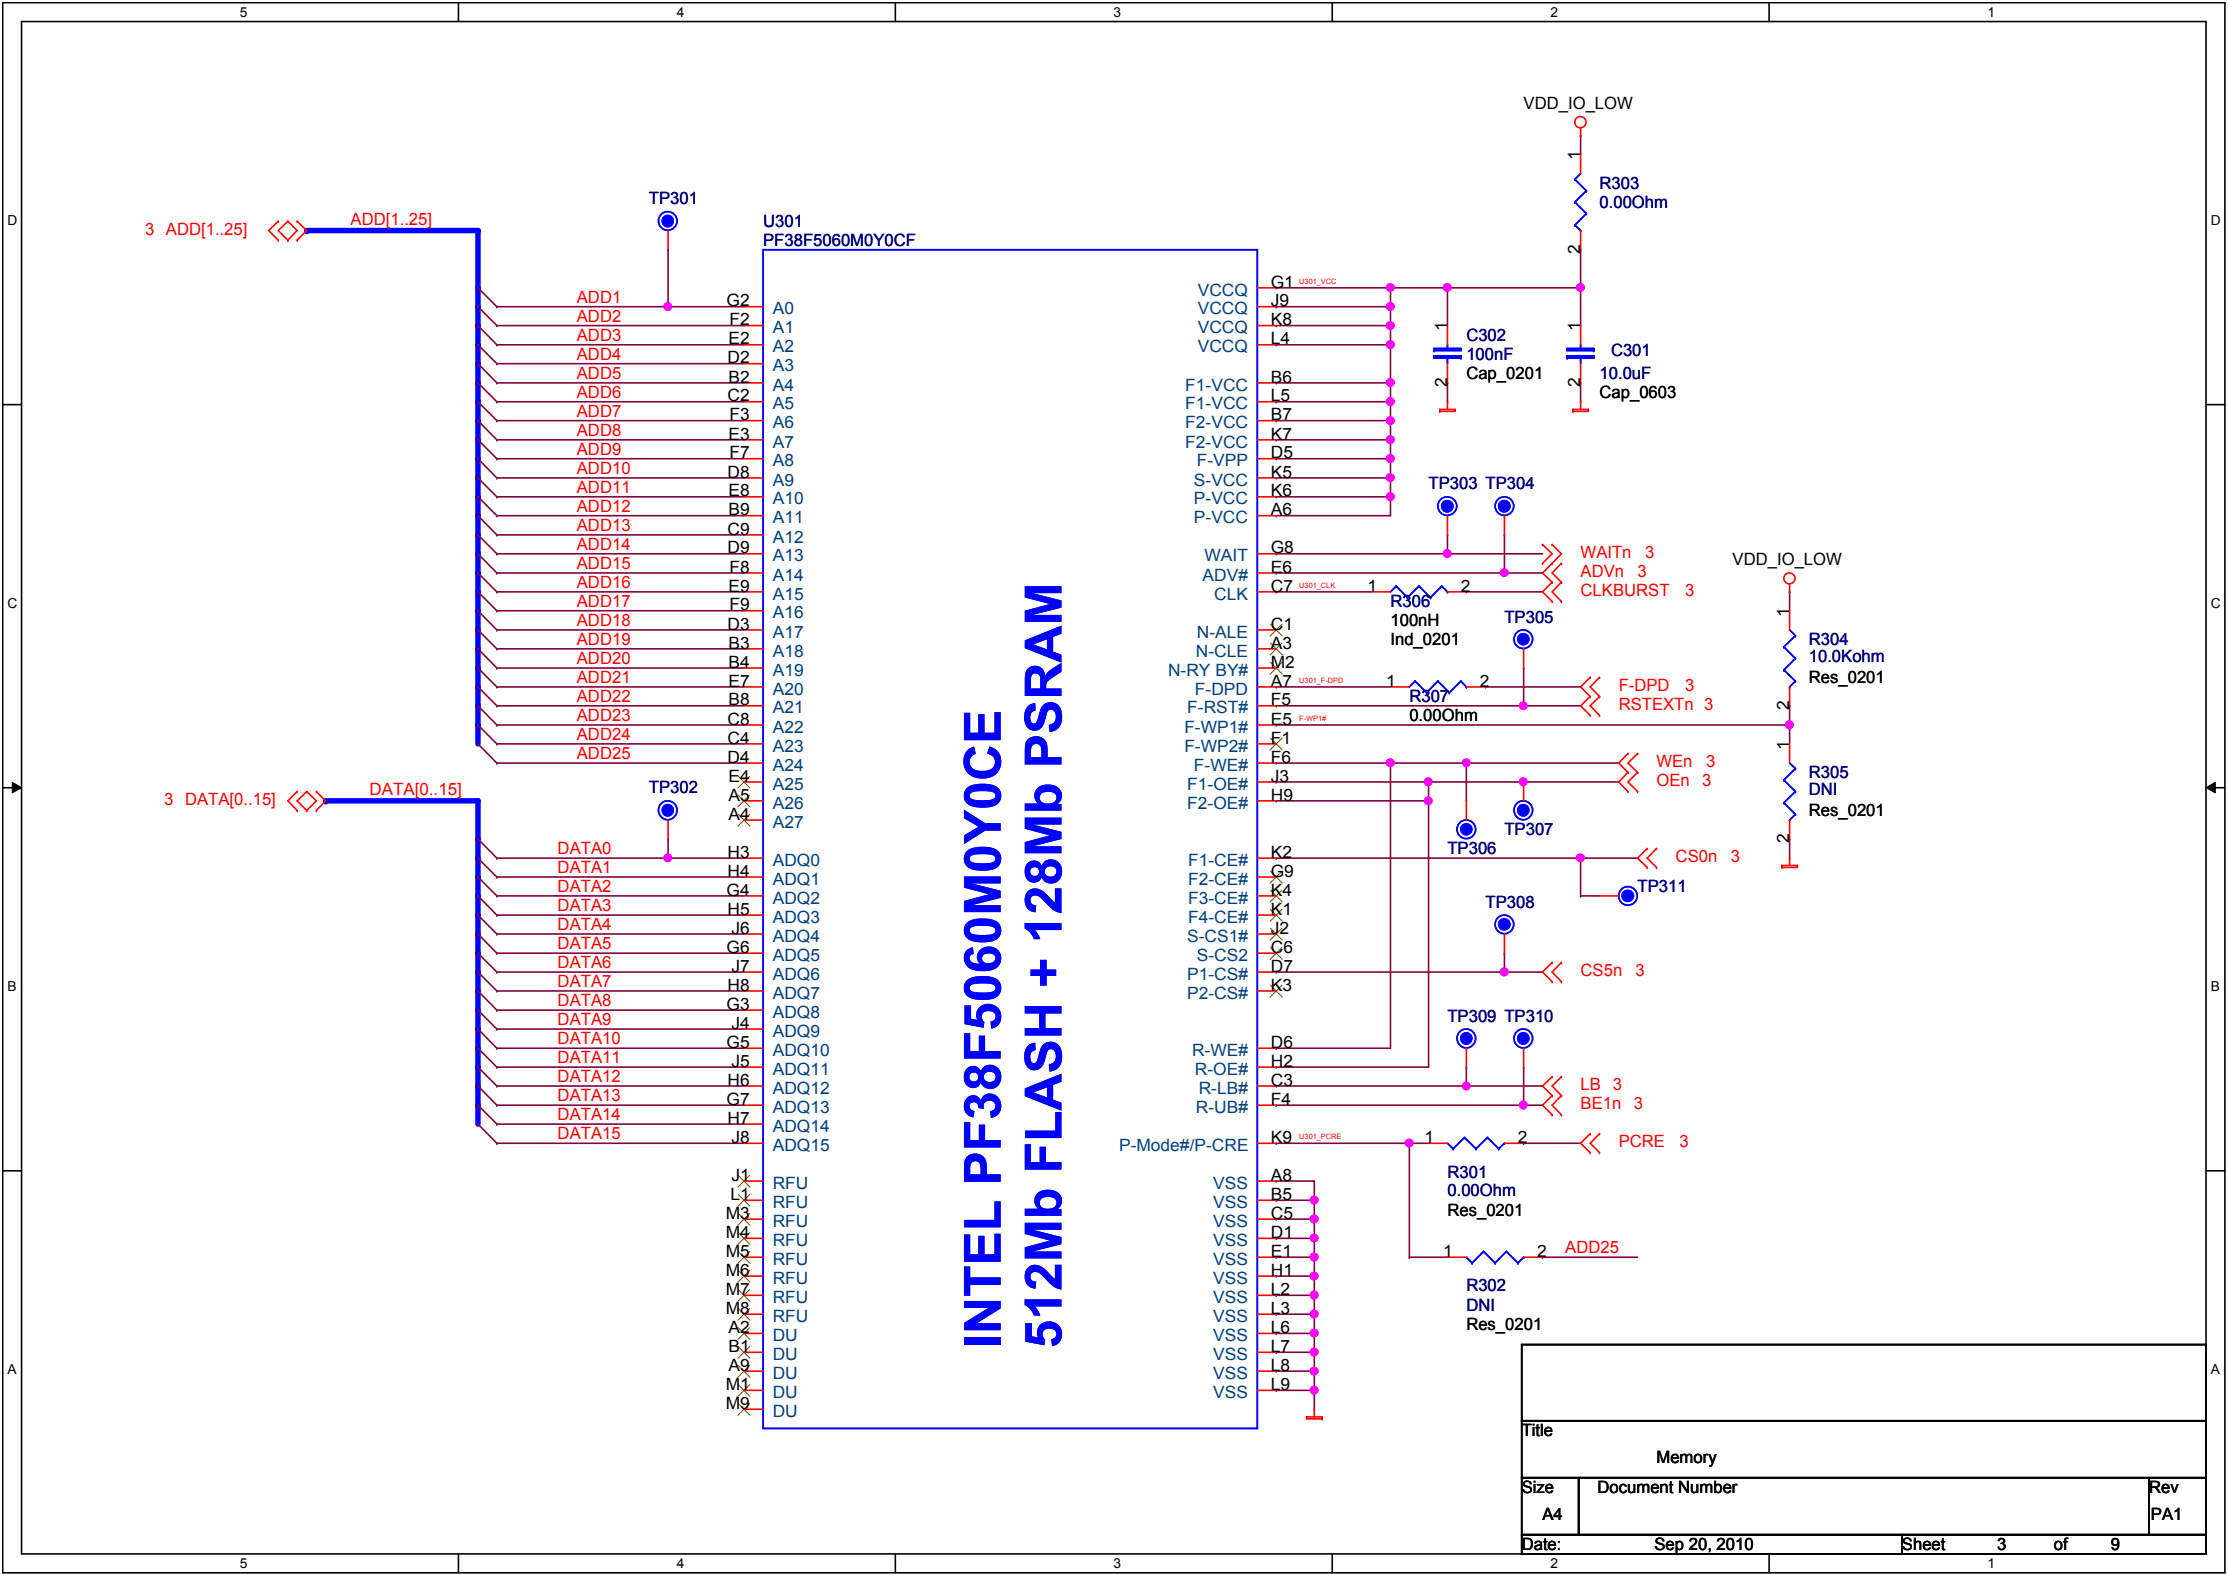



**BATTERY CONNECTOR**

**SIM Connector**

**Micro USB**

**MicroSD Connector**

**PRE-CHARGE LED**

WORKING METHOD OF SWITCH		
NO. CARD	CARD INSERTED	
OPEN	CLOSE	
9 10	9 10	9 10
⑨ SWITCH 1	⑩ SWITCH 2	

Title: uUSB/Battery/uSD/SIM




Size: A3

Document Number:

Date: Sep 20, 2010

Sheet: 4 of 9

Rev: PA1

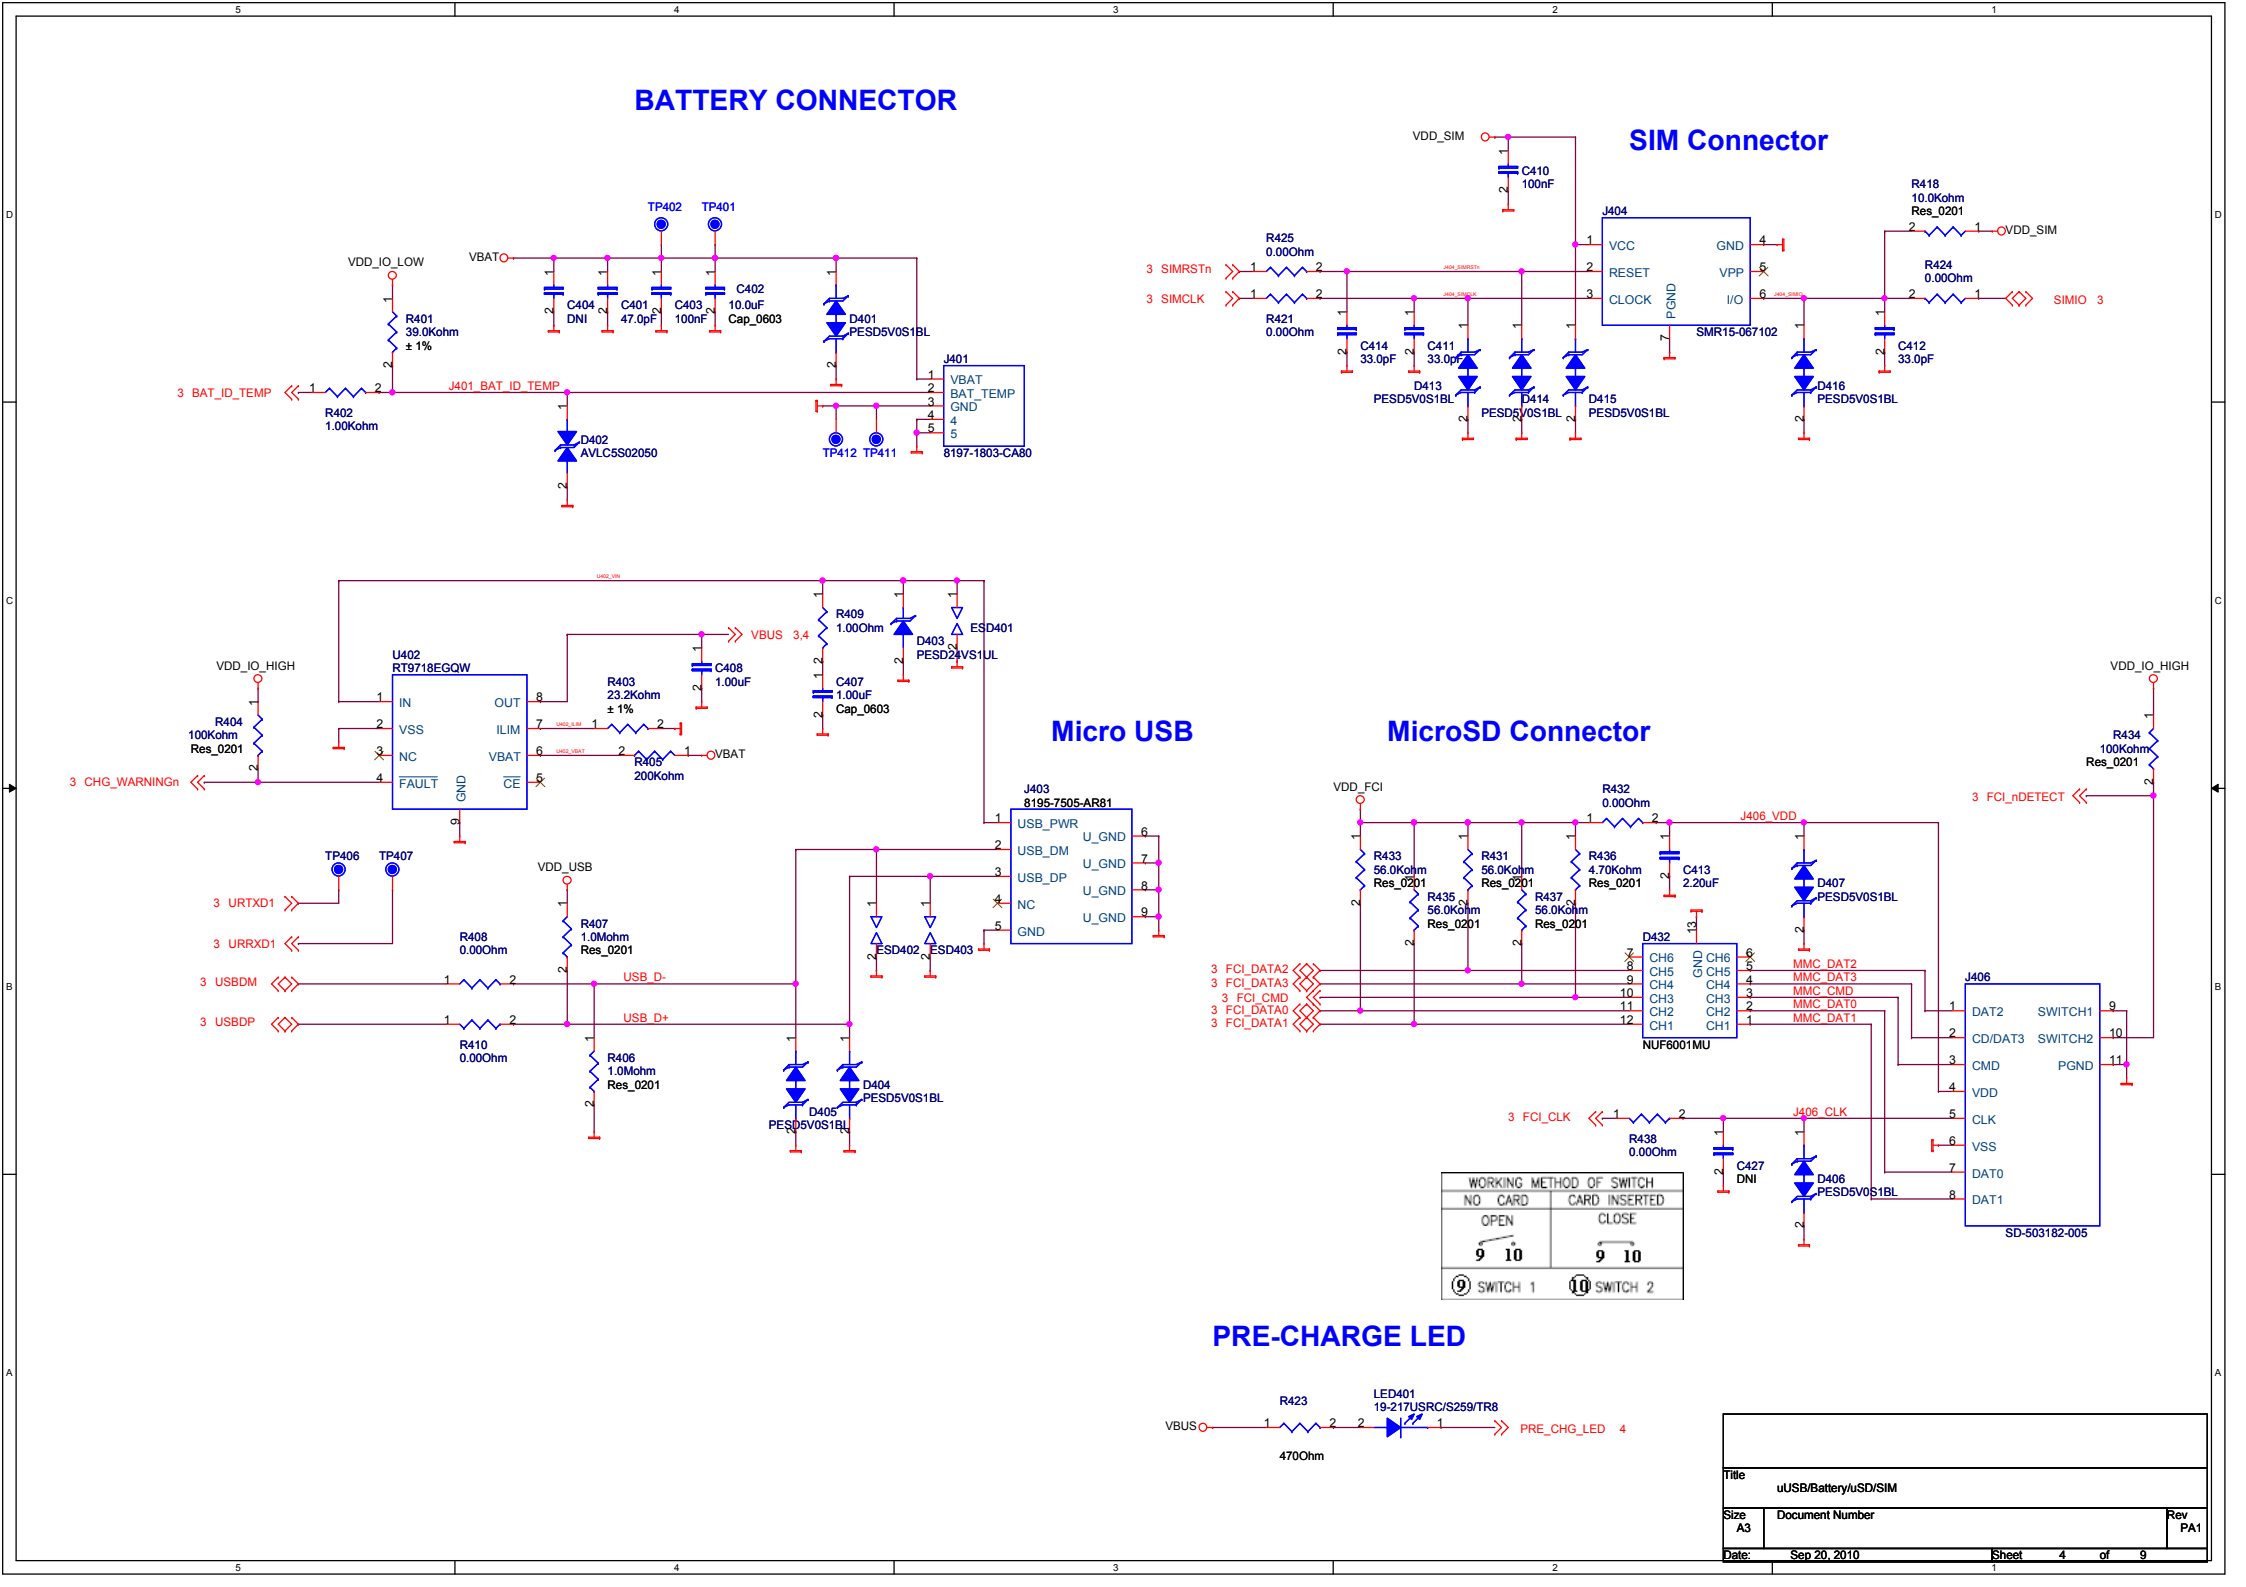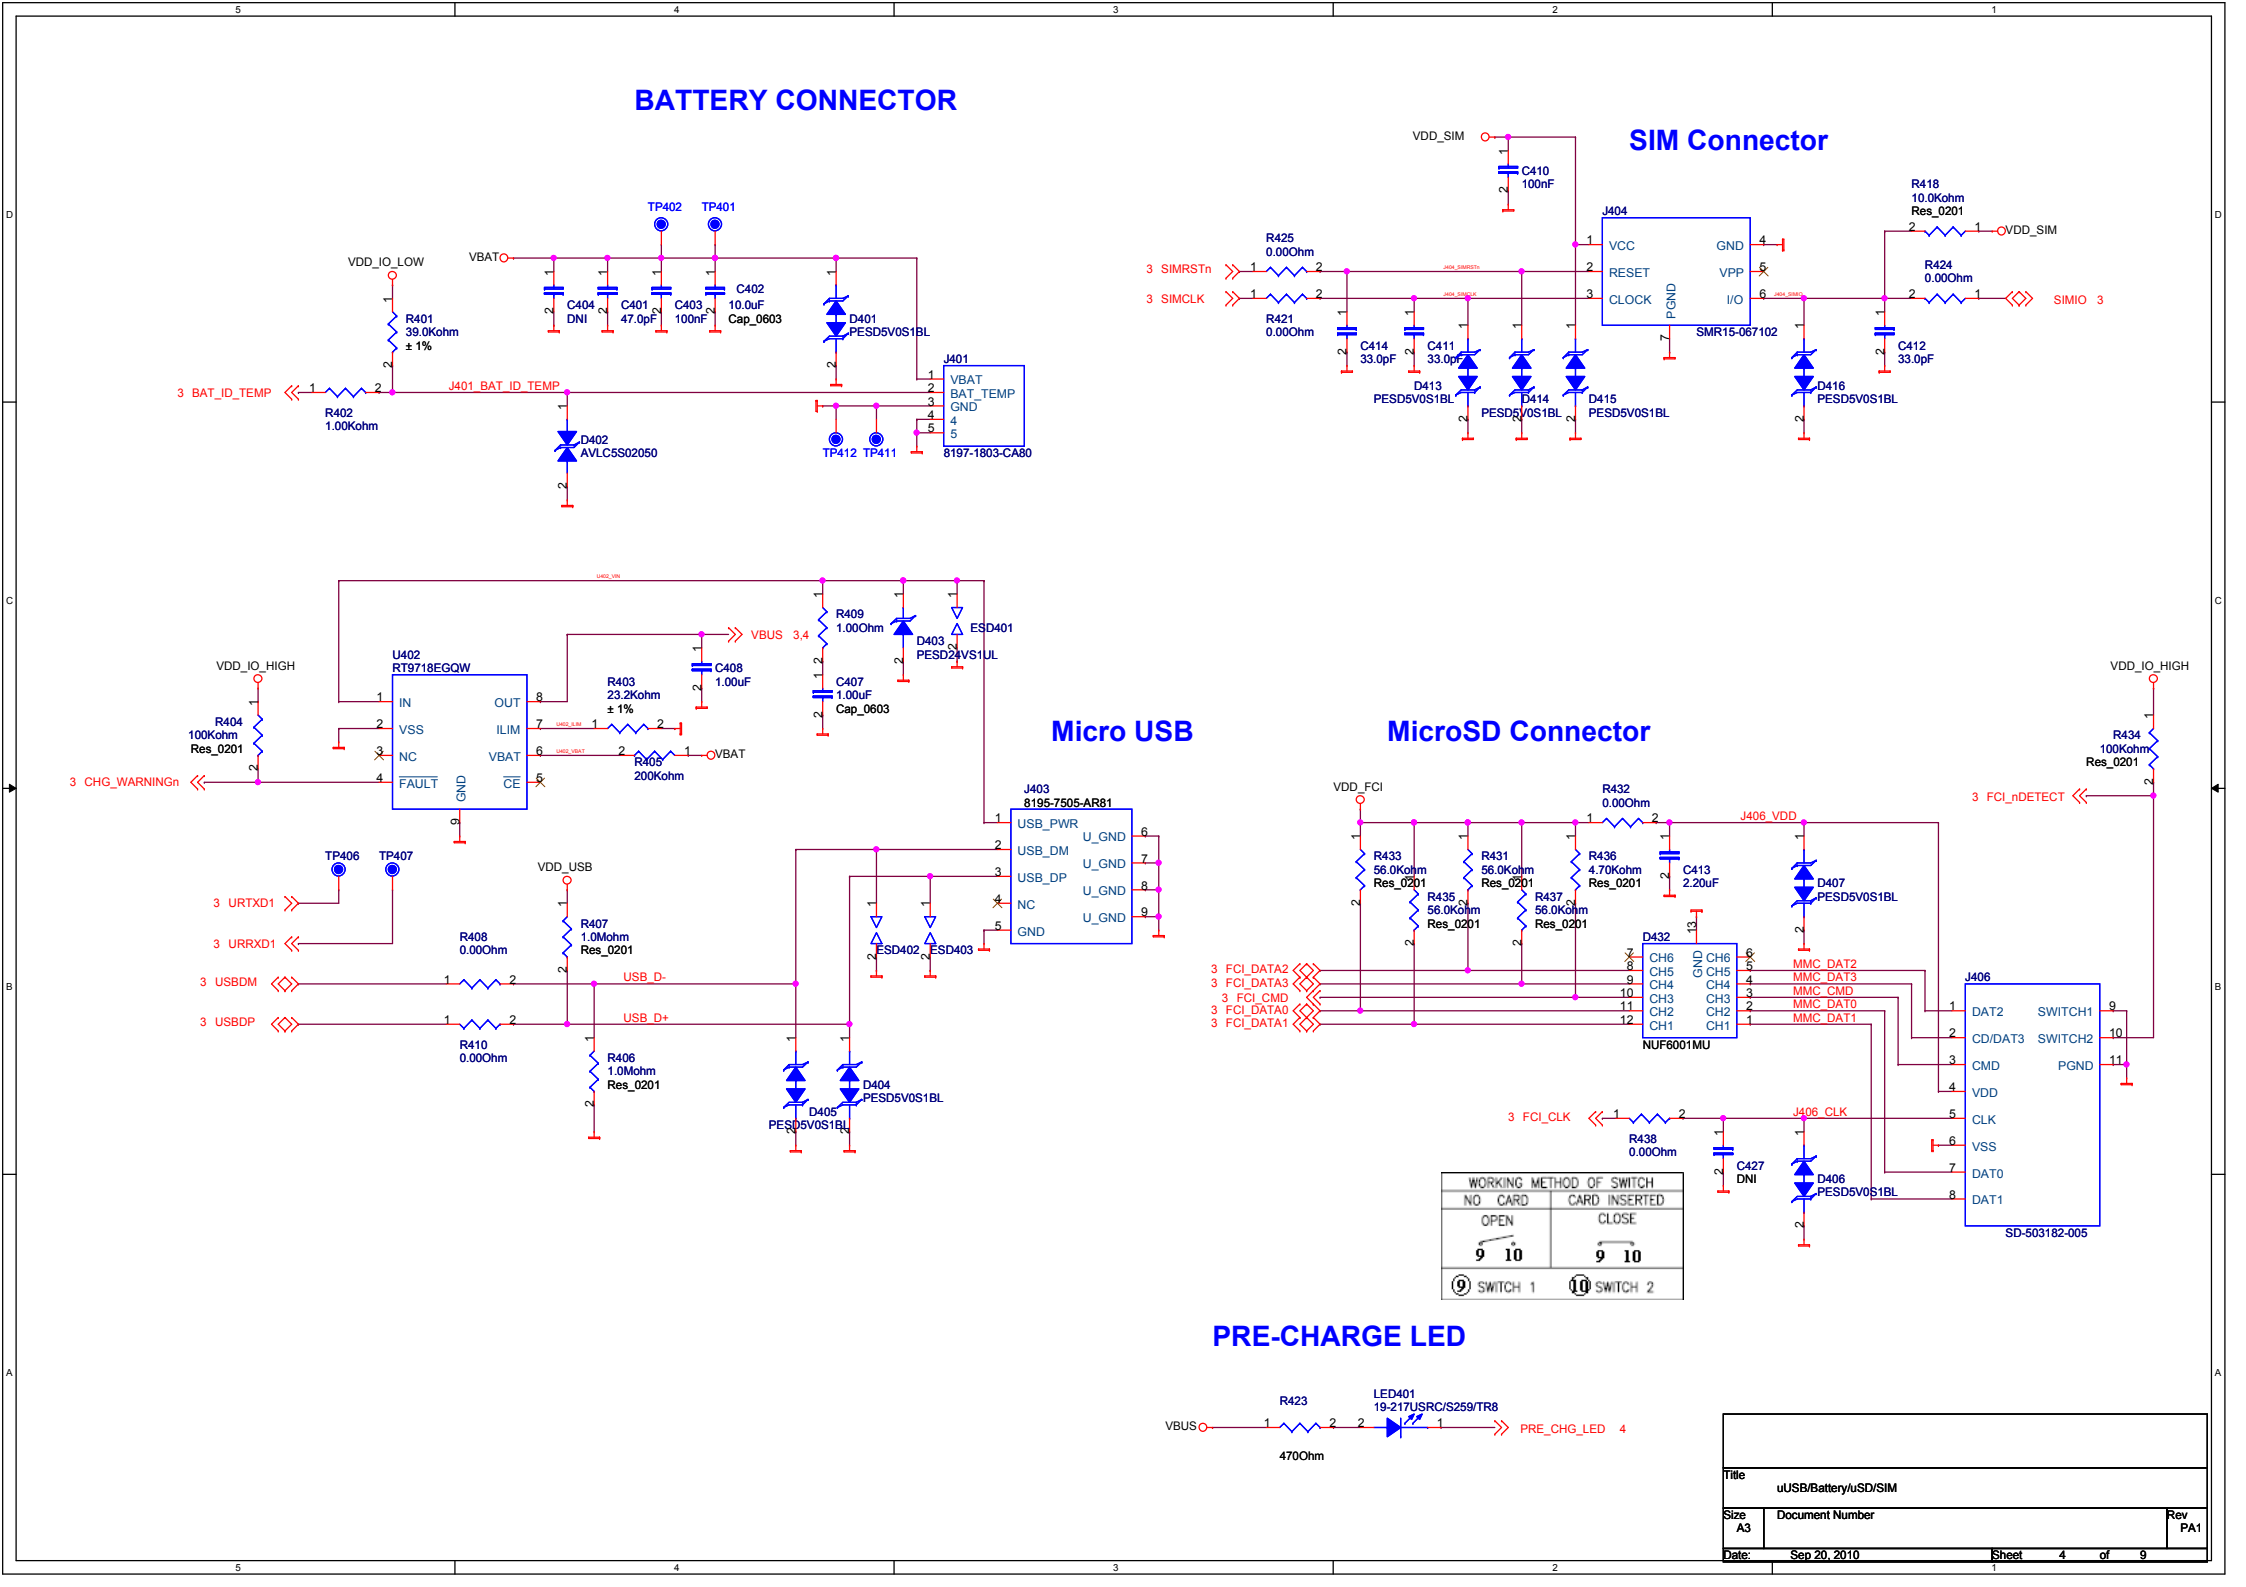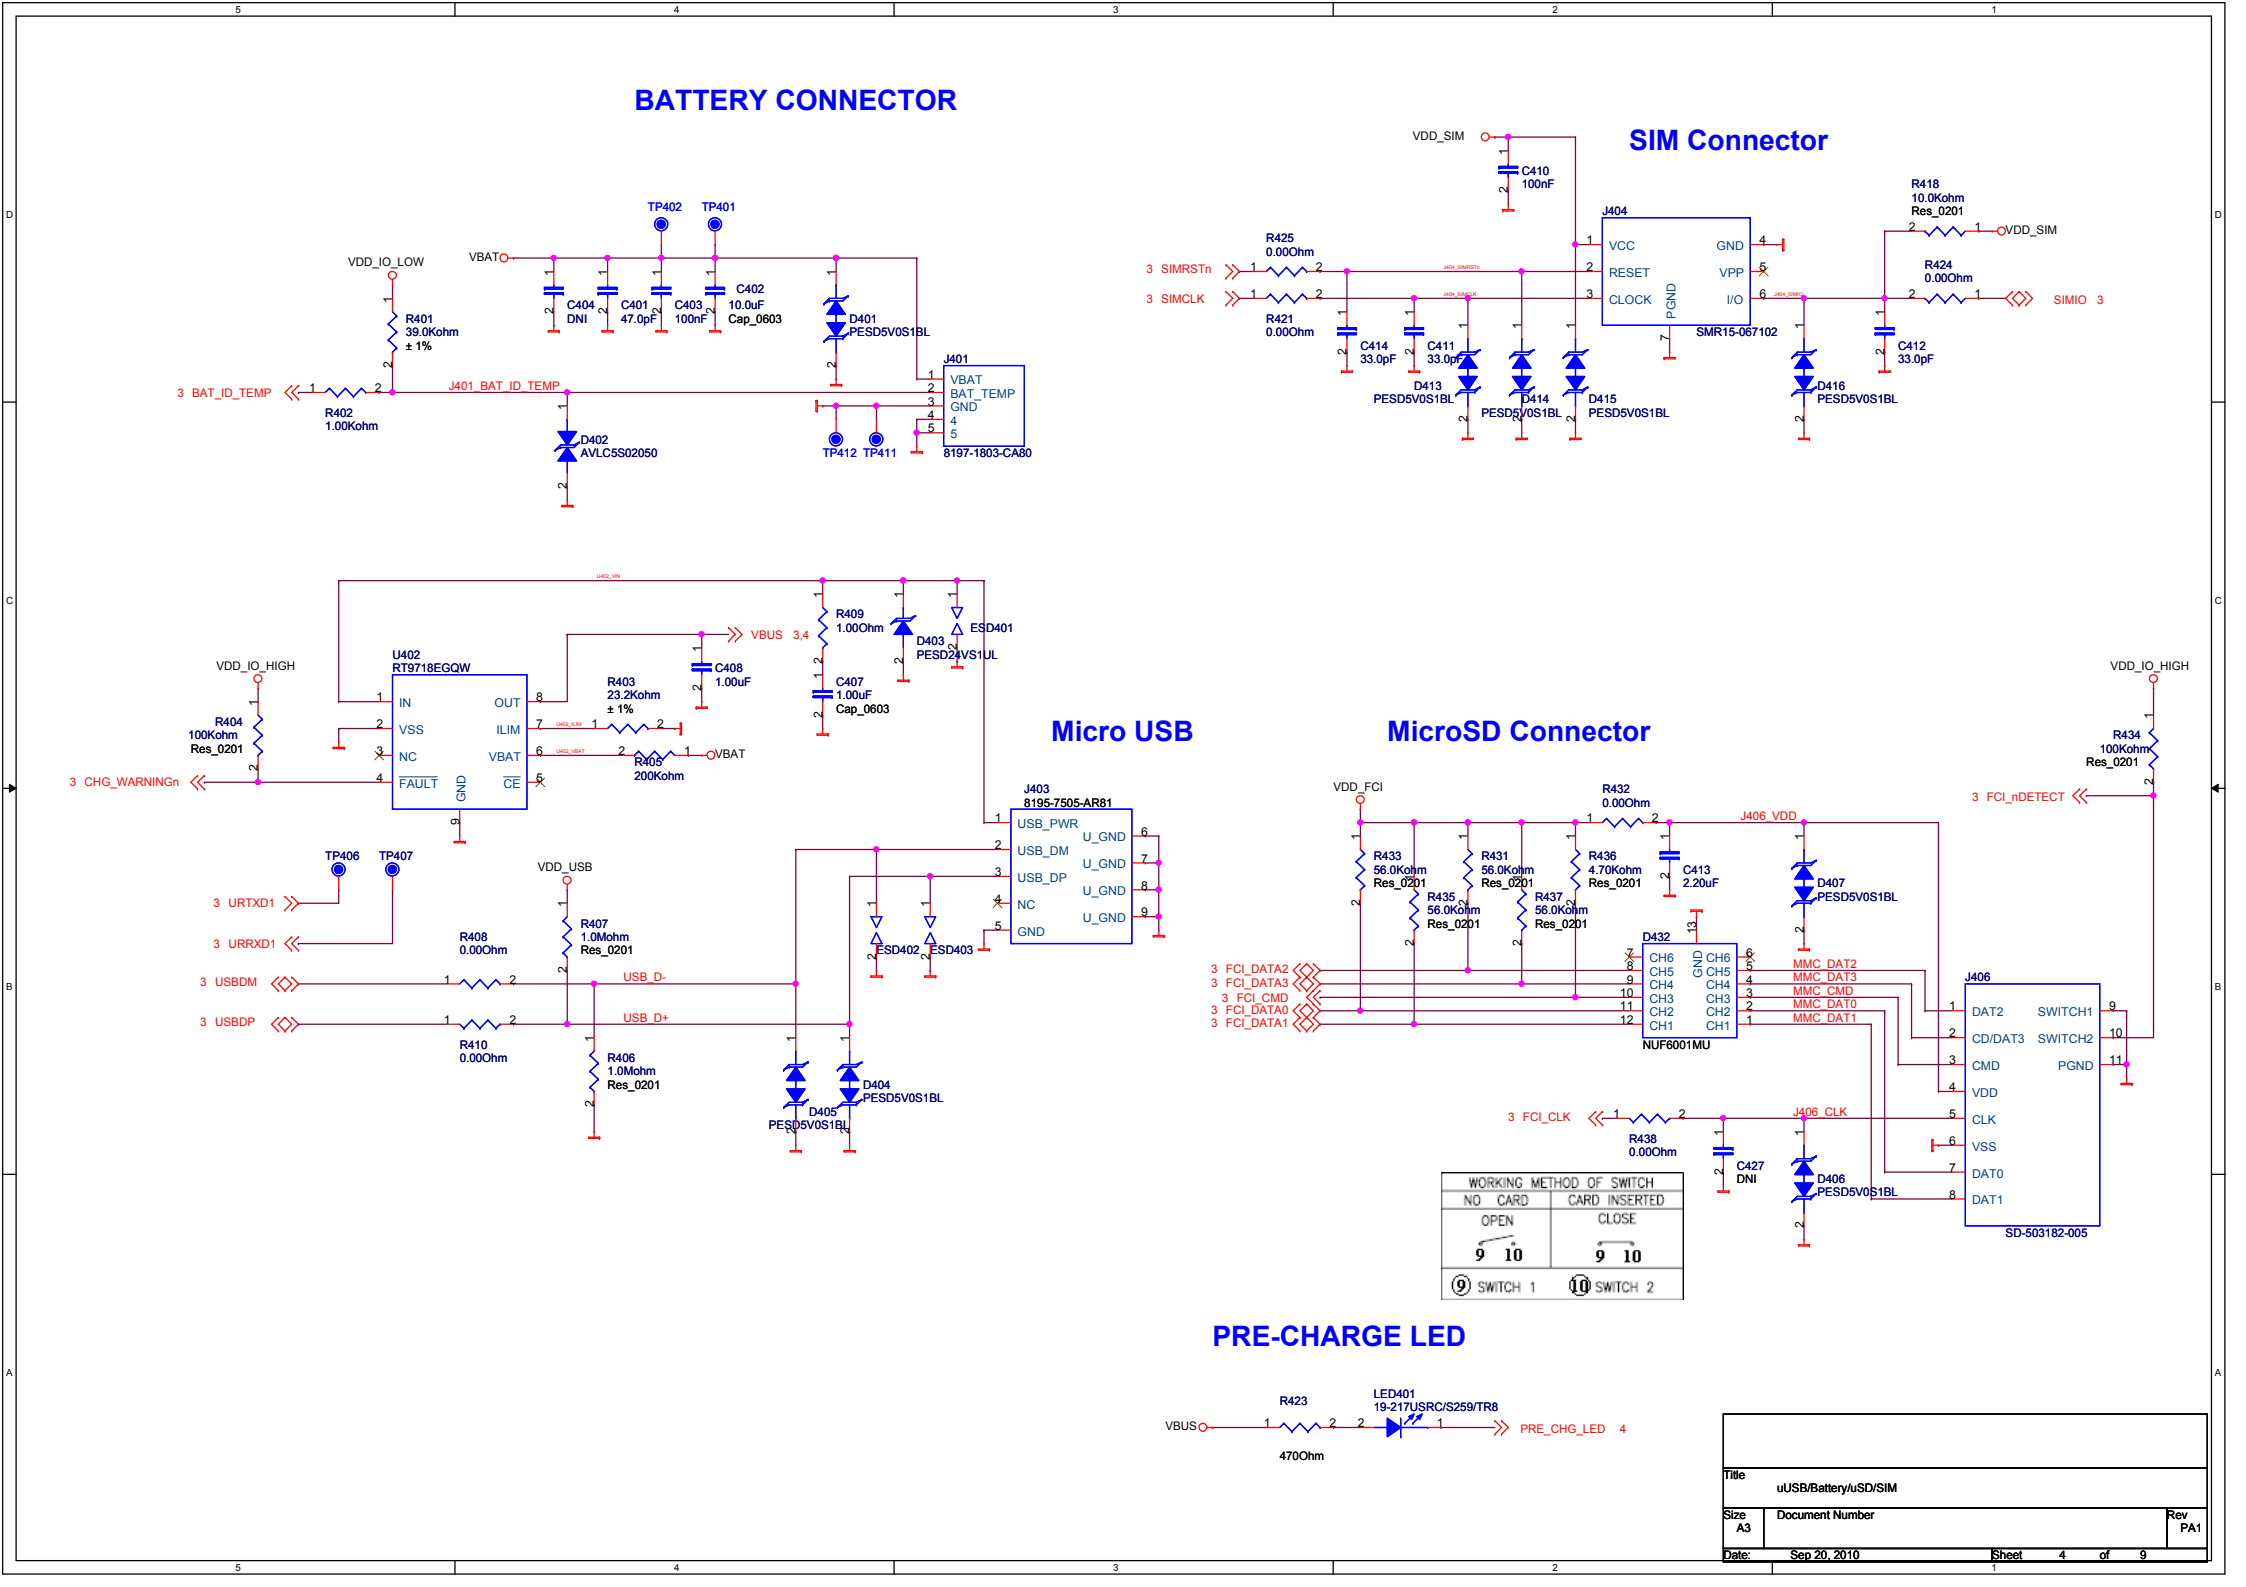

**BATTERY CONNECTOR**

**SIM Connector**

**Micro USB**

**MicroSD Connector**

**PRE-CHARGE LED**

WORKING METHOD OF SWITCH			
		NO CARD	CARD INSERTED
OPEN	CLOSE	9	10
⑨ SWITCH 1	⑩ SWITCH 2		

Title: uUSB/Battery/uSD/SIM


Size: A3

Document Number:

Date: Sep 20, 2010

Sheet: 4 of 9

Rev: PA1

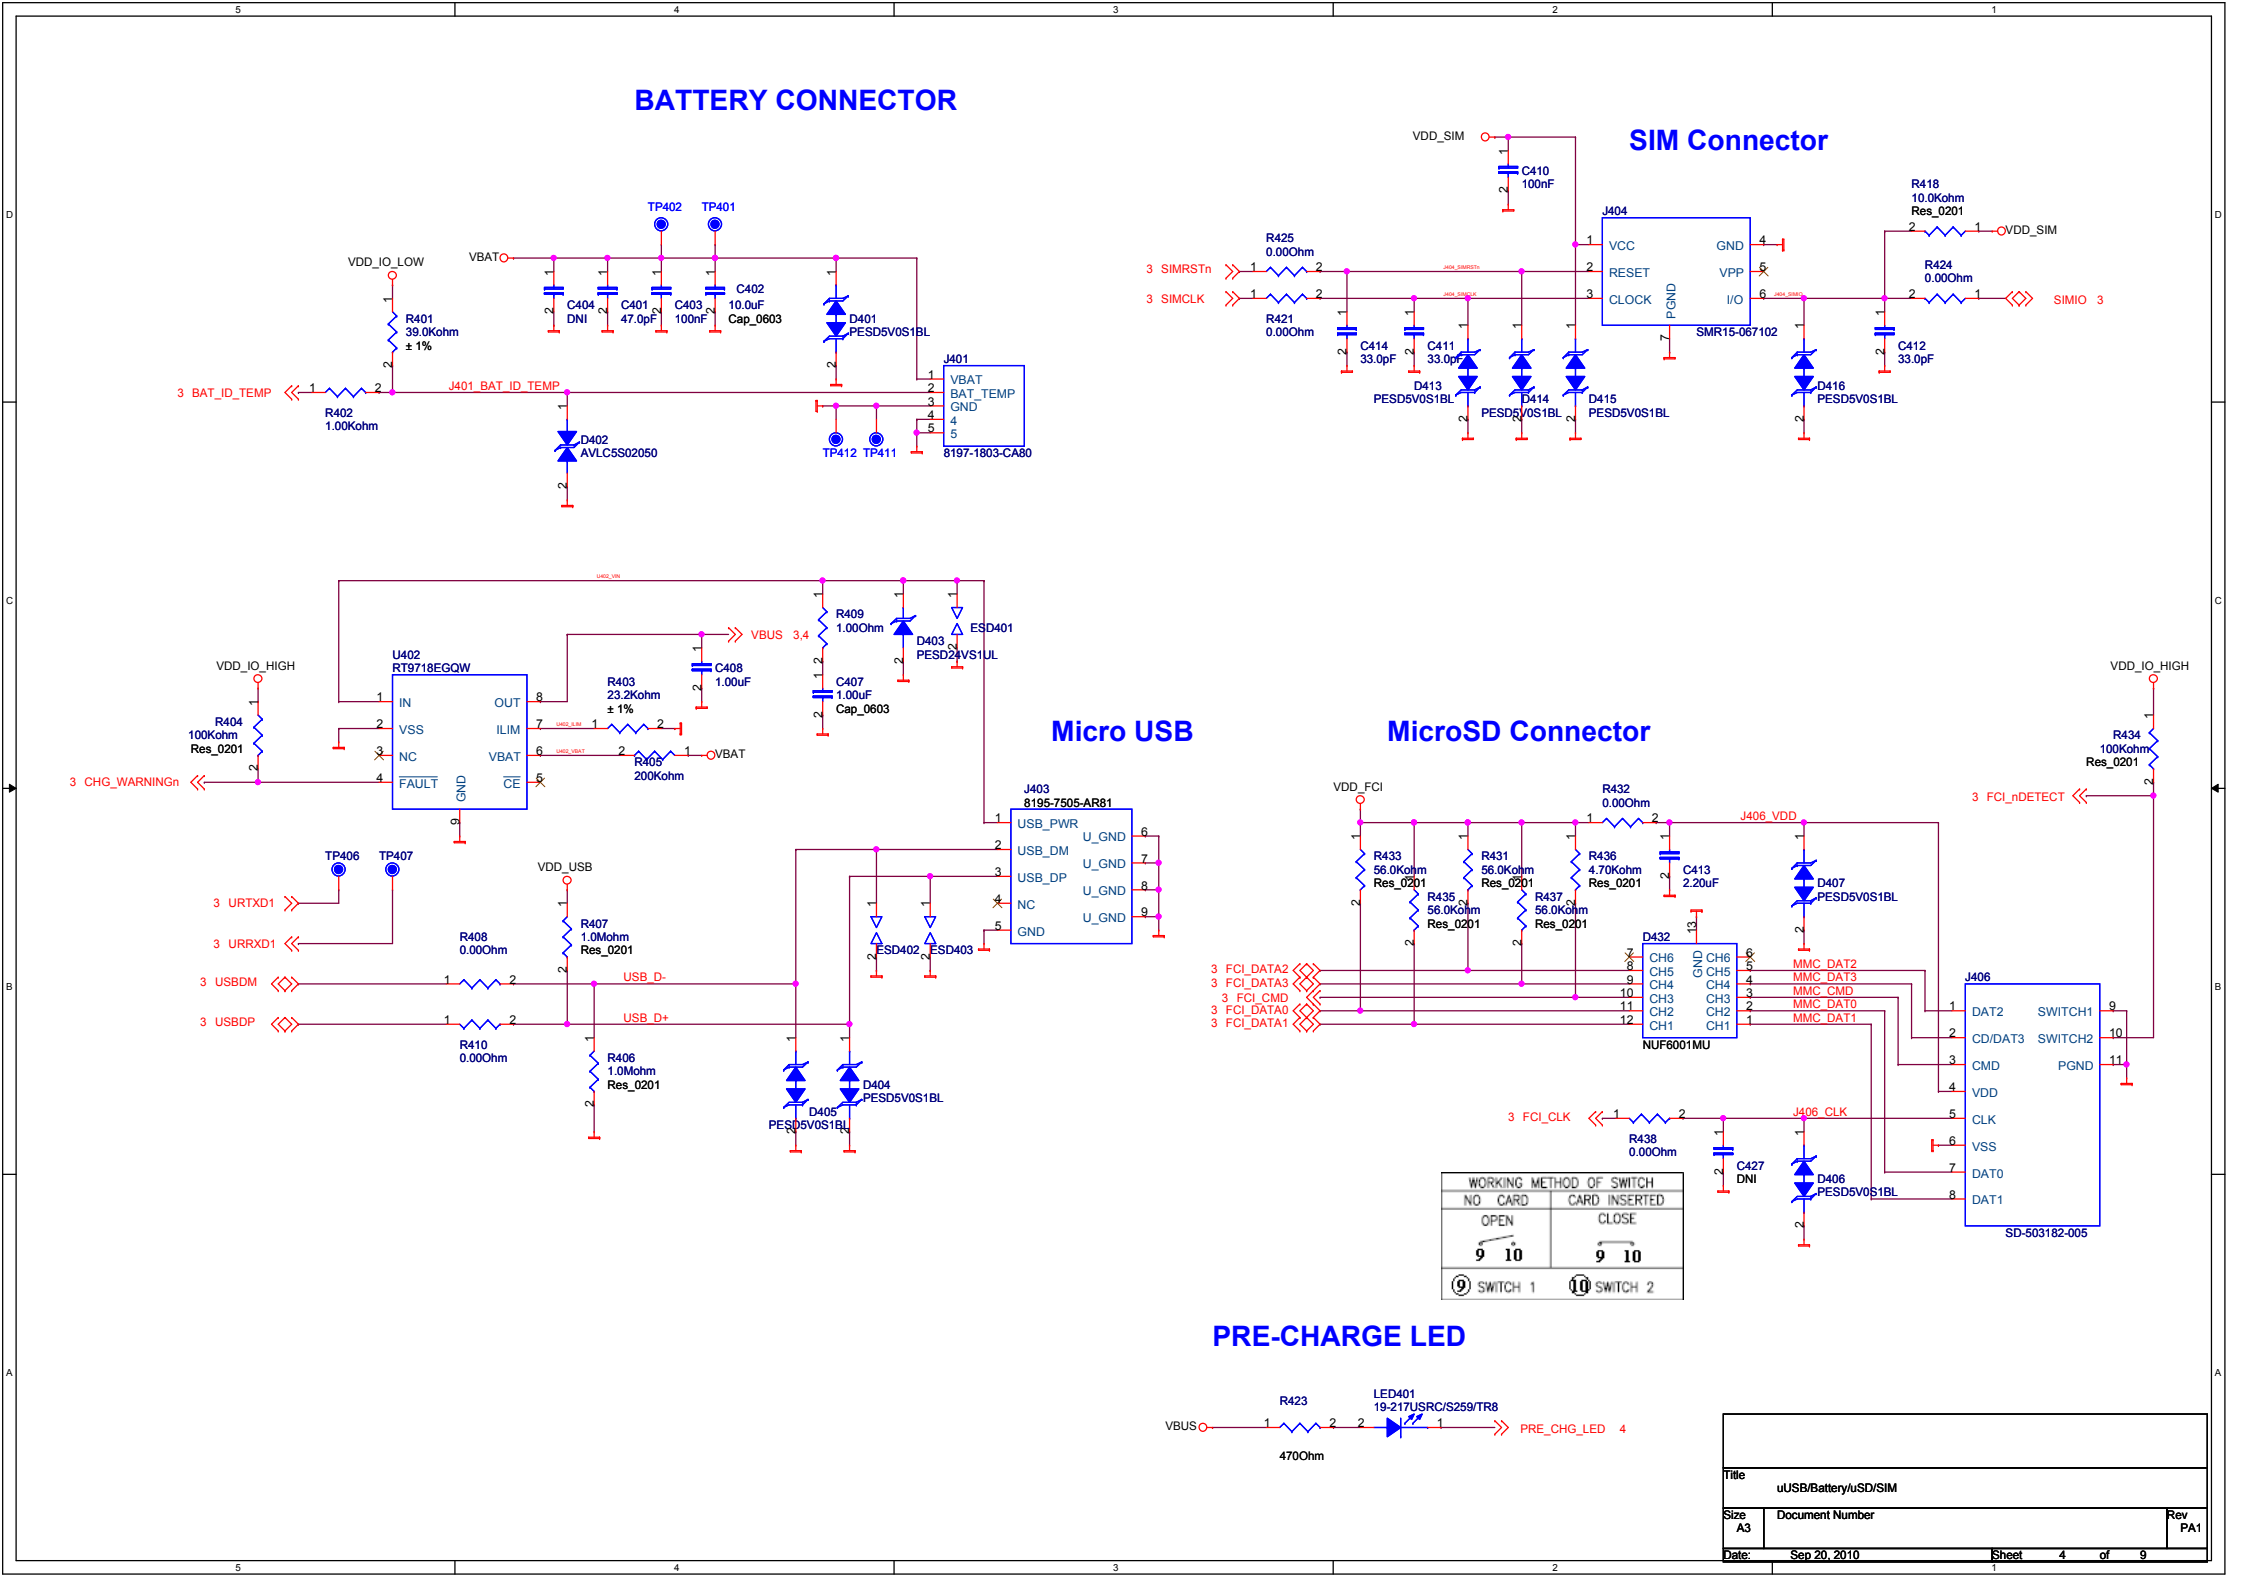

**BATTERY CONNECTOR**

**SIM Connector**

**Micro USB**

**MicroSD Connector**

**PRE-CHARGE LED**

WORKING METHOD OF SWITCH	
NO. CARD	CARD INSERTED
OPEN	CLOSE
9 10	9 10
⑨ SWITCH 1	⑩ SWITCH 2

Title: uUSB/Battery/uSD/SIM

Size: A3

Document Number: Rev PA1

Date: Sep 20, 2010

Sheet: 4 of 9

**BATTERY CONNECTOR**

**SIM Connector**

**Micro USB**

**MicroSD Connector**

WORKING METHOD OF SWITCH		
NO. CARD	CARD INSERTED	
OPEN	CLOSE	
9 10	9 10	9 10
⑨ SWITCH 1	⑩ SWITCH 2	

**PRE-CHARGE LED**

Title: uUSB/Battery/uSD/SIM



Size: A3

Document Number: Rev PA1


Date: Sep 20, 2010

Sheet: 4 of 9


## Camera

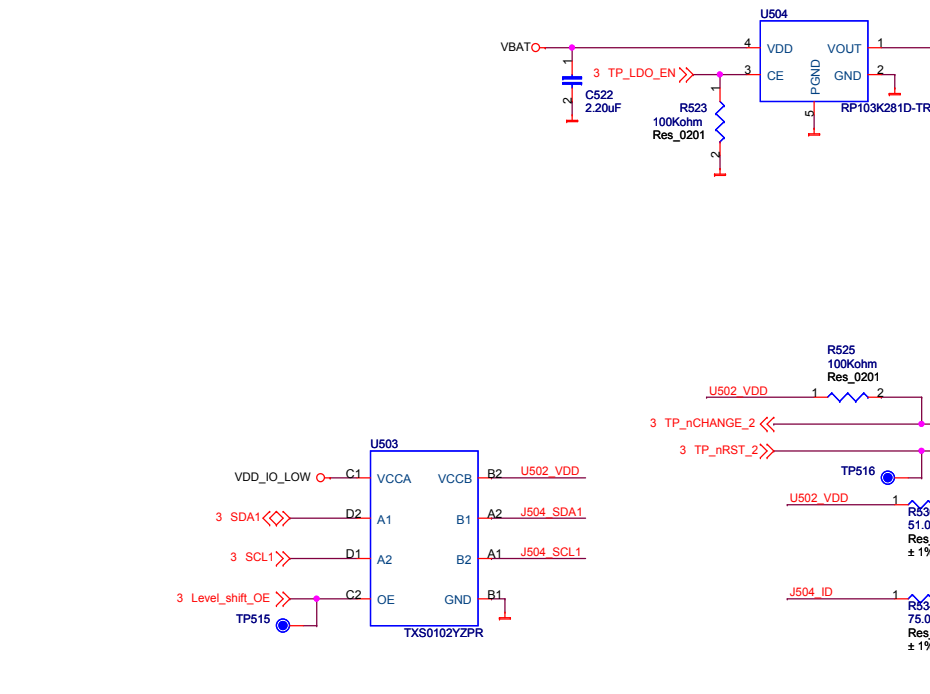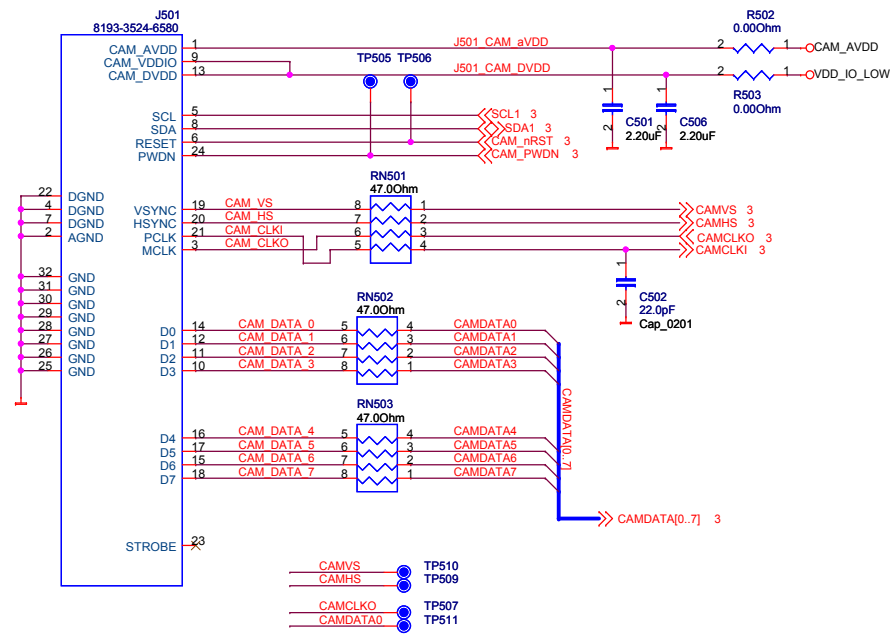

## LCM

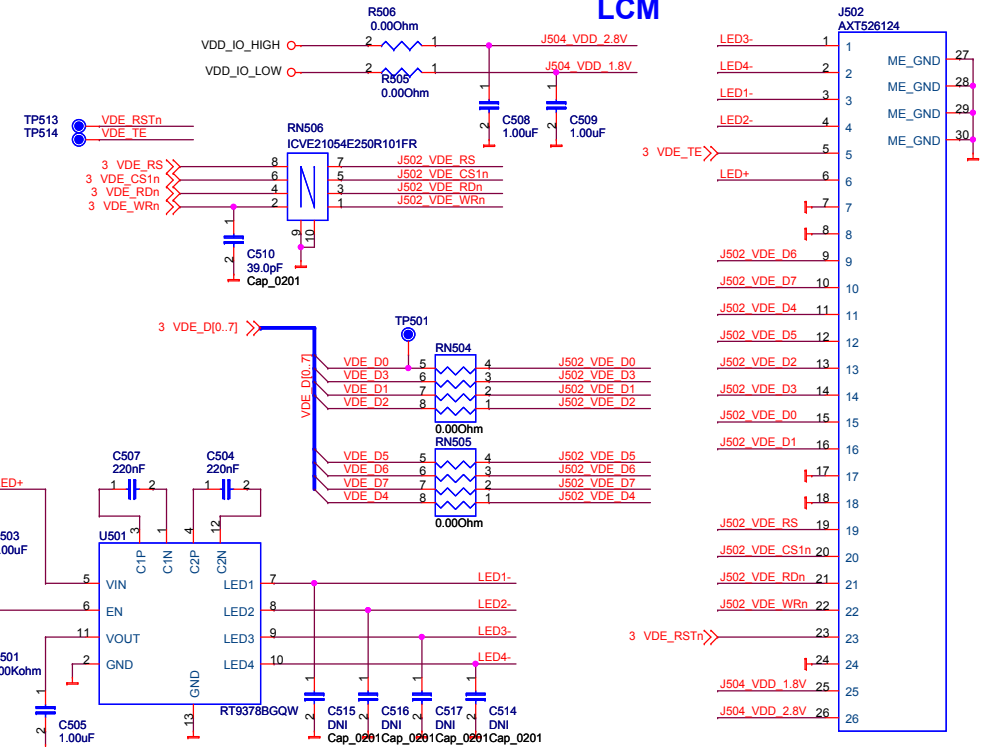


## Touch Panel Connector

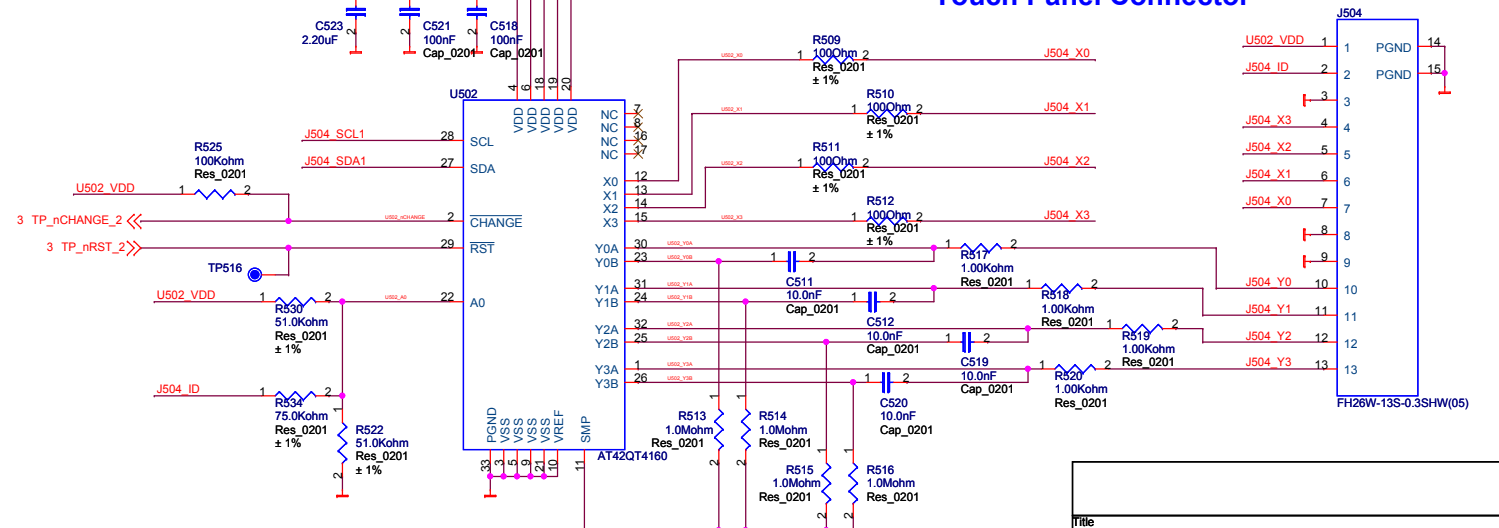


Title			
Optics			
Size A3	Document Number		Rev PA1
Date:	Sep 20, 2010	Sheet	5 of 9




## Side Key

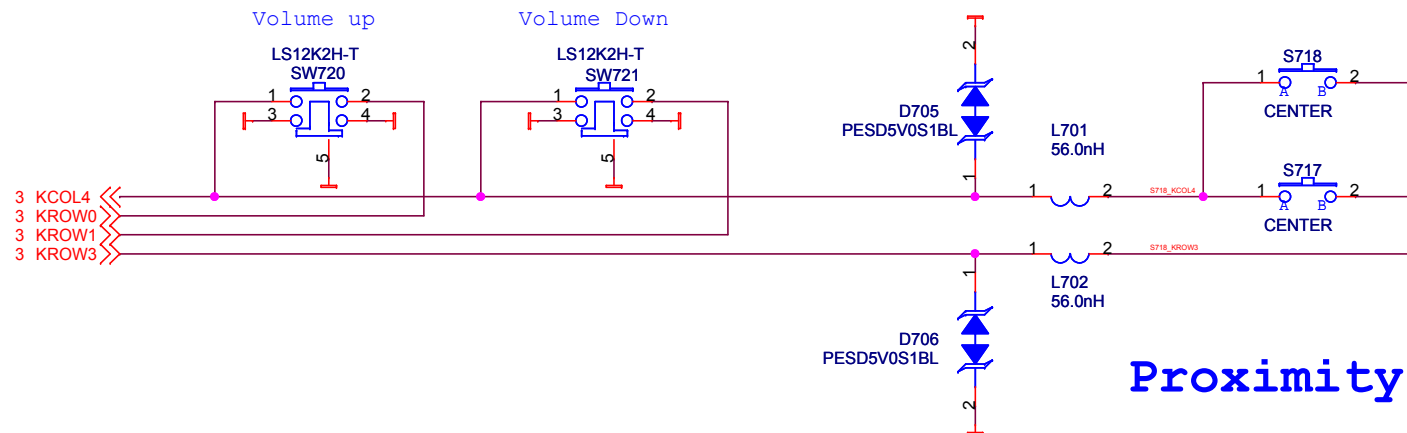


## PowerOn Key

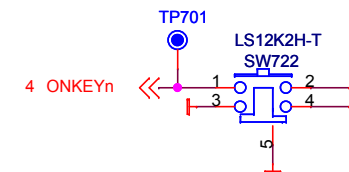

## LED for Main Key

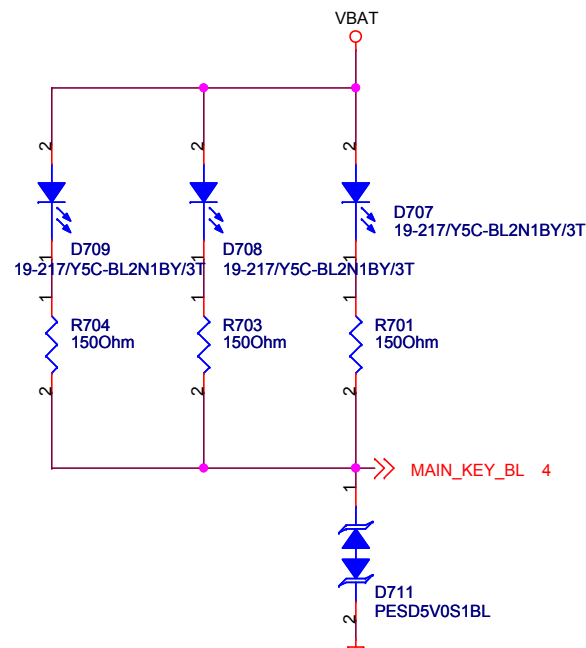

## Proximity Sensor

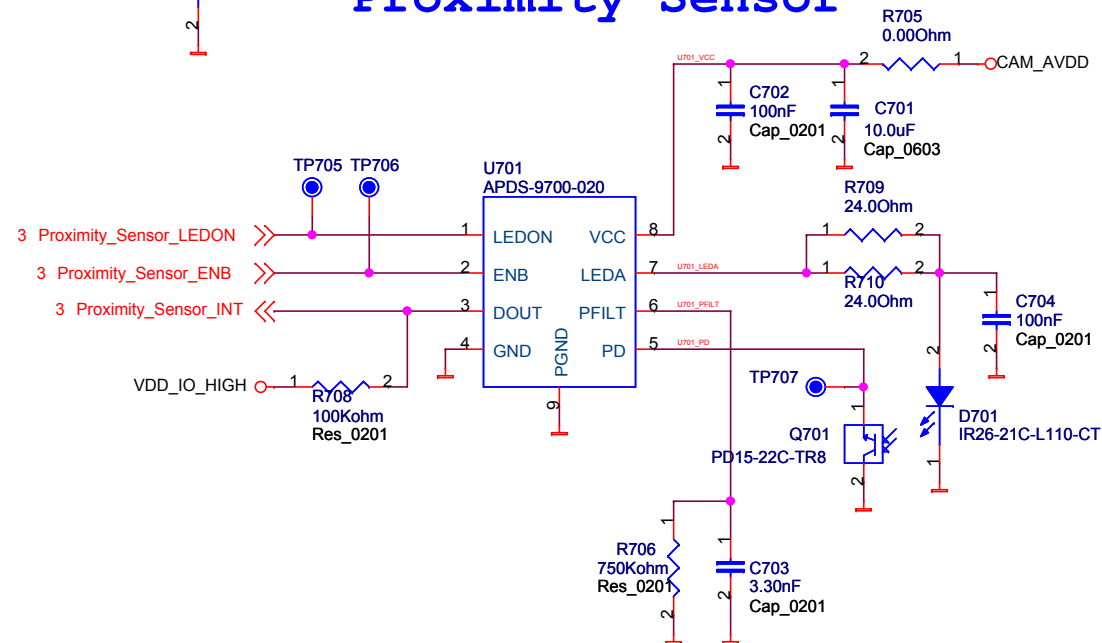

Title			
Keypad			
Size	Document Number		Rev
A4			PA1
Date:	Sep 20, 2010	Sheet	7 of 9

