

Trouble Shooting Guide Repair Instruction Mechanical/TROUBLE SHOOTING GUIDE/4/000 21-1/FEA 209 544/136, Mechanical

Applicable for K530i

Contents

| | |
|---|-----------|
| General | 2 |
| 1.1 Service functions in the software | 2 |
| 1.2 Misuse and other no warranty issues..... | 3 |
| 2 Appearance Problems | 7 |
| 3 Network/Signal Problems | 8 |
| 4 On/Off Problems | 11 |
| 5 Audio Problems | 13 |
| 6 Key Problems | 18 |
| 7 Display Problems | 20 |
| 8 Illumination Problems | 21 |
| 9 Alert Problems | 23 |
| 10 SIM Problems | 24 |
| 11 M2 Memory Problems | 25 |
| 12 Charging/Capacity Problems | 26 |
| 13 Camera Problems | 28 |
| 14 Data Communication Problems | 34 |
| 15 Software Problems | 35 |
| 16 Revision History | 36 |

General

This document outlines the mechanical repairs that should be made in an attempt to fix the common failures that are seen in the field. To gain a complete understanding of how to test and repair a specific failure, this document should be used in conjunction with the Test Instructions, Mechanical and the Working Instructions, Mechanical.

1.1 Service functions in the software

The service menu will be accessed with the following key combination. Use the joystick.

⇒*←←*←*

They are as follows:

Service info

Service tests

Text labels

The phones software has a built in service functionality that allows you to test some of the phones functions. (See point 2 above) It looks like this:

Main display

LED/illumination

Keyboard

Speaker

Earphone

Microphone

Vibrator

Camera

Memory Stick

Real time clock

Total call time

NOTE: Different names may occur depending on language setting and customization.

1.2 Misuse and other no warranty issues





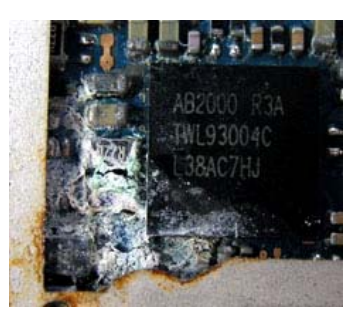
Misuse is not covered by warranty. This chapter will explain what's not covered by warranty. Phones that have been exposed to misuse will not be covered by warranty.


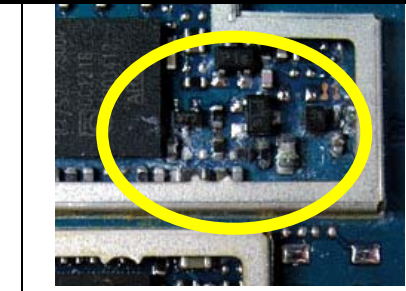
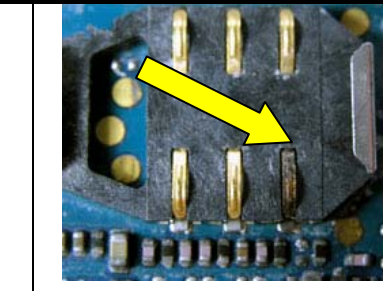

This means: if it is possible to repair the phone, the customer will have to pay for the repair. SEMC will not allow any of these phones to be claimed into WCMS. Some local perspectives may interfere with this. Please reference to local directives.


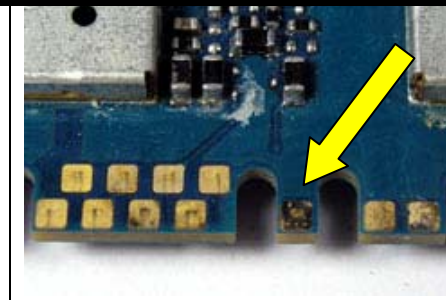
1.2.1 Action

Make a general visual inspection for misuse.

Below are some **examples** of what is not covered by warranty.

| | | | | |
|--|--|---|--|--|
|  |  |  |  |  |
| Front window broken due to misuse. | LCD cracked due to drop. | Clear scratches | Mark after drop | Corrosion components on the PCB. |

| | | | |
|---|--|---|---|
|  |  |  |  |
| Corrosion components on the PCB. | Corrosion components on the PCB. | SIM reader damaged by liquid. | System connector damaged by liquid |

| | |
|---|--|
|  |  |
| Components around system connector damaged by liquid | System connector pad(s) damaged by liquid |

1.2.2 Liquid damage sticker

In the phone there is placed a sticker that can give you a hint to see if the phone is damage by liquid or not. This sticker is located near the SIM reader (Fig. 1.2.1) and it is possible to see it without disassemble the phone.

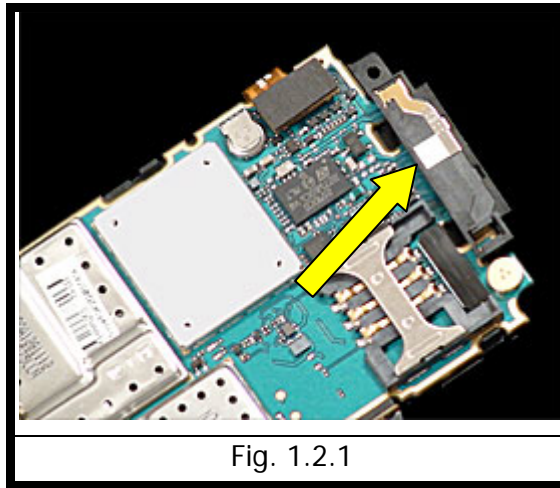
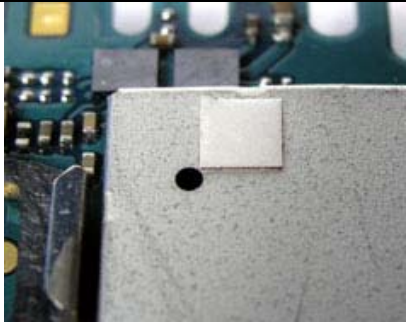
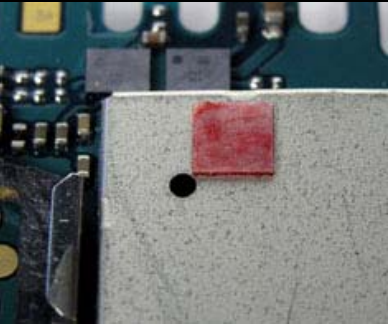


Fig. 1.2.1


On the pictures below you will see the different between a sticker that has been in contact with liquid (Fig. 1.2.3) and with one that hasn't (Fig. 1.2.2).

| This sticker is ok | This sticker <u>is not</u> ok | |
|---|--|--|
|  |  | <p>The white sticker that has been in contact with liquid turns into a red or pink sticker. In this case you should check the phone for liquid damage (See point 1.1.1).</p> <p>Note: There must be clear marks after liquid on the PCB before rejecting the phone for repair.</p> |
| Fig. 1.2.2 | Fig. 1.2.3 | |

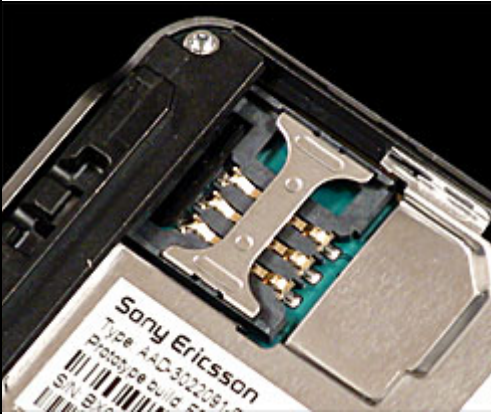
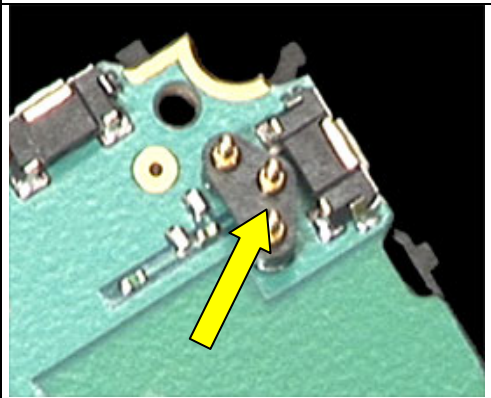
1.2.3 Action

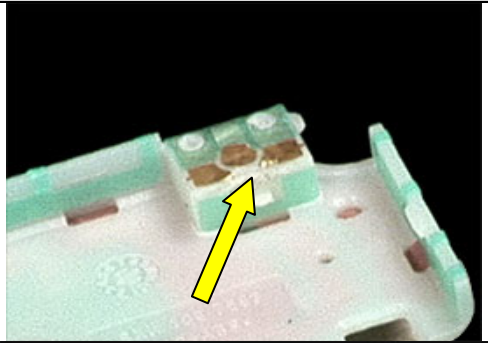
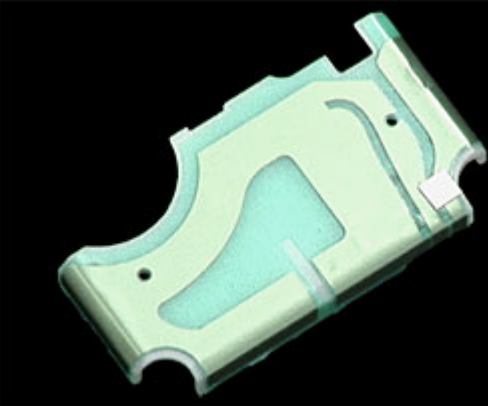
Make a general visual inspection for misuse, corrosion or oxidation from liquid damage. No further action should be taken for a liquid damaged phone. Handle the unit according to local directives.

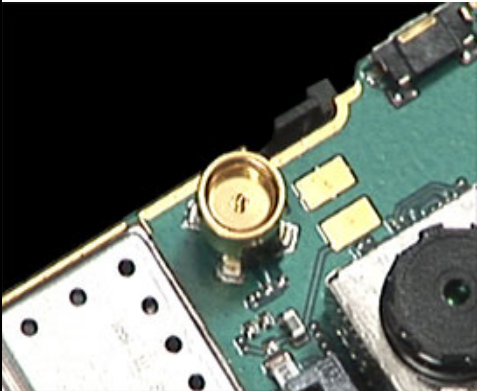
2 Appearance Problems

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---|--|--|
| Appearance | Visually inspect the cosmetic quality of all user viewable surfaces | <ul style="list-style-type: none"> • If dirty – Clean parts as necessary. • If unacceptably scratched or damaged – Replace damage parts as necessary. <p>NOTE: Misuse is not covered by warranty. Refer to chapter 1.2</p> |  |
| | Visually inspect all keys | <ul style="list-style-type: none"> • If dirty – Clean parts as necessary. • If unacceptably scratched or damaged – Replace damaged parts as necessary. <p>NOTE: Misuse is not covered by warranty. Refer to chapter 1.2</p> | |
| | Visually inspect for improper gap between seams | <ul style="list-style-type: none"> • Reassemble or replace damaged parts as necessary. | |


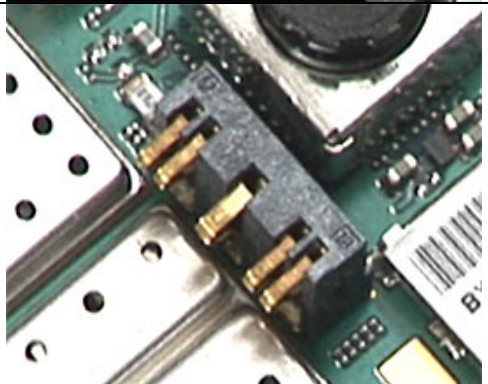
3 Network/Signal Problems


| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------------------|---------------------------------------|---|--|
| No Signal or Poor Signal | Before proceeding → | Perform a flash upgrade. | |
| | Visually inspect SIM holder | <ul style="list-style-type: none"> • If dirty or oxidized – Clean it. • If damaged – Send to an electrical repair location. |  |
| | Visually inspect antenna contact pads | <ul style="list-style-type: none"> • If dirty or oxidized – Clean the pads and replace the antenna assembly. |  |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--------------------------------------|--|--|
| | Visually inspect antenna | <ul style="list-style-type: none"> If dirty, oxidized or damaged – Replace it. |   |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |



| Problem Area | Items to Check | Repair Action | Reference Image |
|--|---|--|---|
| No signal when using external antenna (ex. Hands free in car). | Connect the phone to a handsfree car kit connected with external antenna. Visually inspect the antenna bar on the phone. | <ul style="list-style-type: none"> If no or only very less signal – Push the middle pin of the ext. antenna connector a few times |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |

4 On/Off Problems

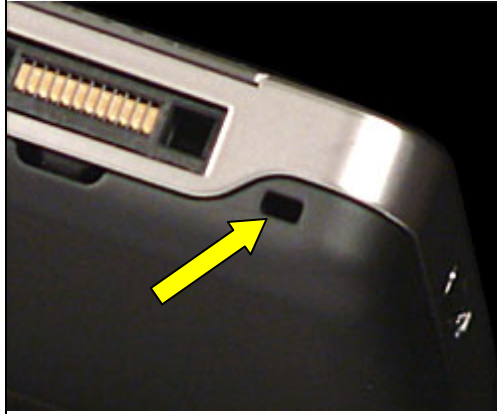
| Problem Area | Items to Check | Repair Action | Reference Image |
|-------------------|---|--|--|
| Power On problems | Check whether the phone vibrates 10 to 15 seconds after pressing the power key and whether the keypad illuminates | <ul style="list-style-type: none"> If activation of the vibrator or keypad are detected, refer to the "Display Problems" chapter 7 | |
| | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade. | |
| | Visually inspect contact pads on battery | <ul style="list-style-type: none"> If dirty or oxidized – Clean pads. If damaged – Replace the battery. |  |
| | Visually inspect battery connector | <ul style="list-style-type: none"> If dirty or oxidized – Clean it. <p>Note: Take care not to bend the connector pin's</p> <ul style="list-style-type: none"> If damaged – Send to an electrical repair location. |  |



| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--------------------------------------|--|---|
| | Visually inspect the power key | <ul style="list-style-type: none"> If damaged – Replace it. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |

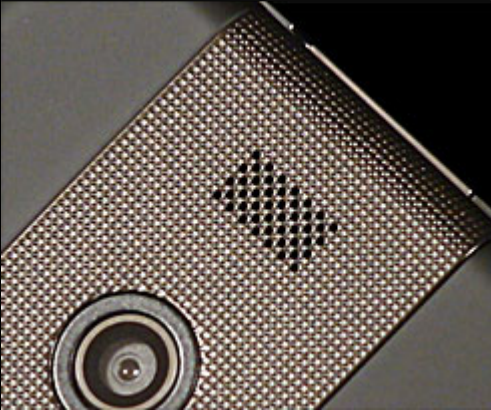

5 Audio Problems

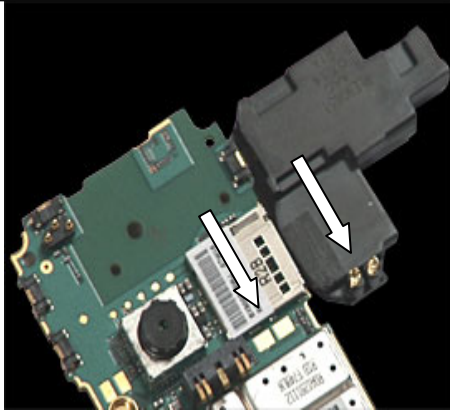

| Problem Area | Items to Check | Repair Action | Reference Image |
|---------------------------|----------------------|---|--|
| Buzzing noise during call | 1 st Step | <ul style="list-style-type: none"> Replace Receiver "Ear Speaker" part Attention; The fault can only be detected in live call as the phone needs to have audio loop active cannot be detected from Service menu! |  |
| | 2 nd Step | <ul style="list-style-type: none"> Replace Frame cover assy SXK 109 7825 must be R2B version, this can be identified by the on the metallised part of the frame Cover shown by the arrow. Do not use R2A version Attention; The fault can only be detected in live call as the phone needs to have audio loop active cannot be detected from Service menu! |  |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--------------------------------------|---|-----------------|
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. Next step is to replace microphone part | |


| Problem Area | Items to Check | Repair Action | Reference Image |
|------------------------------|---|--|--|
| Microphone: | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |
| | Visually inspect the microphone's external port | <ul style="list-style-type: none"> If clogged - Clean or replace rear cover. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |
| Speaker: No sound or poor | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |

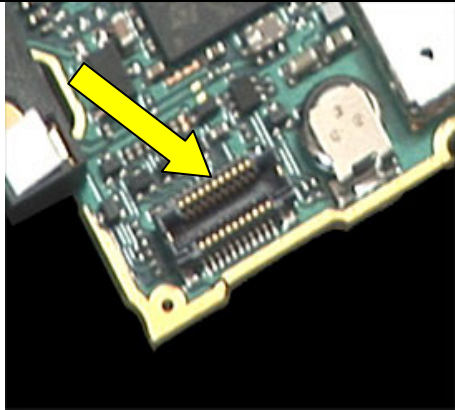

| Problem Area | Items to Check | Repair Action | Reference Image |
|----------------------------------|--|--|---|
| quality sound | Visually inspect speaker's external port | <ul style="list-style-type: none"> If clogged – Clean or replace front. |  |
| | Visually inspect speaker's dust cloth | <ul style="list-style-type: none"> If dirty or damaged – Replace front. | |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace receiver |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |
| Loudspeaker: No sound or poor | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |

| Problem Area | Items to Check | Repair Action | Reference Image |
|---------------|---|---|--|
| quality sound | Visually inspect speaker's external port | <ul style="list-style-type: none"> If clogged – Clean it. |  |
| | Visually inspect the loudspeaker's BOX dust cloth | <ul style="list-style-type: none"> If dirty or damaged – Replace cushion (Speaker) |  |

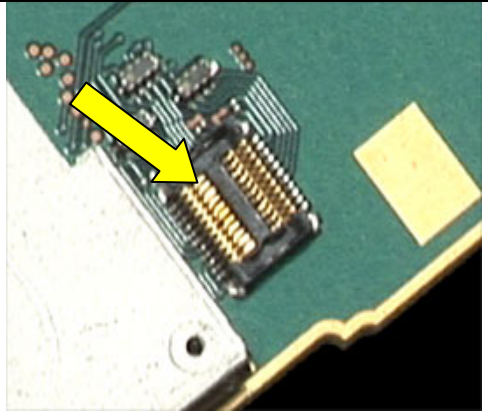
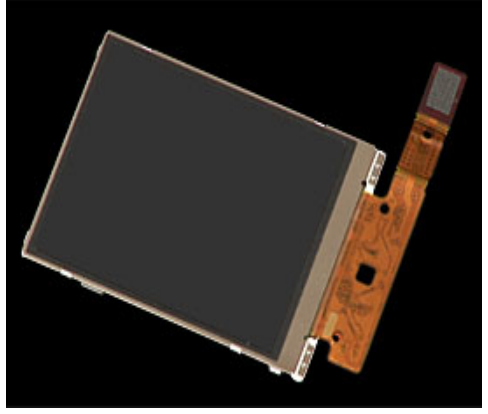
| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---------------------------------------|--|--|
| | Visually inspect the loudspeaker pins | <ul style="list-style-type: none"> • If dirty or oxidized – Clean pins. • If damaged send to electrical repair |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Replace Speaker Box Assembly |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Handle the unit according to local directives. | |

6 Key Problems

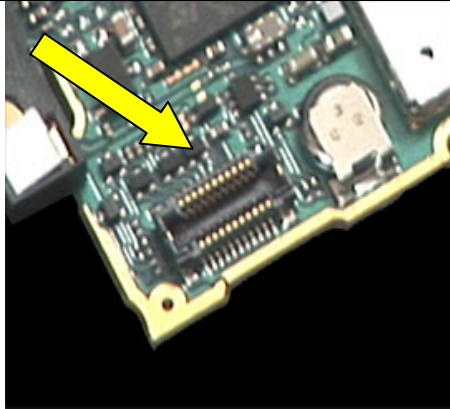
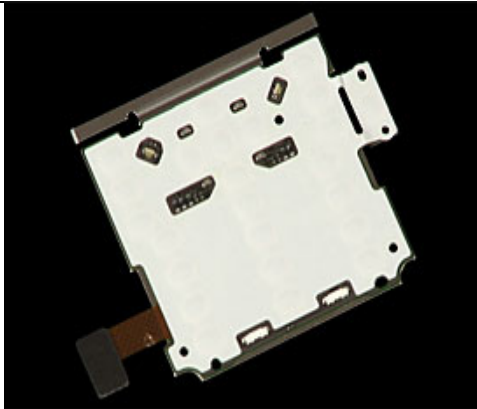
| Problem Area | Items to Check | Repair Action | Reference Image |
|---|---|--|--|
| <p>Keyboard:</p> <p>A key on the keyboard is not functioning or is intermittent</p> | <p>Visually inspect for debris between keypad key flex module, and for damage to the keypad and the key flex module.</p> <p>NOTE: Camera switch is located on the key flex module.</p> | <ul style="list-style-type: none"> • If dirty – Clean both parts. • If damaged - Replace keypad and/or key flex module as necessary. |  |

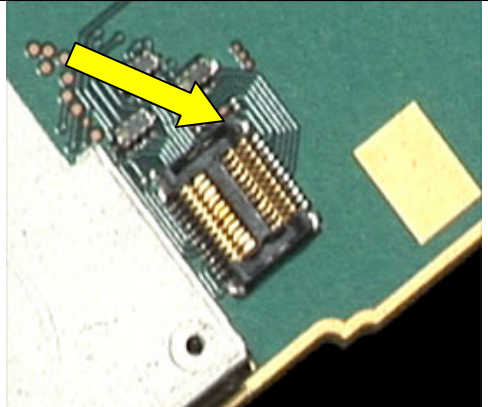
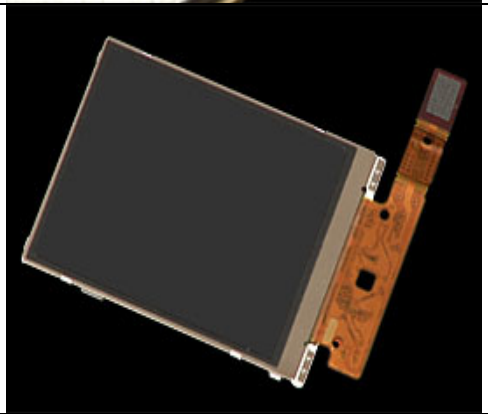
| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--|---|--|
| | Visually inspect whether the key flex module is properly connected to its connector on the PCB | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace key flex module, if it has not already been replaced. | |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |
| Side keys | Visually inspect for damage to the side keys | <ul style="list-style-type: none"> If damaged - Replace keys as necessary. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |

7 Display Problems

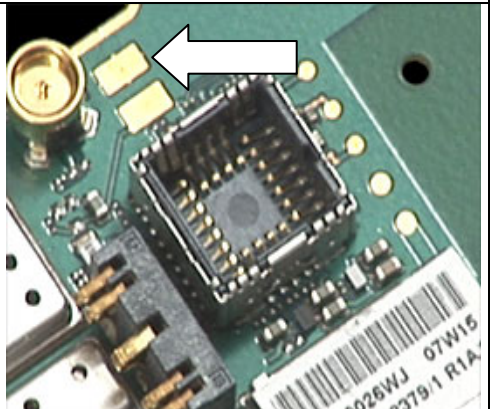
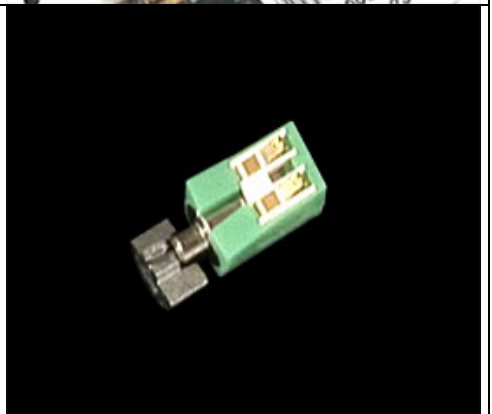
| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---|--|--|
| LCD problem | Check whether the phone vibrates 10 to 15 seconds after pressing the power key and whether the keypad illuminates | <ul style="list-style-type: none"> If activation of the vibrator are not detected, refer to the On/Off Problems" chapter 2 | |
| | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |
| | Visually inspect whether the LCD flex film is properly connected to its connector on the PCB | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the LCD. <p>NOTE: Misuse is not covered by warranty. Refer to chapter 1.2</p> |  |

8 Illumination Problems

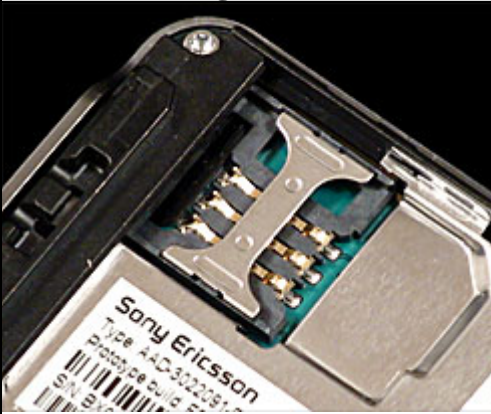
| Problem Area | Items to Check | Repair Action | Reference Image |
|---|--|---|--|
| Keys: The entire keypad or a portion of the keypad does not illuminate. | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. |  |
| | Visually inspect whether the key flex module is properly connected to its connector on the PCB | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. | |
| | Visually inspect the key flex module. | <ul style="list-style-type: none"> If dirty or oxidized – Replace it. If damaged – Replace it |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the key flex module. | |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--|---|--|
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |
| LCD | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |
| | Visually inspect whether the LCD flex film is properly connected to its connector on the PCB | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. |  |
| | If issue has not been resolved → | <ul style="list-style-type: none"> Replace the LCD. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |



9 Alert Problems

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---|--|--|
| Vibrator: | Before proceeding → | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |
| | Visually inspect the vibrator pads on the PCB | <ul style="list-style-type: none"> If dirty or oxidized – Clean them. |  |
| | Visually inspect the vibrator | <ul style="list-style-type: none"> If dirty or oxidized – Replace it. If damaged – Replace it. |  |
| Loudspeaker | Refer to “loudspeaker” section under “Audio Problems” | | |


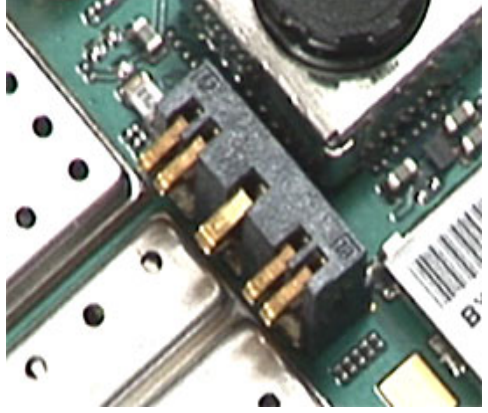
10 SIM Problems


| Problem Area | Items to Check | Repair Action | Reference Image |
|---|---|--|---|
| SIM undetected (Insert SIM) | Inspect SIM holder | <ul style="list-style-type: none"> • If dirty or oxidized – Clean. • If damaged – Send to an electrical repair location. |  |
| Unit indicates an incorrect SIM is inserted (Insert correct SIM) | Check whether the phone is locked to a particular carrier and whether the correct carrier's SIM is being used | <ul style="list-style-type: none"> • Use Correct Carrier SIM or test SIM. | |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Handle the unit according to local directives. | |

11 M2 Memory Problems

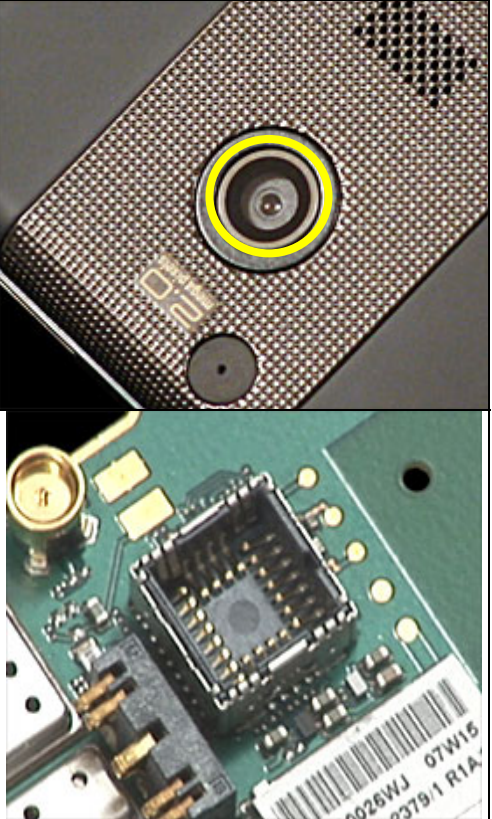
| Problem Area | Items to Check | Repair Action | Reference Image |
|---------------|--------------------------------------|---|---|
| M2 undetected | Inspect M2 holder | <ul style="list-style-type: none"> • If dirty or oxidized – Clean. • If damaged – Send to an electrical repair location. |  |
| M2 undetected | Inspect M2 Card | <ul style="list-style-type: none"> • Use test M2 card to verify fault • If dirty or oxidized – Clean. • Replace M2 Memory Card |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Handle the unit according to local directives. | |


12 Charging/Capacity Problems

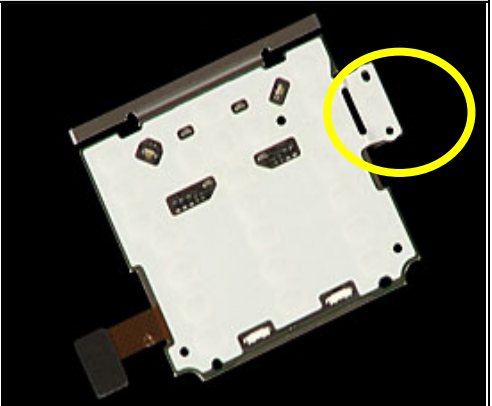

| Problem Area | Items to Check | Repair Action | Reference Image |
|---|---|--|--|
| Battery will not charge | Visually inspect the contact pads of the battery | <ul style="list-style-type: none"> If dirty or oxidized – Clean. If damaged – Replace battery. |  |
| | Visually inspect the battery connector | <ul style="list-style-type: none"> If dirty or oxidized – Clean. If damaged – Send to an electrical repair location. |  |
| Battery loses charge quickly/standby time seems short | Before proceeding → NOTE: Some features noticeably reduce the amount of standby time if they are turned on. Some examples are the back light (when on all the | <ul style="list-style-type: none"> Perform a flash upgrade and a setting reset. | |

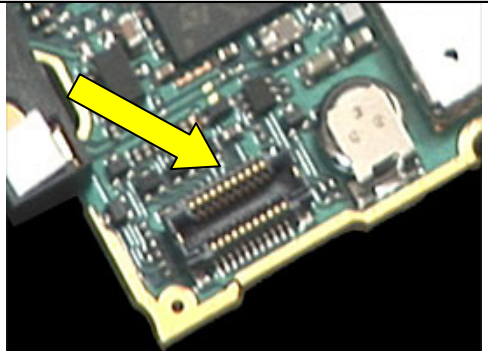
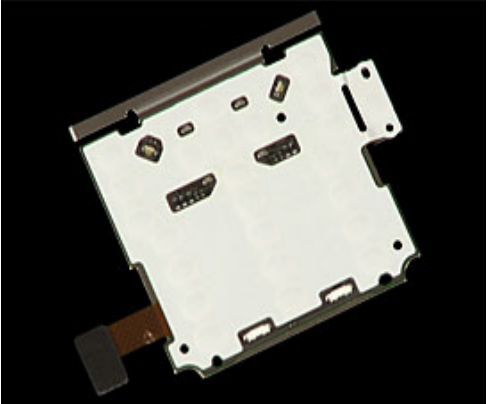
| | | | |
|--|---|--|---|
| | time and), Bluetooth and infrared. | | |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Replace battery. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> • Handle the unit according to local directives. | |



13 Camera Problems

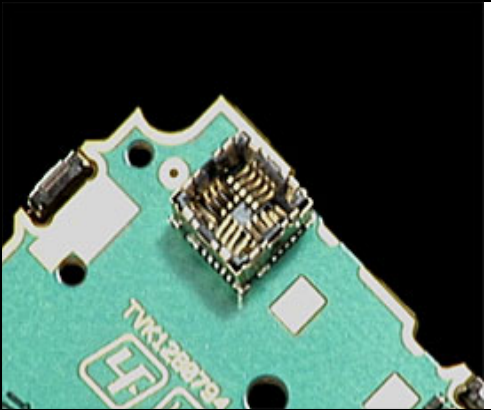

| Problem Area | Items to Check | Repair Action | Reference Image |
|---|---|---|--|
| Camera rear (Mega pixels) Lines, marks, blurred or discolored picture/ Will not enter camera menu | Visually inspect the camera lens | <ul style="list-style-type: none"> If scratched or damaged – Rear cover. |  |
| | Visually inspect whether the camera is properly connected to its socket on the PCB. | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. | |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|--------------------------------------|--|---|
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the camera rear. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |

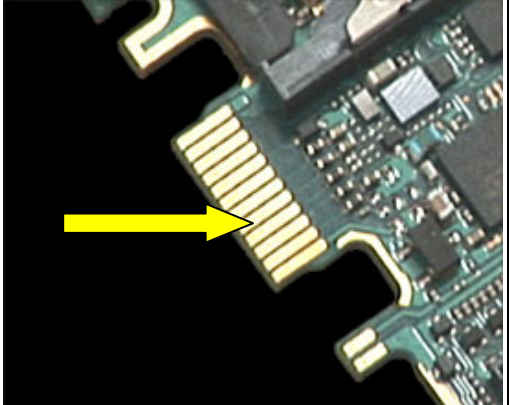
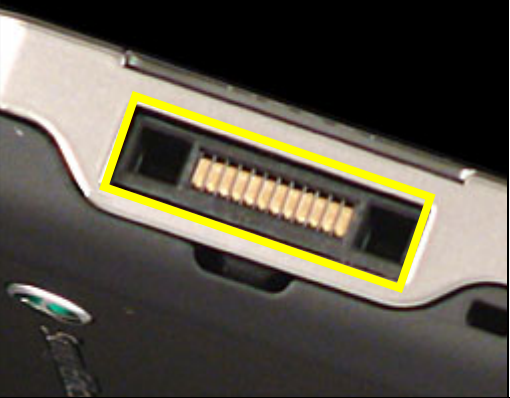
| Problem Area | Items to Check | Repair Action | Reference Image |
|---------------------------|--|--|--|
| Will not capture an image | Visually inspect for debris between and/or damage to the camera key and the key flex module. | <ul style="list-style-type: none"> • If dirty – Clean both parts. • If damaged - Replace the camera key and/or the key flex module as necessary. |   |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---|--|--|
| | Visually inspect whether the key flex module is properly connected to its connector on the PCB. | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the key flex module if it has not already been replaced. |  |

| Problem Area | Items to Check | Repair Action | Reference Image |
|-------------------------------------|--------------------------------------|---|--|
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace camera rear. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |
| Camera front (Video call camera) | Visually inspect the camera lens | <ul style="list-style-type: none"> If dirty – Clean camera lens. If scratched or damaged – Replace the sub assembly case (front). |  |

| Problem Area | Items to Check | Repair Action | Reference Image |
|--------------|---|---|--|
| | Visually inspect whether the camera is properly connected to its socket on the PCB. | <ul style="list-style-type: none"> If improperly connected – Re-establish proper connection. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the camera front. |  |

14 Data Communication Problems

| Problem Area | Items to Check | Repair Action | Reference Image |
|---|--|--|--|
| Will not connect with a functional Bluetooth device | Visually inspect the system connector pads for dirt. | <ul style="list-style-type: none"> If dirty – Clean it. |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Replace the system connector. <p>NOTE: The system connector includes the bluetooth antenna.</p> |  |
| | If the issue has not been resolved → | <ul style="list-style-type: none"> Handle the unit according to local directives. | |

15 Software Problems

- If there are problems with the response of the keypad commands, spelling errors in the menu or the phone hang, if they are not related to mechanical damage, make a master reset and flash the phone with the latest software from EMMA III.
- Checking the software revision can be done in the Service info, see chapter *Service functions in the software*.
Choose: Service info / SW information.
The Software revision and date will be shown in the display.

Note: Do a SW upgrade before sending the unit to a higher level. Do not scrap a phone that hasn't been upgraded.

If the failure still occurs, handle the unit according to the local directives.

16 Revision History

| Rev. | Date | Changes / Comments |
|------|------------|---|
| A | 2007-07-10 | First release |
| 2.1 | 2007-12-18 | Audio TSG Updated for Buzzing During Call |
| 3.1 | 2007-12-19 | Audio TSG Updated for Buzzing During Call |