

Test Instructions

- mechanical -



MT15i, MT15a



CONTENTS

1	Pre-Test Preparations	4
1.1	Hardware.....	4
1.1.1	Water indicator inspection.....	4
1.1.2	Liquid Intrusion indicator inspection.....	4
1.2	Software.....	5
1.2.1	Software update.....	5
2	Tests	6
2.1	Service Test Mode.....	6
2.2	Service Tests.....	7
2.2.1	Keyboard & Switch.....	7
2.2.2	Touch Screen.....	7
2.2.3	Display.....	7
2.2.4	LED/Illumination	8
2.2.5	Speaker.....	8
2.2.6	Earphone	8
2.2.7	Microphone	9
2.2.8	Secondary Microphone	9
2.2.9	Vibrator.....	9
2.2.10	Camera	10
2.2.11	Flash LED.....	10
2.2.12	Bluetooth.....	10
2.2.13	WLAN.....	11
2.2.14	GPS.....	11
2.2.15	Compass	11
2.2.16	Accelerometer.....	12
2.2.17	Ambient Light Sensor	12
2.2.18	Proximity switch	13
2.2.19	Real time clock	13
2.2.20	Total call time.....	13
2.2.21	External Memory.....	14
2.2.22	Security	14
2.2.23	FM radio.....	14
2.2.24	Battery test.....	15
2.2.25	Flip slider counter	15
2.2.26	Verify certificates.....	15
2.2.27	IrDA Test.....	16
2.2.28	HDMI Test.....	16
2.3	Manual Tests	18
2.3.1	SIM	18
2.3.2	On/Off key test	18
2.3.3	Home key test	18
2.3.4	Charging via USB (Charger or Computer).....	19
2.3.5	Chat Camera	19
2.4	Network Test.....	20
2.4.1	On-the-air call to mobile (no UMTS network available).....	20
2.4.2	On-the-air call to mobile (UMTS network available)	20

3 Revision History 21

***For general information about test procedures, refer to
1220-1333: Generic Repair Manual - mechanical***



1 Pre-Test Preparations

1.1 Hardware

1.1.1 Water indicator inspection

Before starting any tests the liquid intrusion indicator has to be checked.


The indicator is located as shown in this picture after the cover battery is removed.



1.1.2 Liquid Intrusion indicator inspection

If affected (red color) - handle the phone according to your local directives.

If not affected by liquid, proceed to the 'Pre-Test Preparation' below.

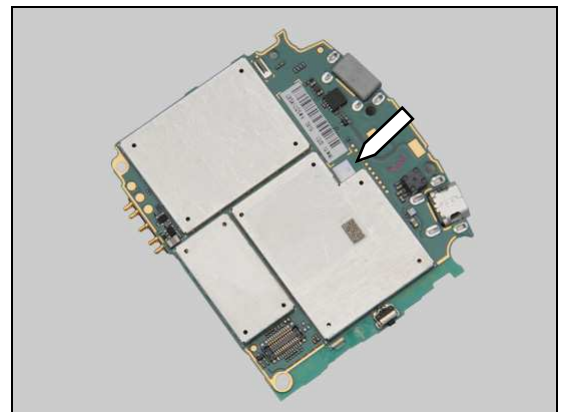



Pre-Test Preparations

1.2 Software

1.2.1 Software update

1.2.1.1 Software version verification

Check the software version of the phone for fault verification, you find latest improvements on the support pages under the support news

<http://www.sonyericsson.com/cws/marketingurlportal?pageid=key.SupportZone.Overview>

- Start up the phone
 - Note: Please make sure the phone is in call setup.
- Pressing keypad combination: *##7378423##*
- select 'Service info'
- select 'Software info'
- check the software file revisions and, if needed, update as described below

For more information, refer to 1220-1333: Generic Repair Manual - mechanical

1.2.1.2 Software version update

Mandatory first repair action!

Use the Micro USB to USB cable for this purpose!

Insert a fully charged battery, ensure the phone is powered off and proceed as follows:

- Open the Emma application and log in.
- Press and keep the Back key down on the phone, connect the phone to the USB cable and then release the Back key.
- Select the appropriate service and follow the on-screen instructions.



2 Tests

2.1 Service Test Mode



Note: Please make sure the phone is in call setup when pressing these touching keypads to get into the Service menu!

Start up the phone and enter the service menus:

- press the keypad combination with the following order:
##7378423##*

- select 'Service tests'
- select one of the tests and follow the test instructions as described below
- to stop the test and return to the 'Service tests' menu, press the Back key

**For more information, refer to
1220-1333: Generic Repair Manual - mechanical**

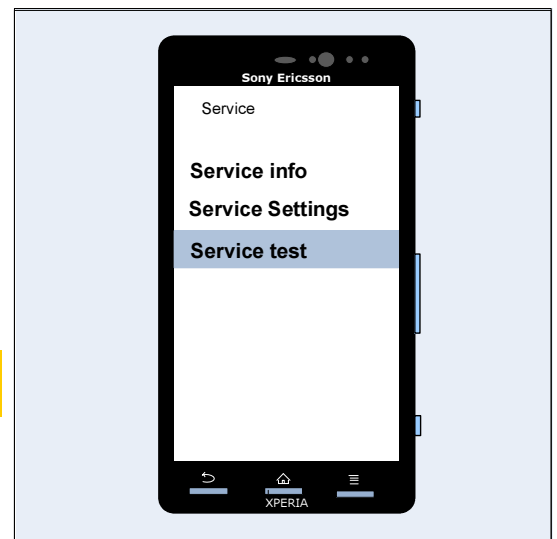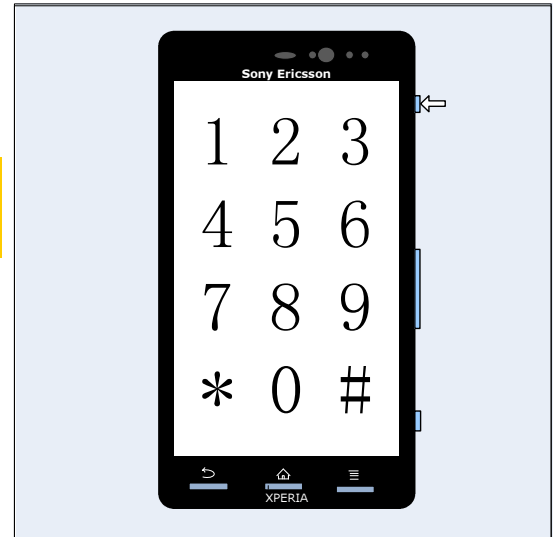

The pictures to follow will show a simplified basic phone for a general visualization of the service tests!



Tests

2.2 Service Tests


2.2.1 Keyboard & Switch

Text Note: The Home Key and On/Off key is not part of the keyboard test, which are in Manual tests.

To return to the Service Test Menu, wait 8 seconds.

Press all keys on the:


- Back key
- Menu key
- Auto Focus key
- Volume up key
- Volume down key

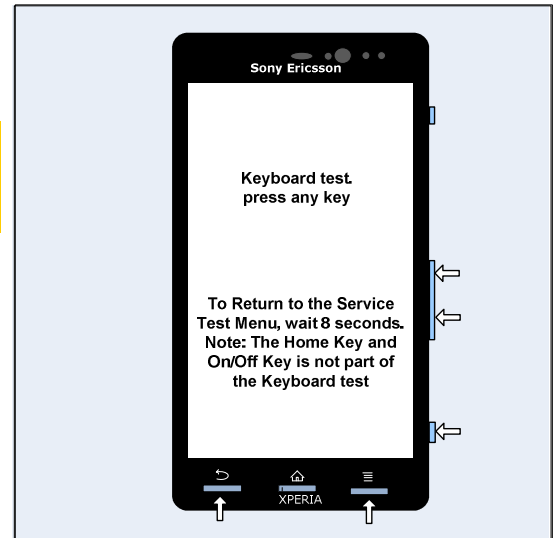

2.2.2 Touch Screen

Move your finger across the Display, a line will be drawn as you touch the Display.

Press Back key to return to Service Test Menu.

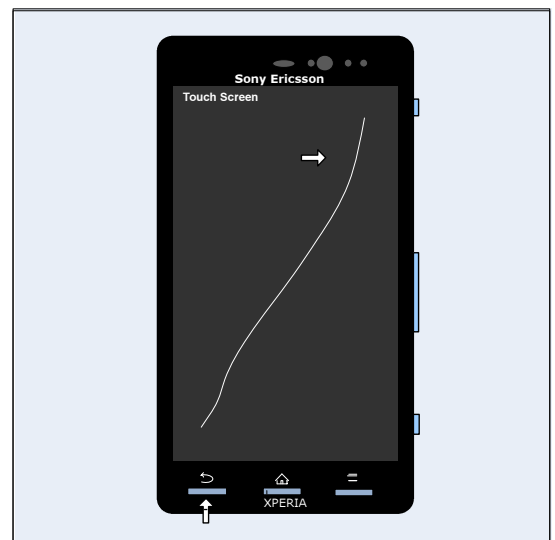

2.2.3 Display

Minor variations in display brightness and color may occur between phones.


There may be tiny bright dots on the display, so called defective pixels and occur when individual dots have malfunctioned and can not be adjusted.

Two defective pixels are considered to be acceptable.

Touch display using finger, the display will show five test patterns of White, Black, Red, Green, Blue colors on full screen.

Make sure that there are no missing segments and that the colors and contrast are OK.

Press Back key to return to Service Test Menu.

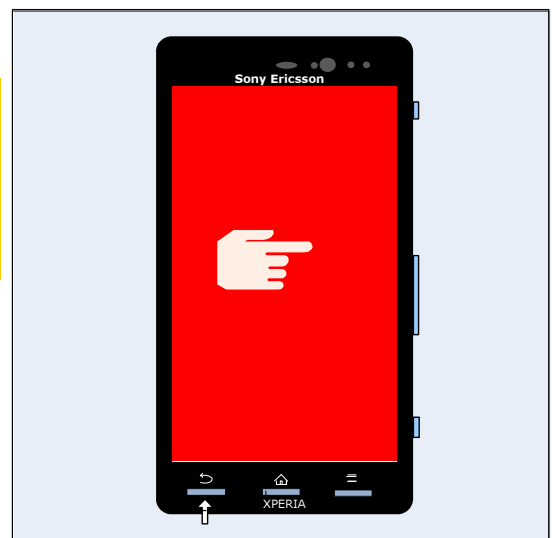



Tests: Service Tests

2.2.4 LED/Illumination

Check that the:

- Display Backlight illumination goes from low to high strength back to low again.
- Notification LED on top right corner is changed, showing four colors in the sequence; Red, Green, Blue, and Off.

Press Back key to return to Service Test Menu.




2.2.5 Speaker

Do not hold the phone close to your ear during this test!

Make sure that the sound from the speaker port on the left-top side of the phone is emitted loud and clear and that the test include maximum volume.

Press Volume up/Volume down key to adjust speaker volume.

Press Back key to return to Service Test Menu.

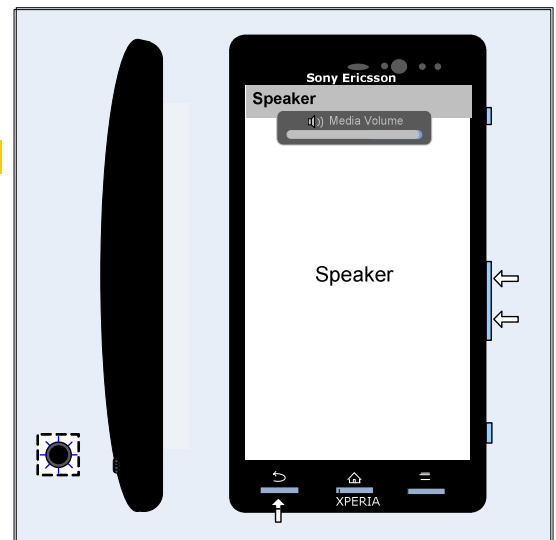


2.2.6 Earphone

Do not hold the phone close to your ear during this test!

Make sure that the sound from the Earphone port on the top of the phone is emitted loud and clear and that the test include maximum volume.

Press Volume up/Volume down key to adjust earphone volume.

Press Back key to return to Service Test Menu.

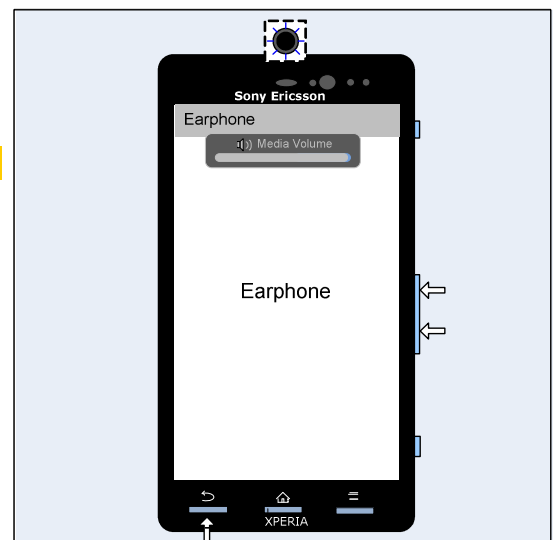

Tests: Service Tests


2.2.7 Microphone

The previous test 'Speaker' should have been successfully carried out before doing this test!

The phone will start to record and after approximately ten seconds the sound is played back through the Speaker. Speak into the microphone during the 'Microphone Recording' phase.

Check the quality by listening to the recording from the Speaker during the 'Playing recorded sound' phase at maximum volume.

Press Back key to return to Service Test Menu.

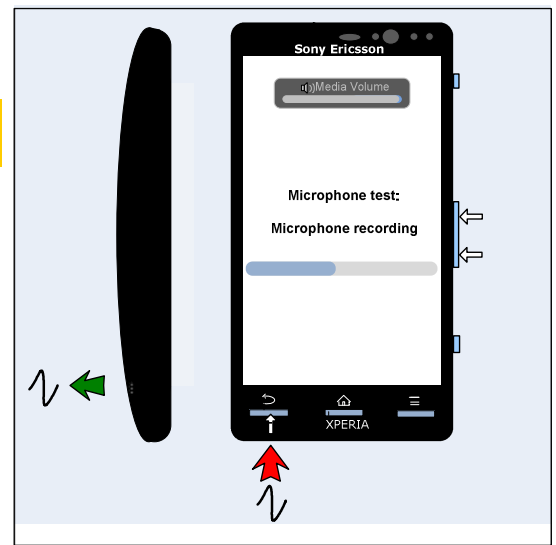


2.2.8 Secondary Microphone

The previous test 'Speaker' should have been successfully carried out before doing this test!

The phone will start to record and after approximately ten seconds the sound is played back through the Speaker. Speak into the microphone during the 'Microphone Recording' phase.

Check the quality by listening to the recording from the Speaker during the 'Playing recorded sound' phase at maximum volume.


Press Back key to return to Service Test Menu.

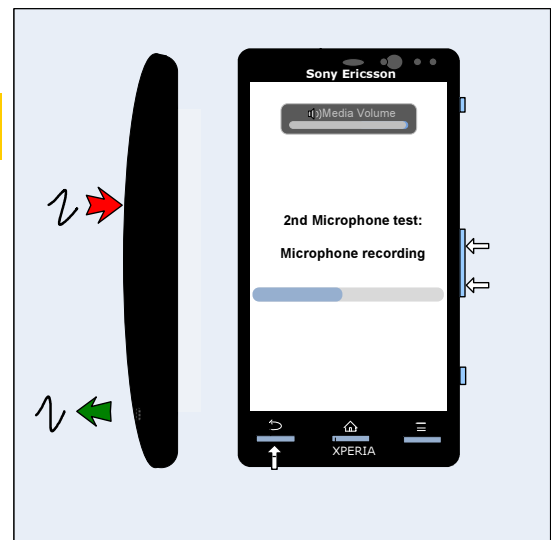

2.2.9 Vibrator

Press the Menu key or Side keys or all play keys to start the vibrator test.

Press Back key to return to Service Test Menu.

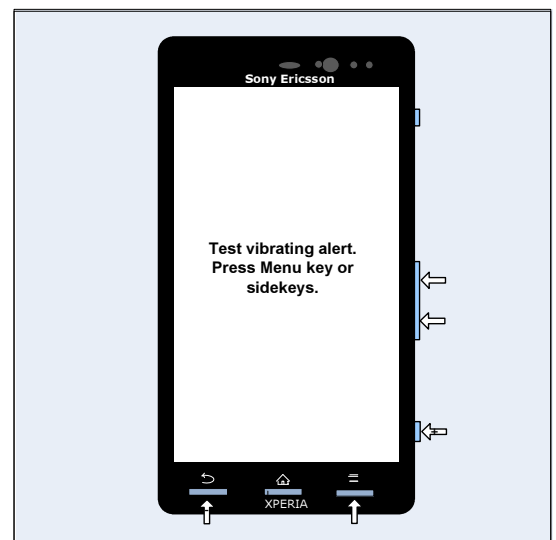

Tests: Service Tests

2.2.10 Camera


Minor variations in image appearance may occur between phones, but is not uncommon and should not be regarded as an indication of a defective camera module!

Aim the camera (located back of the phone) at an object and check the quality of the image shown in the display.

Press the 'R' key to preview the photo's quality about auto focus.

Photos is taken but not saved during this test!


Press Back key to return to Service Test Menu.

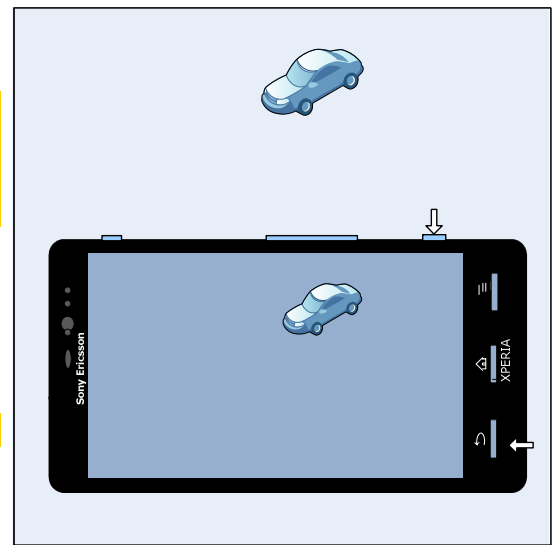

2.2.11 Flash LED

Check the Flash LED at the back side of phone whether it's turned on.

Press Back key to return to Service Test Menu.

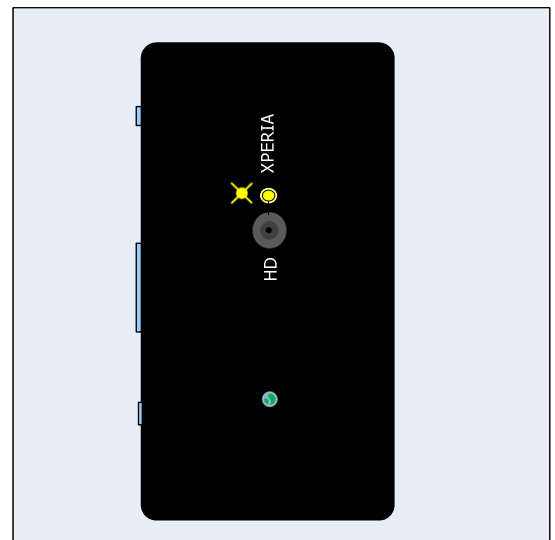

2.2.12 Bluetooth


During this test, the distance between the phone and the target Bluetooth device must be 1.5 to 5 meters!

Make sure the target Bluetooth device is enabled and visible always!

The Bluetooth test will be done in following sequences:

- Step 1: Enable Bluetooth; wait 4-5 seconds, shows OK;
- Step 2: Searching;
- Step 3: Device Found list;
- Step 4: Select the Target Bluetooth Device, and Type PIN code to Pair;
- Step 5: Type the Pairing PIN code on Target Bluetooth Device also, when succeeded, it shows "Test Complete".

Press Back key to return to Service Test Menu.

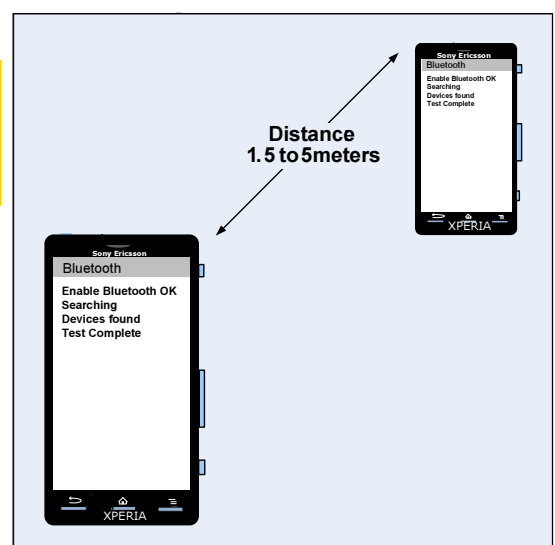

Tests: Service Tests


2.2.13 WLAN

Make sure there's WLAN network before performing this test.

The WLAN test will be done in following sequences:

- Step 1: Enable WLAN; wait 4-5 seconds, shows OK;
- Step 2: Searching;
- Step 3: Access points Found list;
- Step 4: Select the Target WLAN network, and Type Password to get connection;
- Step 5: Enter a web address (ex. google.com)
- Step 6: When Connection succeeded, it shows "Test Complete".

Press Back key to return to Service Test Menu.

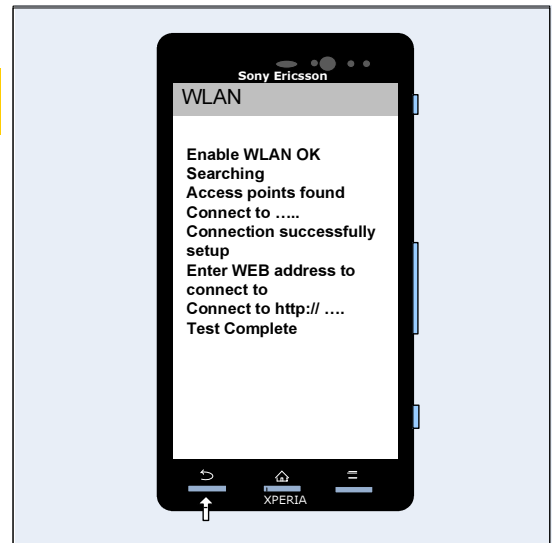

2.2.14 GPS

Enter GPS Location Test, wait some time to get GPS location data.

Press Back key to return to Service Test Menu.

For GPS testing, refer to
1220-1333: Generic Repair Manual - mechanical



2.2.15 Compass

Do calibration with hand movements as shown in the phone, and then check

The actual direction with measured value.

(Yaw:0=North, 90=East, 180=South, 270=West)

Press Back key to return to Service Test Menu.






Tests: Service Tests

2.2.16 Accelerometer

The accelerometer test displays the actual position of the phone as a 3D coordinate X:Y:Z


Press Back key to return to Service Test Menu.

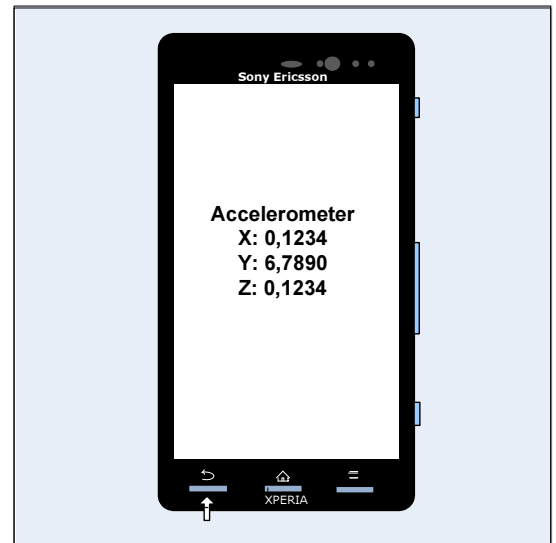

By tilting the phone in various directions, the X: Y: Z values will change in size and polarity depending on angle and direction as shown in the adjacent picture.


Check by tilting the phone that the X: Y: Z values shown in the display are in accordance with the tilting shown in the picture.

Press Back key to return to Service Test Menu.

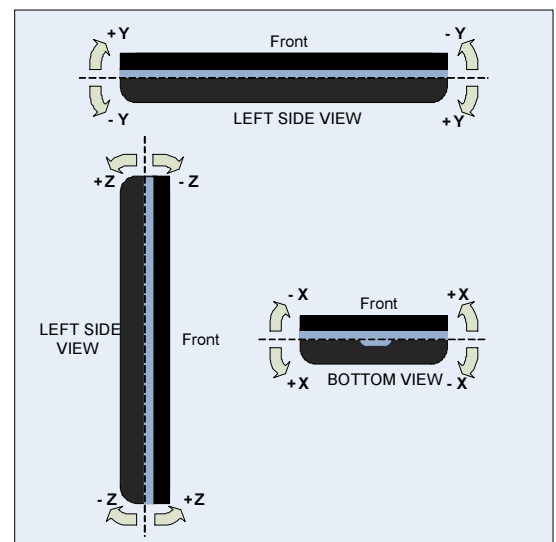

2.2.17 Ambient Light Sensor

The Ambient light test states a value. Look that the value should be higher when the Window get more light and should decrease when the window gets less light.

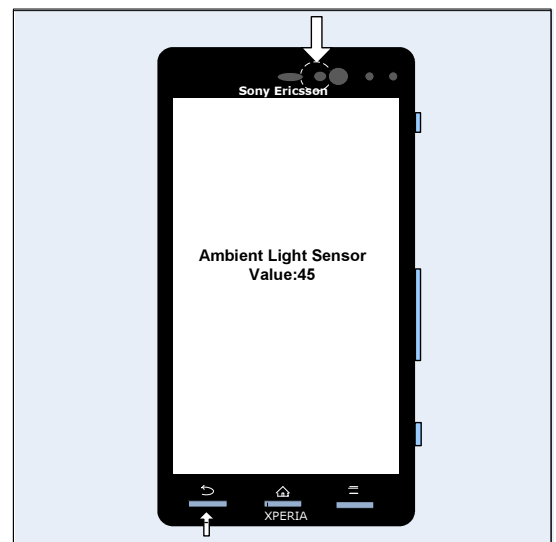



Tests: Service Tests

2.2.18 Proximity switch


The previous test 'Speaker' should have been successfully carried out before doing this test!

Make sure the phone is not in 'silent mode' before performing this test.

When entering into the test, the screen shows "Proximity switch OFF" and a tone is emitted.

Once your finger cover the proximity switch area (on the right side of the receiver), the screen will show "Proximity switch ON" with a different type of tone.


Press Back key to return to Service Test Menu.

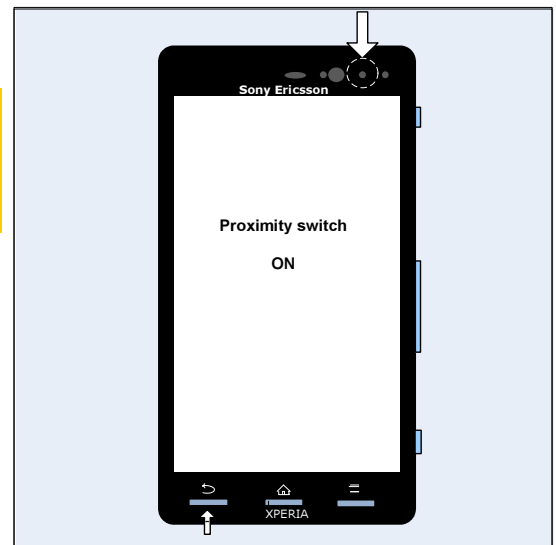

2.2.19 Real time clock

During the actual test the text 'Real time clock test' is displayed, then followed by a message stating whether the test was OK or not.


Press Back key to return to Service Test Menu.

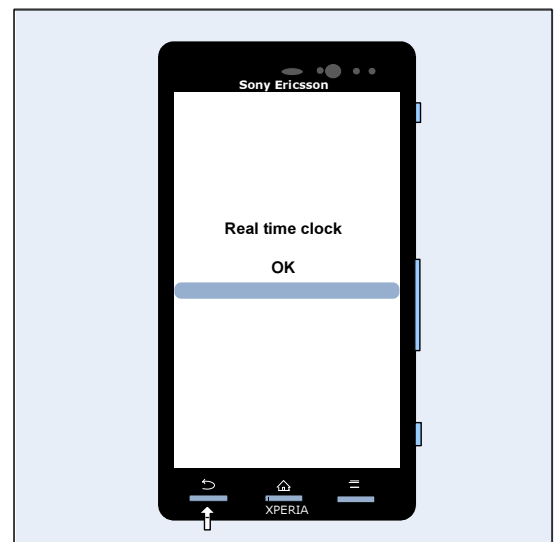

2.2.20 Total call time

The total call time is displayed in the format HH:MM:SS (hours: minutes: seconds).

Press Back key to return to Service Test Menu.

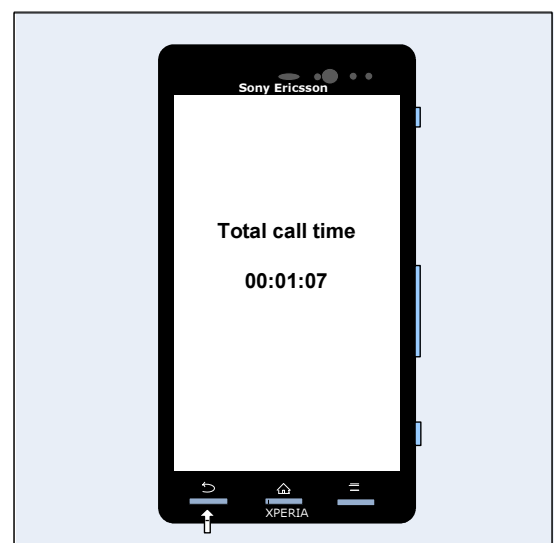


Tests: Service Tests

2.2.21 External Memory

A memory card should be inserted in the phone before the start of this test!

The phone should detect that the memory card is inserted.

Press Back key to return to Service Test Menu.

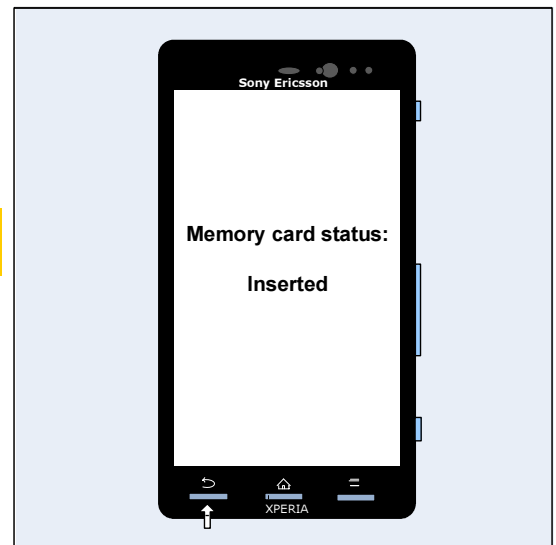

2.2.22 Security

The DRM keys are shown in the display.

There may be some different content showed based on the different market software versions.

Press Back key to return to Service Test Menu.




2.2.23 FM radio

Verify that the phone can detect a radio station:

Connect a headset and then set your local radio station in Hz!

Secure that the reception and sound quality is normal.


Press Back key to return to Service Test Menu.

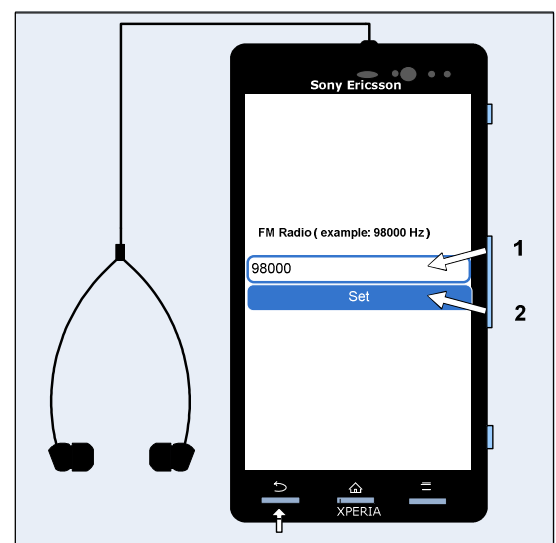

Tests: Service Tests


2.2.24 Battery test

Do not use.

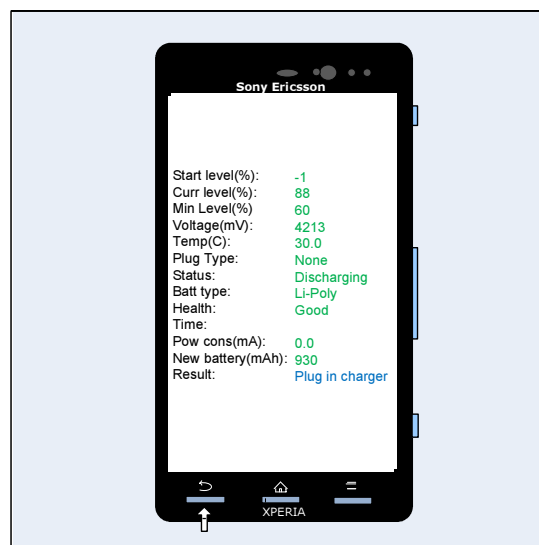


2.2.25 Flip slider counter

N/A

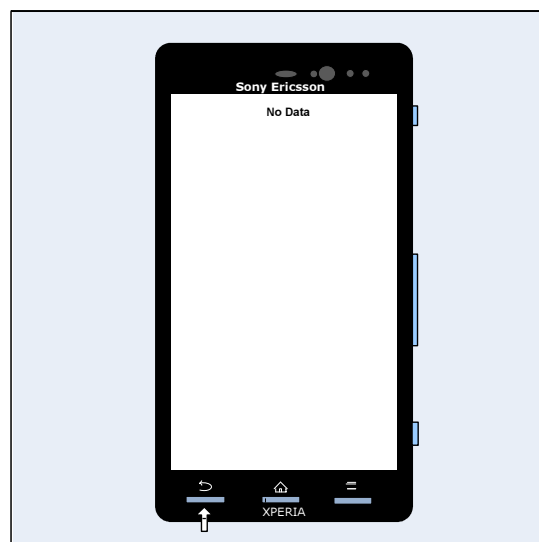

2.2.26 Verify certificates

Press Back key to return to Service Test Menu.

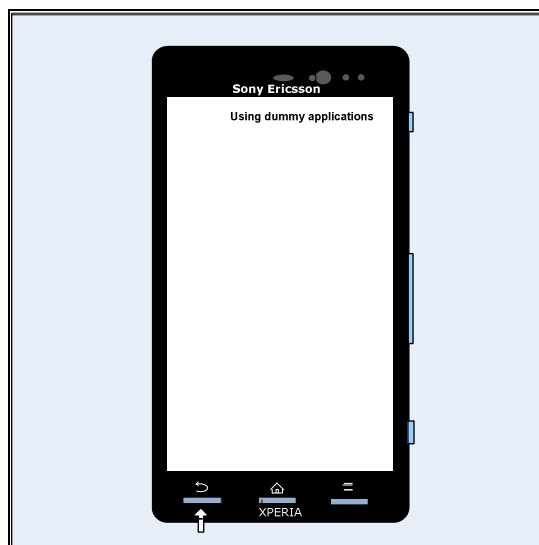

Tests: Service Tests

2.2.27 IrDA Test


N/A



2.2.28 HDMI Test


Press HDMI On.

(HDMI Settings is usually not needed since the unit should be in automatic resolution and the HDMI TV out monitor should set the resolution automatic. If you get no picture on the HDMI TV out monitor you can try different resolutions under HDMI Settings)

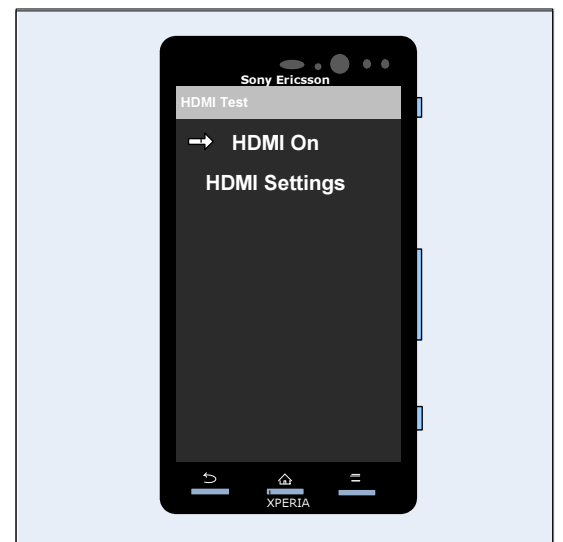

Attach HDMI cable between phone and HDMI TV out.

Press Play Video:

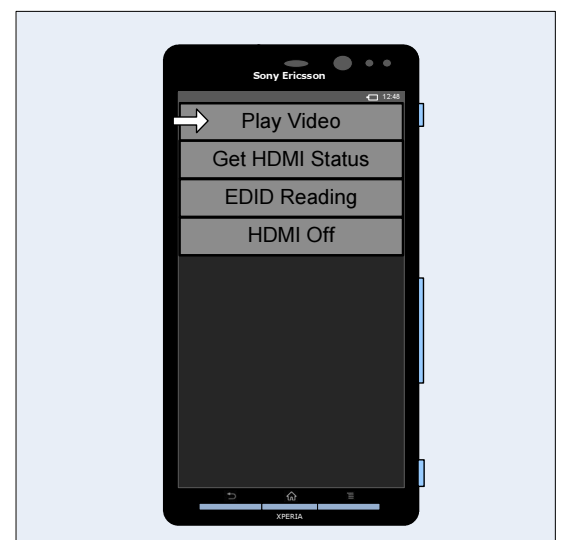




Tests: Service Tests

You will now get a test tone and red-green-blue test picture in the HDMI TV out Monitor and phone.

Note: If the HDMI TV out Monitor doesn't automatically identify the picture, your Monitor may require that you set the HDMI port you have chosen as source manually in the Monitors menus.

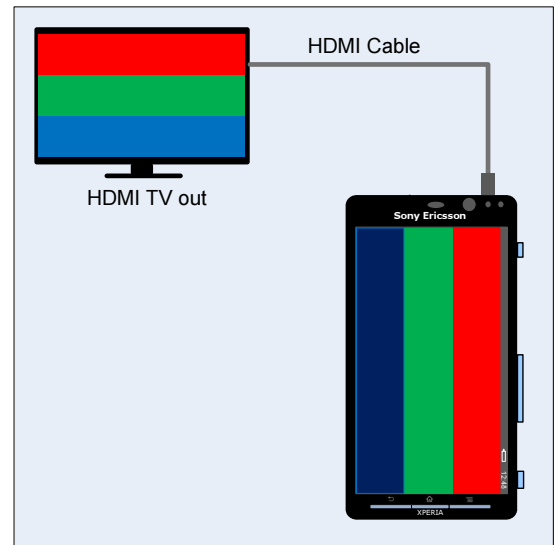

Press Get HDMI Status:

You should now get:

Power Status: Active


HPD Status: H

RSEN Status: H

TDMS Status: On

HDCP Status: On

CEC Status: Idle

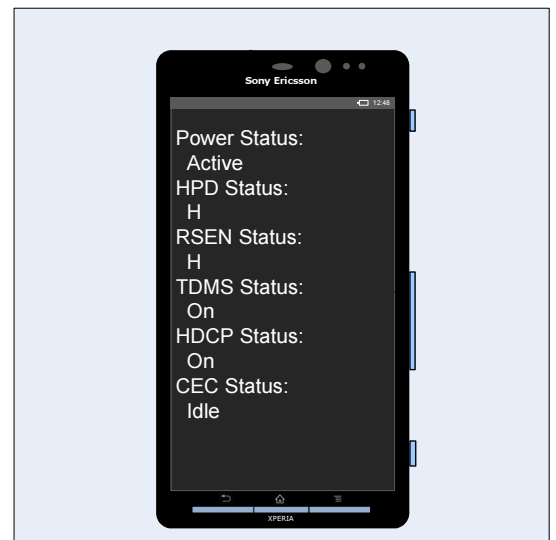



Tests

2.3 Manual Tests

2.3.1 SIM

Verify that the phone can detect a SIM card:

- Insert a SIM card, install a battery and start the phone.
- If the SIM card is detected by the phone, the start-up procedure will continue.
- Pull down the Status Bar (put your finger next to the receiver and drag down the menu from the Status Bar)
- to see SIM card operator name.
- The SIM card operator name will displayed above Time clock when phone is in Lock status.
- If not detected, the message 'No SIM Card in phone' will be displayed above Time clock when phone is in Lock status.



2.3.2 On/Off key test

Press the On/Off key long time to turn phone On or Off.

Press the On/Off key a short time to enter Sleep mode or to wake it up from Sleep mode.



2.3.3 Home key test

Whatever the phone shows now during operation, Press Home key and then phone will go back to the Stand by screen directly.

- When phone is in Sleep mode, Press Home key and the Phone will light up.





Tests: Manual Tests


2.3.4 Charging via USB (Charger or Computer)

Verify that the phone can charge the battery via a USB port:

Ensure that no computer application, such as PC Suite or Emma, is active!

- Insert a battery but do not start the phone
- Connect a USB cable from a computer (or charger) to the system connector. The phone will turn on automatically;
- Verify that the phone is being charged by orange Notification LED and Battery icon;

Remove the USB cable from the system connector and verify that Notification LED and Battery icon no longer

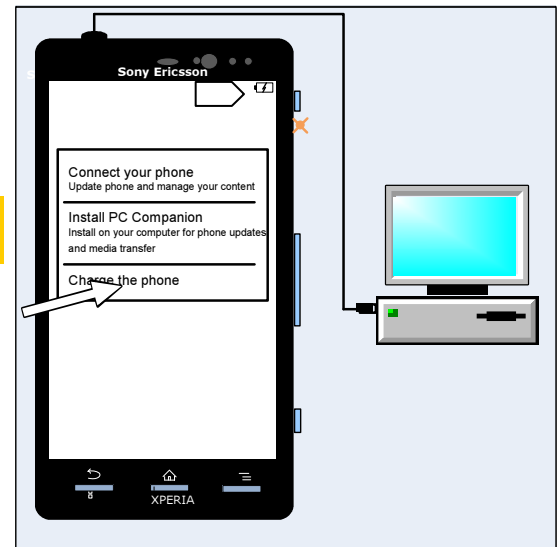


2.3.5 Chat Camera

Minor variations in image appearance may occur between phones, but is not uncommon and should not be regarded as an indication of a defective camera module!

- Press Camera key to enter camera mode
- Press the third icon to change to chat camera

Aim the camera (located in front of the phone) at an object and check the quality of the image shown in the display.

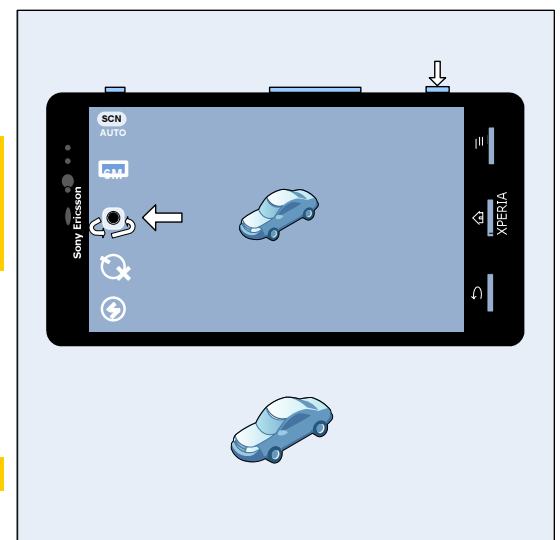

Tests

2.4 Network Test

This test can only be performed if the phone has got an activated SIM/USIM card (no Test SIM/USIM) and an available network signal!

There are two versions of the test depending on whether a UMTS network is available or not!


If a UMTS network is available, the network test has to be done separately for GSM and UMTS!

2.4.1 On-the-air call to mobile (no UMTS network available)

To verify the radio functions (GSM) of the phone, follow the '2.4.1.1 Procedure' below

2.4.1.1 Procedure

1. Set up a call from a landline phone (PSTN).
2. Check that there is a ring signal.
3. Check that the display backlight illuminates.
4. Answer the call and check the sound quality in both phones.
5. Adjust the volume up and down with the side keys and verify that the sound level is altered.
6. End the call and check that the elapsed time is displayed and that the termination is done in a proper way.

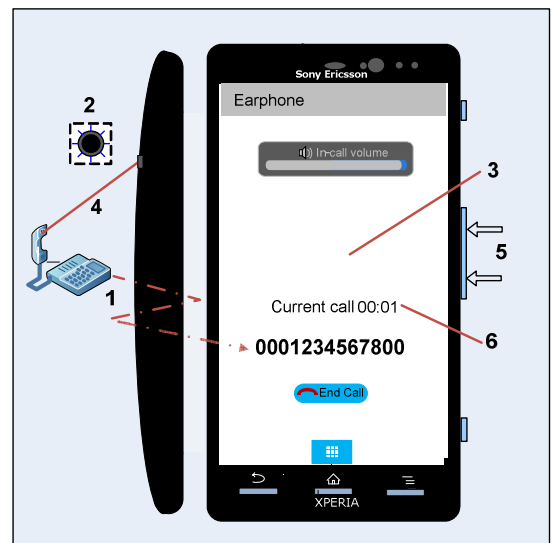

2.4.2 On-the-air call to mobile (UMTS network available)

GSM

Go to the phone menu and set:

Press Menu key → *Settings* ⇒ *Wireless controls* ⇒ *Mobile Networks* ⇒ *Network mode* ⇒ *GSM only*

To verify the radio functions (GSM) of the phone, follow the '2.4.1.1 Procedure' above.

UMTS

Go to the phone menu and set:

Press Menu key → *Settings* ⇒ *Wireless controls* ⇒ *Mobile Networks* ⇒ *Network mode* ⇒ *WCDMA only*

Switch off the phone and then start it up again to enable search for an available UMTS signal.

Ensure that the UMTS/3G icon now is visible at the top of the display.

To verify the radio functions (UMTS) of the phone, follow the '2.4.1.1 Procedure' above.



3 Revision History

Rev.	Date	Changes / Comments
1	2011-Mar-23	Initial release